



Hard disk drive specifications HGST Ultrastar He⁶

3.5 inch Serial ATA hard disk drive Models: HUS726060ALA640 HUS726060ALA641

Revision 1.2 4 April 2014

1

The following paragraph does not apply to the United Kingdom or any country where such provisions are inconsistent with local law: HGST a Western Digital company PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer or express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. HGST may make improvements or changes in any products or programs described in this publication at any time.

It is possible that this publication may contain reference to, or information about, HGST products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that HGST intends to announce such HGST products, programming, or services in your country.

Technical information about this product is available by contacting your local HGST representative or on the Internet at www.hgst.com/support,

HGST may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not give you any license to these patents.

© 2014 HGST, Inc. All rights reserved.

HGST, a Western Digital company 3403 Yerba Buena Road San Jose, CA 95135 Produced in the United States

04/14

UltrastarTM is a trademark of HGST, Inc. and its affiliates in the United States and/or other countries.

HGST trademarks are authorized for use in countries and jurisdictions in which HGST has the right to use, market and advertise the brands.

Other product names are trademarks or registered trademarks of their respective owners.

One GB is equal to one billion bytes and one TB equals 1,000 GB (one trillion bytes) when referring to hard drive capacity. Accessible capacity will vary from the stated capacity due to formatting and partitioning of the hard drive, the computer's operating system, and other factors.

References in this publication to HGST products, programs or services do not imply that HGST intends to make these available in all countries in which HGST operates.

Product information is provided for information purposes only and does not constitute a warranty.

Information is true as of the date of publication and is subject to change. Actual results may vary. This publication is for general guidance only. Photographs may show design models.

4 April 2014

Table of contents

1	Genera	al	
	1.1	Introduction	14
	1.2	Glossary	14
	1.3	General caution	14
	1.4	References	14
2		al features	
Par	rt 1. Fu	nctional specification	16
3	Fixed of	disk subsystem description	
	3.1	Control Electronics	
	3.2	Head disk assembly	
		Actuator	
4		characteristics	
		Default logical drive parameters	
		Data sheet	
	4.3	World Wide Name Assignment	19
	4.4	Drive organization	
	4.4.		20
	4.4.2		
	4.5	Performance characteristics.	
	4.5.	1 Command overhead (SATA)	20
	4.5.2	2 Mechanical positioning	21
	4.5.	3 Drive ready time	21
	4.5.4		
5		flagging strategy	
6	•	cation	
		Electrical interface	
	6.1.		
	6.1.	8	
	6.1.	8 8	
		Environment	
	6.2.	1	
	6.2.2		
	6.2.	<u>.</u>	
		DC power requirements	
	6.3.	r	
	6.3.2		
	6.3.3		
		Reliability	
	6.4.		
	6.4.2		
	6.4.3		32
	6.4.4	1 0	
	6.4.		
	6.4.0		
		Mechanical specifications	
	6.5.	·	
	6.5.2		
	6.5.	8	
	6.5.4		
		Vibration and shock	
	6.6.	1 0	
	6.6.2	Nonoperating vibration	37

	6.6.	1 0	
	6.6.	Nonoperating shock	
	6.6.	Nonoperating Rotational shock	
	6.7	Acoustics	3c
	6.8	Identification labels	3¢
	6.9	Safety	40
	6.9.	·	
	6.9.	· ·	
	6.9.		
	6.9.	· · · · · · · · · · · · · · · · · · ·	
	6.9.	e	
	6.9.	-	
		Electromagnetic compatibility	
	6.10		
	6.10		
	6.10		
	6.10		
Par		sterface Specification	
1 a1 7		ral	
•	7.1	Introduction	
	$7.1 \\ 7.2$	Terminology	
	7.3	Deviations From Standard	
8		sters	
0	8.1	Alternate Status Register	
	8.2	Command register	
	8.3	Cylinder High Register	
	8.4	Cylinder Low Register	
	8.5	Device Control Register	
	8.6	Device/Head Register	
	8.7		
		Error Register	
	8.8	Features Register	
	8.9	Sector Count Register	
	8.10	Sector Number Register	
^	8.11	Status Register	
9		ral Operation Descriptions	
	9.1	Reset Response	
	9.1.		
	9.2	Diagnostic and Reset considerations	
	9.3	Sector Addressing Mode	
	9.3.	8	
	9.3.	8	
	9.4	Power Management Feature	
	9.4.		
	9.4.	8	
	9.4.		
	9.4.	1 0	
	9.5	SMART Function	
	9.5.		
	9.5.1		
	9.5.		
	9.5.	Threshold exceeded condition	
	9.5.	5.5 SMART commands	54
	9.5.	6.6 Off-line Read Scanning	54
	9.5.	5.7 Error Log	54
	9.5	8	55

	9.6 Se	curity Mode Feature Set	56
	9.6.1	Security mode	56
	9.6.2	Security Level	56
	9.6.3	Password	56
	9.6.4	Operation example	57
	9.6.5	Command Table	60
	9.7 Ho	st Protected Area Feature	63
	9.7.1	Example for operation (In LBA mode)	63
	9.7.2	Security extensions.	
	9.8 Wr	rite Cache Function	65
	9.9 Re	assign Function	65
	9.9.1	Auto Reassign Function	65
	9.10 Po	wer-up in Standby feature set	
		vanced Power Management feature set (APM)	
	9.12 48	-bit Address Feature Set	66
		reaming feature Set	
	9.13.1	Streaming commands	
	9.13.2	Streaming Logs	
	9.14 SA	TA BIST (Built-in Self Test)	
		TA Interface Power Management	
		ftware Setting Preservation	
	9.16.1	COMRESET Preservation Requirements	
	9.17 Se	rial ATA Revision 3.0 Optional Features.	
	9.17.1	Asynchronous Signal Recovery	
	9.17.2	Device Power Connector Pin 11 Definition	
	9.17.3	Phy Event Counters	
	9.17.4	NCQ Queue Management (63h)	
		T Command Transport feature Set	
	9.18.1	Overview	
	9.18.2	SCT Command Protocol	
	9.18.3	SCT Command Set	
	9.19 Ex	tended Power Conditions (EPC) feature	
	9.19.1	Power conditions	
	9.19.2	Power condition timers	
	9.19.3	Interaction with resets, commands and other features	
	9.20 Sa	nitize Device feature set	
	9.20.1	Overview	100
	9.20.2	Sanitize Device Feature	101
	9.20.3	Sanitize Device state machine	
10	Comma	and Protocol	
	10.1 PI	O Data In commands	104
		O Data Out commands	
	10.3 No	n-Data commands	105
	10.4 DN	MA Data In commands and DMA Data Out commands	106
	10.5 Fi	rst-party DMA commands	106
11		Descriptions	
	11.1 Ch	eck Power Mode (E5h/98h)	112
	11.2 Co	nfigure Stream (51h)	113
	11.3 De	vice Configuration Overlay (B1h)	115
	11.3.1	Device Configuration Restore (Subcommand C0h)	
	11.3.2	Device Configuration Freeze Lock (Subcommand C1h)	115
	11.3.3	Device Configuration Identify (Subcommand C2h)	115
	11.3.4	Device Configuration Set (Subcommand C3h)	
	11.4 Do	wnload Microcode (92h)	119
	11 / 1	Overview	110

11.4.2		
11.4.3	Download and save microcode with offsets	120
11.4.4	Download and save microcode with offsets for future use	120
11.4.5	Activate downloaded microcode	120
11.4.6	Error Outputs	120
11.5 D	ownload Microcode DMA (93h)	121
11.5.1	Overview	122
11.5.2	Sector Count / Sector Number	122
11.5.3	Download and save microcode with offsets	122
11.5.4	Download and save microcode with offsets for future use	122
11.5.5	Activate downloaded microcode	122
11.5.6	Error Outputs	122
11.6 E	xecute Device Diagnostic (90h)	123
	lush Cache (E7h)	
11.8 F	lush Cache Ext (EAh)	125
11.9 F	ormat Track (50h)	126
11.10	Format Unit (F7h)	127
11.11	Identify Device (ECh)	
11.12	Idle (E3h/97h)	139
11.13	Idle Immediate (E1h/95h)	140
11.14	Initialize Device Parameters (91h)	141
11.15	NCQ Queue Management (63h)	142
11.15.	1 Abort NCQ Queue Subcommand (0h)	143
11.15.	2 Deadline handling Subcommand (1h)	145
11.16	Read Buffer (E4h)	
11.17	Read Buffer DMA (E9h)	148
11.18	Read DMA(C8h/C9h)	149
11.19	Read DMA Ext (25h)	151
11.20	Read FPDMA Queued (60h)	153
11.21	Read Log Ext (2Fh)	155
11.21.	1 General Purpose Log Directory	157
11.21.	2 Extended Comprehensive SMART Error log	158
11.21.	e e e e e e e e e e e e e e e e e e e	
11.21.	4 Extended Self-test log sector	167
11.21.	5 Power Conditions log	168
11.21.	6 Command Error	171
11.21.	8	
11.21.	e	
11.21.	v	
11.22	Read Log DMA Ext(47h)	
11.23	Read Multiple (C4h)	
11.24	Read Multiple Ext (29h)	
11.25	Read Native Max Address (F8h)	
11.26	Read Native Max Address Ext (27h)	
11.27	Read Sector(s) (20h/21h)	
11.28	Read Sector(s) Ext (24h)	
11.29	Read Stream DMA Ext(2Ah)	
11.30	Read Stream Ext (2Bh)	193
11.31	Read Verify Sector(s) (40h/41h)	
11.32	Read Verify Sector(s) Ext (42h)	
11.33	Recalibrate (1xh)	
11.34	Request Sense Data Ext (0Bh)	
11.35		201
11.35.	Crypto Scramble Ext Command (feature: 0011h) (data encryption model only)	201

11.35.	.2 Overwrite Ext Command (feature: 0014h)	203			
11.35.					
11.35.	.4 Sanitize Status Ext Command (feature: 0000h)	207			
11.36	Security Disable Password (F6h)	209			
11.37	Security Erase Prepare (F3h)	210			
11.38	Security Erase Unit (F4h)	211			
11.39	Security Freeze Lock (F5h)				
11.40	Security Set Password (F1h)	214			
11.41	Security Unlock (F2h)				
11.42	Seek (7xh)				
11.43	Sense Condition (F0h: Vendor specific)				
11.44	Set Features (EFh)				
11.44.					
11.44.					
11.44.					
11.44.					
11.44.					
11.44.					
11.45	Set Max Address (F9h)				
11.45.		231			
11.45.					
11.45.					
11.45. $11.45.$					
11.46	Set Max Address Ext (37h)				
11.47	Set Multiple (C6h)				
11.48	Sleep (E6h/99h)				
11.49	SMART Function Set (B0h)				
11.49.					
11.49.					
11.49.					
11.49.					
11.49. 11.49.	· · · · · · · · · · · · · · · · · · ·				
11.49.					
11.49.	Standby (E2h/96h)				
		254			
11.51	Standby Immediate (E0h/94h)				
11.52	Write Buffer (E8h)				
11.53	Write Buffer DMA (EBh)				
11.54	Write DMA (CAh/CBh)				
11.55	Write DMA FUA Ext (3Dh)				
11.56	Write DMA Ext (35h)				
11.57	Write FPDMA Queued (61h)				
11.58	Write Log Ext (3Fh)				
11.59	Write Log DMA Ext (57h)				
11.60	Write Multiple (C5h)				
11.61	Write Multiple Ext (39h)				
11.62	Write Multiple FUA Ext (CEh)				
11.63	Write Sector(s) (30h/31h)				
11.64	Write Sector(s) Ext (34h)				
11.65	Write Stream DMA Ext (3Ah)				
11.66	Write Stream Ext (3Bh)				
11.67	Write Uncorrectable Ext (45h)	279			

List of tables

Table 1	Type and Model#	
Table 2	Formatted capacity	
Table 3	Mechanical positioning performance (Sector format of 512k bytes/sector)	19
Table 4	World Wide Name Assignment	
Table 5	Command overhead	20
Table 6	Average seek time	21
Table 7	Single Track Seek Time	
Table 8	Latency Time	
Table 9	Drive ready time	
Table 10	Mode transition times	22
Table 11	Interface connector pins and I/O signals	25
Table 12	Parameter descriptions	
Table 13	Temperature and humidity	27
Table 14	Input voltage	29
Table 15	SATA power consumption	30
Table 16	Power supply generated ripple at drive power connector	31
Table 17	Physical Dimensions	
Table 18	Random vibration PSD profile break points (operating)	36
Table 19	Random vibration (Rotational) PSD profile break points	36
Table 20	Random vibration PSD profile break points (nonoperating)	37
Table 21	Sinusoidal shock wave	38
Table 22	Rotational Shock	38
Table 23	Sound power levels	39
Table 24	Alternate Status Register	44
Table 25	Device Control Register	45
Table 26	Device/Head Register	46
Table 27	Error Register	47
Table 28	Status Register	48
Table 29	Reset Response	49
Table 30	Default Register Values	
Table 31	Diagnostic Codes	
Table 32	Power conditions	
Table 33	Command table for device lock operation -1	
Table 34	Command table for device lock operation -2	
Table 35	Command table for device lock operation -3	
Table 36	•	
Table 37	READ LOG EXT Log Page 11h data structure definition	
Table 38	NCQ Queue Management – Command definition	
Table 39	Subcommand Field	
Table 40	NCQ Queue Management Log (12h) data structure definition	
Table 41	SCT Log Page and direction	
Table 42	Identify Device Information Word 206	
Table 43	Output Registers of SCT Command Using SMART	
Table 44	Input Registers of SCT Command Using SMART	
Table 45	Input Registers of SCT Command Using Write Log Ext	
Table 46	Output Registers of SCT Command Using Write Log Ext	
Table 47	Key Sector Format	
Table 48	SCT Action Code List	
Table 49	Extended Status Code	
Table 50	Input Registers of SCT Data Transfer Using SMART	
Table 51	Input Registers of SCT Data Transfer using Read/Write Log Ext	
- unit 01	TILD STORES TO SECOND OF SOLE THOSE TENTION STORES TROUBLE THE THOU THE TABLES THE SECOND STORES THE S	

Table 52	Input Registers of SCT Status Request Using SMART	87
Table 53	Input Registers of SCT Status Request Using Read Log Ext	87
Table 54	Data Format of SCT Status Response -1	88
Table 55	Data Format of SCT Status Response -2	89
Table 56	SCT Write Same (Inputs)	90
Table 57	SCT Write Same (Outputs)	90
Table 58	Error Recovery Control command (Inputs)	92
Table 59	Error Recovery Control command (On puts)	92
Table 60	Feature Control command (Inputs)	
Table 61	Feature Control command (Outputs)	93
Table 62	Feature Code List	
Table 63	SCT Data Table command (Inputs)	95
Table 64	SCT Data Table command (Outputs)	
Table 65	Table ID	
Table 66	Data Format of HDA Absolute Temperature History Table -1	96
Table 67	Data Format of HDA Absolute Temperature History Table -2	
Table 68	Extended Power Conditions Subcommands	
Table 69	Power Condition IDs	
Table 70	Command Set	
Table 71	Command Set -Continued-	
Table 72	Command Set (Subcommand)	110
Table 73	Check Power Mode Command (E5h/98h)	112
Table 74	Configure Stream Command (51h)	
Table 75	Device Configuration Overlay Command (B1h)	
Table 76	Device Configuration Overlay Features register values	
Table 77	Device Configuration Overlay Data structure	
Table 78	Device Configuration Overlay Data structure - Continued	
Table 79	DCO error information definition.	
Table 80	Download Microcode Command (92h)	119
Table 81	Download Microcode DMA Command (93h)	
Table 82	Execute Device Diagnostic Command (90h)	123
Table 83	Flush Cache Command (E7h)	
Table 84	Flush Cache Ext Command (EAh)	125
Table 85	Format Track Command (50h)	126
Table 86	Format Unit Command (F7h)	127
Table 87	Identify Device Command (ECh)	128
Table 88	Identify device information	129
Table 89	Identify device information -Continued	130
Table 90	Identify device information - Continued	131
Table 91	Identify device information - Continued	132
Table 92	Identify device information - Continued	133
Table 93	Identify device information - Continued	134
Table 94	Identify device information - Continued	135
Table 95	Identify device information - Continued	136
Table 96	Identify device information - Continued	
Table 97	Identify device information - Continued	138
Table 98	Idle Command (E3h/97h)	
Table 99	Idle Immediate Command (E1h/95h)	
Table 100	Initialize Device Parameters Command (91h)	141
Table 101	NCQ Queue Management command (63h)	
Table 102	Abort NCQ Queue Subcommand (0h)	143
Table 103	Abort Type Field	
Table 104	Deadline handling Subcommand (1h)	
Table 105	Road Buffor Command (E4h)	1.47

Table 106	Read Buffer DMA Command (E9h)	
Table 107	Read DMA Command (C8h/C9h)	149
Table 108	Read DMA Ext Command (25h)	151
Table 109	Read FPDMA Queued Command (60h)	153
Table 110	Read Log Ext Command (2Fh)	155
Table 111	Log Address Definition	156
Table 112	General Purpose Log Directory	157
Table 113	Extended Comprehensive SMART Error Log	158
Table 114	Extended Error log data structure	
Table 115	Command data structure	
Table 116	Error data structure	159
Table 117	Defined Device Statistics log pages	
Table 118	List of supported Device Statistics log pages	
Table 119	General Statistics	
Table 120	Rotating Media Statistics	
Table 121	General Error Statistics	
Table 122	Temperature Statistics (part 1 of 2)	
Table 123	Temperature Statistics (part 2 of 2)	
Table 124	Transport Statistics	
Table 125	Extended Self-test log data structure	
Table 126	Extended Self-test log descriptor entry	
Table 127	Command Error information	
Table 128	Read Stream Error Log	
Table 129	Stream Error Log entry	
Table 130	Write Stream Error Log.	
Table 131	Identify Device Data Log.	175
Table 132	List of supported IDENTIFY DEVICE data pages	175
Table 133	Capacity log page	176
Table 134	Supported Capabilities log page	177
Table 135	Supported Capabilities log page – Continued	178
Table 136	Current Settings log page	179
Table 137	Current Settings log page –Continued –	180
Table 138	Strings log page	180
Table 139	Security log page	181
Table 140	Serial ATA log page	182
Table 141	Read Log DMA Ext Command (47h)	183
Table 142	Read Multiple Commands (C4h)	
Table 143	Read Multiple Ext Command (29h)	
Table 144	Read Native Max ADDRESS (F8h)	
Table 145	Read Native Max Address Ext (27h)	
Table 146	Read Sector(s) Command (20h/21h)	
Table 147	Read Sector(s) Ext Command (24h)	
Table 148	Read Stream DMA Ext Command (2Ah)	190
Table 149	Read Stream Ext Command (2Bh)	
Table 150	Read Verify Sector(s) Command (40h/41h)	
Table 151	Read Verify Sector(s) Ext Command (42h)	
Table 152	Recalibrate Command (1xh)	198
Table 153	Request Sense Data Ext command (0Bh)	
Table 154	Crypto Scramble Ext Command (B4h/0011h) (data encryption model only)	
Table 155	Overwrite Ext Command (B4h/0014h)	
Table 156	Sanitize Freeze Lock Ext Command (B4h/0020h)	
Table 157	Sanitize Status Ext Command (B4h/0000h)	
Table 158	Security Disable Password Command (F6h)	
Table 159	Password Information for Security Disable Password command	209

Table 160	Security Erase Prepare Command (F3h)	210
Table 161	Security Erase Unit Command (F4h)	211
Table 162	Erase Unit Information	211
Table 163	Security Freeze Lock Command (F5h)	213
Table 164	Security Set Password Command (F1h)	214
Table 165	Security Set Password Information	214
Table 166	Security Unlock Command (F2h)	
Table 167	Security Unlock Information.	
Table 168	Seek Command (7xh)	
Table 169	Sense Condition command(F0h)	
Table 170	Set Features Command (EFh)	
Table 171	Restore Power Condition Settings subcommand	
Table 172	Go To Power Condition subcommand	
Table 173	Set Power Condition Timer subcommand	
Table 174	Set Power Condition State subcommand	
Table 175	Enable the EPC feature subcommand	
Table 176	Disable the EPC feature subcommand	
Table 177	Set Max ADDRESS (F9h)	
Table 177	Set Max set Password	
Table 179	Set Max Set Password data contents	
Table 180	Set Max Lock	
Table 181	Set Max Unlock (F9h)	
Table 181	Set Max Freeze Lock (F9h)	
Table 182	Set Max Address Ext Command (37h)	
Table 184	Set Multiple Commands (C6h)	
Table 185	Sleep Command (E6h/99h)	
Table 186	SMART Function Set Command (B0h)	
Table 180	Log sector addresses	
Table 187	Device Attribute Data Structure.	
Table 189	Individual Attribute Data Structure	
Table 199	Device Attribute Thresholds Data Structure	
Table 190	Individual Threshold Data Structure	
Table 191	SMART Log Directory	
Table 193	SMART summary error log sector	
Table 194	Error log data structure	
Table 195		250
Table 196		250
Table 197	Self-test log data structure.	
Table 198	Selective self-test log data structure	
Table 199	Selective self-test feature flags	
Table 200	SMART Error Codes	
Table 201	Standby Command (E2h/96h)	254
Table 202	Standby Immediate Command (E0h/94h)	
Table 203	Write Buffer Command (E8h)	
Table 204	Write Buffer DMA Command (EBh)	
Table 205	Write DMA Command (CAh/CBh)	
Table 206	Write DMA FUA Ext Command (3Dh)	
Table 207	Write DMA Ext Command (35h)	
Table 208	Write FPDMA Queued Command (61h)	
Table 209	Write Log Ext Command (3Fh)	
Table 210	Write Log DMA Ext Command (57h)	
Table 211	1	267
Table 212	<u>.</u>	268
Table 213	Write Multiple FUA Ext Command (CEh)	270

Table 214	Write Sector(s) Command (30h/31h)	272
Table 215	Write Sector(s) Ext Command (34h)	273
Table 216	Write Stream DMA Ext Command (3Ah)	274
	Write Stream Ext Command (3Bh)	
	Write Uncorrectable Ext Command (45h)	

List of figures

Figure 1	PList physical format	23
Figure 2	Connector location.	24
Figure 3	The timing of COMRESET, COMINIT and COMWAKE	
_	Limits of temperature and altitude	
Figure 5	Limits of temperature and humidity	28
_	Top and side views and mechanical dimensions	
Figure 7	Bottom and side views with mounting hole locations	
_	Connector locations	
Figure 9	Initial Setting	57
_	Usual Operation	
_	Password Lost	
_	Sanitize Device state machines	

1 General

1.1 Introduction

This document describes the specifications of the Ultrastar He⁶ an HGST Japan 3.5-inch 7200-rpm serial ATA interface hard disk drive with the following model numbers:

Capacity	Туре	Interface	Model#	Description
6TB	DH7SAH600	Serial ATA	HUS726060ALA640	Secure Erase (Overwrite Only)
OIB	DH73AH600	Selial ATA	HUS726060ALA641	BDE Encryption (w/ Secure Erase)

Table 1 Type and Model#

1.2 Glossary

ESD Electrostatic Discharge
Kbpi 1,000 bits per inch
Ktpi 1,000 tracks per inch

Gbps 1,000,000,000 bits per second
Mbps 1,000,000 bits per second
MB/s 1,000,000 bytes per second

TB 1,000,000,000,000 bytes (for Drive Capacity)
GB 1,000,000,000 bytes(for Drive Capacity)
MB 1,048,576 bytes (for Memory Size)
KB 1,024 bytes (for Memory Size)

S.M.A.R.T. Self-Monitoring Analysis and Reporting Technology

DFT Drive Fitness Test

ADM Automatic Drive Maintenance

1.3 General caution

 
The drive can be damaged by shock or ESD (Electrostatic Discharge). Any damage sustained by the drive after removal from the shipping package and opening the ESD protective bag are the responsibility of the user.

1.4 References

- · Serial ATA II: Extensions to Serial ATA 1.0
- Serial ATA International Organization: Serial ATA Revision 3.1

2 General features

- · Data capacities of 6TB
- Spindle speeds of 7200 RPM
- Fluid Dynamic Bearing motor
- Dual Stage Actuator
- Closed-loop actuator servo
- · Load/Unload mechanism, non head disk contact start/stop
- Automatic Actuator lock
- · Write Cache
- · Power saving modes/Low RPM idle mode (APM) and EPC
- S.M.A.R.T. (Self Monitoring and Analysis Reporting Technology)
- · Adaptive zone formatting
- RVS(Rotational Vibration Safeguard)
- · Sector Buffer size of 64MB
- Seek time of 8.5 ms in read operation (without Command Overhead)
- Sector format of 512 bytes/sector
- · Segmented buffer implementation
- Native command queuing support
- · Automatic Error Recovery procedures for read and write commands
- Self Diagnostics on Power on and resident diagnostics
- Serial ATA Data Transfer 6/3/1.5Gbps
- · CHS and LBA mode
- · Support security feature
- · 48 bit addressing feature
- SATA-3.1 compliant
- Support Full Disk Encryption (specific model only)



3 Fixed disk subsystem description

3.1 Control Electronics

The drive is electronically controlled by a microprocessor, several logic modules, digital/analog modules, and various drivers and receivers. The control electronics performs the following major functions:

- Controls and interprets all interface signals between the host controller and the drive.
- Controls read write accessing of the disk media, including defect management and error recovery.
- Controls starting, stopping, and monitoring of the spindle.
- Conducts a power-up sequence and calibrates the servo.
- Analyzes servo signals to provide closed loop control. These include position error signal and estimated velocity.
- Monitors the actuator position and determines the target track for a seek operation.
- Controls the voice coil motor driver to align the actuator in a desired position.
- Constantly monitors error conditions of the servo and takes corresponding action if an error occurs.
- Monitors various timers such as head settle and servo failure.
- Performs self-checkout (diagnostics).

3.2 Head disk assembly

The head disk assembly (HDA) is assembled in a clean room environment and contains the disks and actuator assembly. Helium is constantly circulated and filtered when the drive is operational. No venting of the HDA is accomplished via a breather filter, as HDA is hermetically sealed.

The spindle is driven directly by an in-hub, brushless, sensorless DC drive motor. Dynamic braking is used to quickly stop the spindle.

3.3 Actuator

The read/write heads are mounted in the actuator. The actuator is a swing-arm assembly driven by a voice coil motor. A closed-loop positioning servo controls the movement of the actuator. An embedded servo pattern supplies feedback to the positioning servo to keep the read/write heads centered over the desired track.

The actuator assembly is balanced to allow vertical or horizontal mounting without adjustment.

When the drive is powered off, the actuator automatically moves the head to the actuator ramp outside of the disk where it parks.

4 Drive characteristics

This section describes the characteristics of the drive.

4.1 Default logical drive parameters

The default of the logical drive parameters in Identify Device data is as shown below.

Description	6TB model
Physical Layout	
Label capacity	6TB
Bytes per Sector	512n
Logical Layout ²	
Number of Heads	14
Number of Sectors/ Track	63
Number of Cylinders ¹	16,383
Number of Sectors	11,721,045,168
Total Logical Data Bytes	6,001,175,126,016

Table 2 Formatted capacity

Notes:

¹ Number of cylinders: For drives with capacities greater an 8.45 GB the IDENTIFY DEVICE information word 01 limits the number of cylinders to 16,383 per the ATA specification.

² Logical layout: Logical layout is an imaginary drive parameter (that is, the number of heads) which is used to access the drive from the system interface. The Logical layout to Physical layout (that is, the actual Head and Sectors) translation is done automatically in the drive. The default setting can be obtained by issuing an IDENTIFY DEVICE command

4.2 Data sheet

Description	6TB Model
Max Data transfer rate (Mbps)	1797
Interface transfer rate (MB/s)	600
Typ Sustained transfer rate (MB/s)	177
Data buffer size (MB)	64
Rotational speed (RPM)	7,200
Configurable number of buffer segment Number	2048max
Recording density- max (Kbpi)	1689
Track density (Ktpi)	322
Areal density - max (Gbits/in²)	544

Table 3 Mechanical positioning performance (Sector format of 512k bytes/sector)

$4.3 \quad \hbox{World Wide Name Assignment}$

Description	SATA 6TB model
Organization	HGST Japan
Manufacturing Site	Singapore, Thailand
Product	Ultrastar He ⁶
OUI	000CCAh
SHBU Block Assignment	Singapore:231h Thailand:232h
Port/Node ID	11b

Table 4 World Wide Name Assignment

4.4 Drive organization

4.4.1 Drive Format

Upon shipment from HGST Japan manufacturing the drive satisfies the sector continuity in the physical format by means of the defect flagging strategy described in Section 5.0 on page 23 in order to provide the maximum performance to users.

4.4.2 Cylinder allocation

Physical cylinder is calculated from the starting data track of 0. It is not relevant to logical CHS. Depending on the capacity some of the inner zone cylinders are not allocated.

Data cylinder

This cylinder contains the user data which can be sent and retrieved via read/write commands and a spare area for reassigned data.

Spare cylinder

The spare cylinder is used by HGST Japan manufacturing and includes data sent from a defect location.

4.5 Performance characteristics

Drive performance is characterized by the following parameters:

- · Command overhead
- · Mechanical positioning
 - Seek time
 - Latency
- Data transfer speed
- Buffering operation (Look ahead/Write cache)

All the above parameters contribute to drive performance. There are other parameters that contribute to the performance of the actual system. This specification defines the characteristics of the drive, not the characteristics of the system throughput which depends on the system and the application.

4.5.1 Command overhead (SATA)

Command overhead is defined as the time required

- from the time H->D Reg FIS w/ command bit is sent by host
- to the time
 - PIO Set Up FIS is sent by device(PIO Read/Write)
 - DATA FIS is sent by device(DMA Read)
 - DMA Activate FIS is sent by device(DMA Write)
 - DMA Set Up FIS is sent by device(NCQ Read/Write)
 - Seek Start (Read cache not hit or Seek)

The table below gives average command overhead.

Command type (Drive is in quiescent state)	Typical time (ms)	Typical time for NCQ command (ms)
Read (Cache not hit)	0.2	0.2
Read (Cache hit)	0.2	0.2
Write	0.5	0.5
Seek	0.2	not applicable

Table 5 Command overhead

4.5.2 Mechanical positioning

4.5.2.1 Average seek time (without command overhead, including settling)

Command Type	Typical (ms)	Max (ms)
Read	8.5	10.0
Write	9.0	11.0

Table 6 Average seek time

The terms "Typical" and "Max" are used throughout this specification with the following meanings: **Typical.** The average of the drive population tested at nominal environmental and voltage conditions.

Max. The maximum value measured on any one drive over the full range of the environmental and voltage conditions. (See Section 6.2, "Environment" and Section 6.3, "DC Power Requirements")

4.5.2.2 Single track seek time (without command overhead, including settling)

Common to all models and all seek modes

Function	Typical (ms)	Max (ms)
Read	0.25	0.35
Write	0.35	0.45

Table 7 Single Track Seek Time

4.5.2.3 Average latency

Rotational speed	Time for a revolution (ms)	Average latency (ms)
7200 RPM	8.3	4.16

Table 8 Latency Time

4.5.3 Drive ready time

Power on to ready	Typical (sec)	Maximum (sec)
7 Disk model	20	30

Table 9 Drive ready time

Ready The condition in which the drive is able to perform a media access command (such as read, write)

immediately.

Power on This includes the time required for the internal self diagnostics.

4.5.4 Operating modes

4.5.4.1 Operating mode descriptions

Operating mode Description

Spin-up Start up time period from spindle stop or power down

SeekSeek operation modeWriteWrite operation modeReadRead operation mode

Unload Idle Spindle rotation at 7200 RPM with heads unloaded

Idle Spindle motor is working normally. Servo system is sleeping and wake up for 100us

every 10 revolutions. Commands can be received and processed immediately

Standby Actuator is unloaded and spindle motor is stopped. Commands can be received

immediately

Sleep Actuator is unloaded and spindle motor is stopped. Only soft reset or hard reset can

change the mode to standby

Note: Upon power down or spindle stop a head locking mechanism will secure the heads in the OD parking position.

4.5.4.2 Mode transition times

Mode transition times are shown below.

From	То	RPM	Typical Transition time(sec)	Max Transition time(sec)
Standby	Idle	0 -> 7200	15	30
Idle	Standby	7200 -> 0	Immediately	Immediately
Standby	Sleep	0	Immediately	Immediately
Sleep	Standby	0	Immediately	Immediately
Unload idle	Idle	7,200	1	30
Idle	Unload Idle	7,200	Immediately	Immediately
Low RPM Idle	Idle	6300 -> 7200	4	30

Note: The command is processed immediately but there will be an actual spin down time reflecting the seconds passed until the spindle motor stops.

Table 10 Mode transition times

5 Defect flagging strategy

Media defects are remapped to the next available sector during the Format Process in manufacturing. The mapping from LBA to the physical locations is calculated by an internally maintained table.

Shipped format

- · Data areas are optimally used.
- No extra sector is wasted as a spare throughout user data areas.
- All pushes generated by defects are absorbed by the spare tracks of the inner zone.

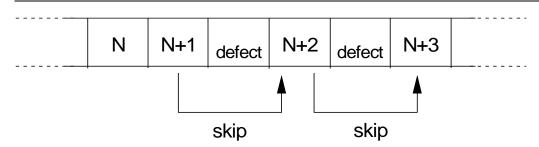


Figure 1 PList physical format

Defects are skipped without any constraint, such as track or cylinder boundary. The calculation from LBA to physical is done automatically by internal table.

6 Specification

6.1 Electrical interface

6.1.1 Connector location

Refer to the following illustration to see the location of the connectors.

SATA

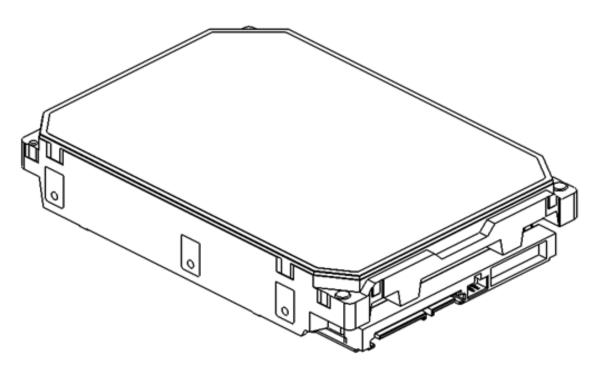


Figure 2 Connector location

6.1.1.1 Signal connector

The SATA signal connector is a 7-pin connector. Power connector is a 15-pin connector.

6.1.2 Signal definition(SATA)

SATA has receivers and drivers to be connected to Tx+/- and Rx +/- Serial data signal. Defines the signal names of I/O connector pin and signal name.

	No.	Plug Connector pin definition Sig		Signal	I/O
	S1	GND	2nd mate	Gnd	
	S2	A+	Differential signal A from Phy	RX+	Input
	S3	A-		RX-	Input
Signal	S4	Gnd	2nd mate	Gnd	
	S5	B-	Differential signal B from Phy	TX-	Output
	S6	B+		TX+	Output
	S7	Gnd	2nd mate	Gnd	
			Key and spacing separate signal and power segments		
	P1	V33	3.3V power	3.3V	
	P2	V33	3.3V power	3.3V	
	P3	V33	3.3V power, pre-charge, 2nd Mate	3.3V	
	P4	Gnd	1st mate	Gnd	
	P5	Gnd	2nd mate	Gnd	
	P6	Gnd	2nd mate	Gnd	
	P7	V5	5V power,pre-charge,2nd Mate	5V	
	P8	V5	5V power	5V	
Power	P9	V5	5V power	5V	
	P10	Gnd	2nd mate	Gnd	
	P11	Reserved	Support staggered spin-up and LED activity Vih max=5.5V	Reserve	
	P12	Gnd	1st mate	Gnd	
	P13	V12	12V power,pre-chage,2nd mate	V12	
	P14	V12	12V power	V12	
	P15	V12	12V power	V12	

Table 11 Interface connector pins and I/O signals

6.1.2.1 **TX+/TX-**

These signals are the outbound high-speed differential signals that are connected to the serial ATA cable

6.1.2.2 **RX+/RX-**

These signals are the inbound high-speed differential signals that are connected to the serial ATA cable.

6.1.2.3 5V PRECHARGE

+5 Vdc power that is available on the extended pins. This is used for pre-charging the I/O module.

The enclosure shall provide for a current limit of 4.5 A peak on each 5V pre-charge pin (R=1.1 Ohms). These signals are the inbound high-speed differential signals that are connected to the serial ATA cable.

6.1.2.4 **12V PRECHARGE**

+12 Vdc power that is available on the extended pins. This is used for pre-charging the 12V circuitry in the I/O Option slot module.

The enclosure shall be capable of supplying 2.4 A peak on each 12 V pre-charge pin (R=5 Ohms). These signals are the inbound high-speed differential signals that are connected to the serial ATA cable.

6.1.3 Out of band signaling(SATA)

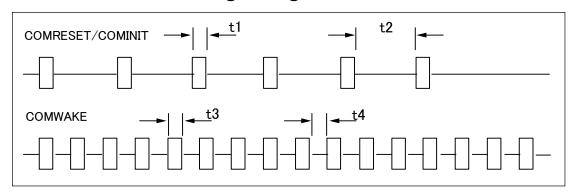


Figure 3 The timing of COMRESET, COMINIT and COMWAKE

	PARAMETER DESCRIPTION	Nominal (ns)
t1	ALIGN primitives	106.7
t2	Spacing	320
t3	ALIGN primitives	106.7
t4	Spacing	106.7

Table 12 Parameter descriptions

6.2 Environment

6.2.1 Temperature and humidity

Operating conditions	
Temperature	5 to 60°C
Relative humidity	8 to 90% non-condensing
Maximum wet bulb temperature	29.4°C non-condensing
Maximum temperature gradient	20°C/Hour
Altitude	-300 to 3,048 m
Non-Op conditions	
Temperature	-40 to 70°C
Relative humidity	5 to 95% non-condensing
Maximum wet bulb temperature	35°C non-condensing
Maximum temperature gradient	30°C/Hour
Altitude	-300 to 12,000 m (Inside dashed-dotted line of Figure 4)

Table 13 Temperature and humidity

Notes:

- 1. The system is responsible for providing sufficient ventilation to maintain a surface temperature below 65°C at the center of the top cover of the drive.
- 2. Non condensing conditions should be maintained at any time.
- 3. Maximum storage period within shipping package is one year.

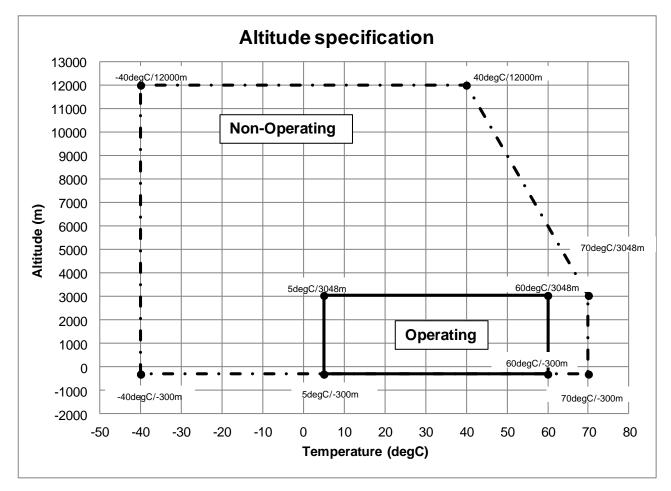


Figure 4 Limits of temperature and altitude

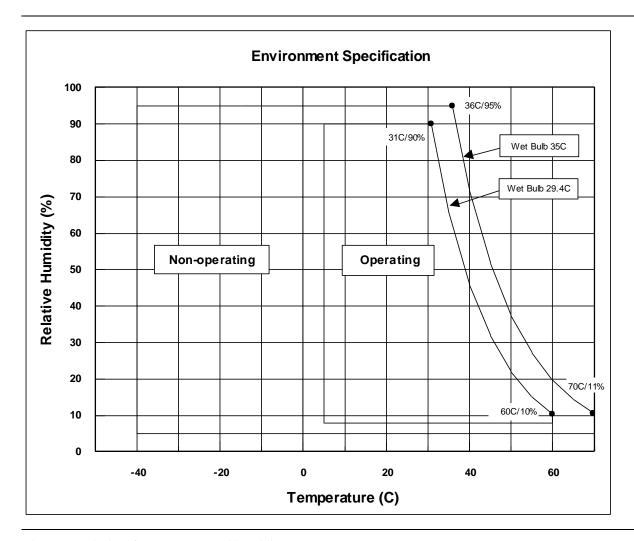


Figure 5 Limits of temperature and humidity

Note: Storage temperature range is 0 to 70°C

6.2.2 Corrosion test

The drive shows no sign of corrosion inside and outside of the hard disk assembly and is functional after being subjected to seven days at 50°C with 90% relative humidity.

6.2.3 Atmospheric condition

Environments that contain elevated levels of corrosives (e.g. hydrogen sulfide, sulfur oxides, or hydrochloric acid) should be avoided. Care must be taken to avoid using any compound/material in a way that creates an elevated level of corrosive materials in the atmosphere surrounding the disk drive. Care must also be taken to avoid use of any organometallic (e.g. organosilicon or organotin) compound/material in a way that creates elevated vapor levels of these compounds/materials in the atmosphere surrounding the disk drive.

6.3 DC power requirements

Damage to the drive electronics may result if the power supply cable is connected or disconnected to the legacy Power connector while power is being applied to the drive (no hot plug/unplug is allowed). If SATA power supply cable is connected or disconnected to the SATA power connector, hot plug/unplug is allowed.

6.3.1 Input voltage

Input voltage	During run and spin up	Absolute max spike voltage	Supply rise time		
+5 Volts Supply	5V ± 5%	-0.3 to 5.5V	0 to 200ms		
+12 Volts Supply	12V ± 5%	-0.3 to 15.0V	0 to 400ms		

Table 14 Input voltage

Caution: To avoid damage to the drive electronics, power supply voltage spikes must not exceed specifications.

Power supply current (typical¹) 6.3.2

Serial ATA @6Gb/sec 6TE		3 Model			
			Current	Current	Power
		IO/Sec	+5V Amp	+12V Amp	Watts
Spin up Peak DC	[1]			1.23	
Spin up Peak AC			0.45	1.82	
Idle_0 Ave.			0.32	0.31	5.3
Idle Ripple	[2]		0.34	0.34	
Random RW 8KB Qd=1	Peak		0.67	1.79	
Random RW 8KB Qd=1	Ave.	40	0.35	0.47	7.3
				_	
Sequential Read Peak			0.73		
Sequential Read Ave.	[3]		0.60	0.31	6.7
Sequential Write Peak			0.75		
Sequential Write Ave.	[3]		0.59	0.35	7.2
				_	
BMS Peak			0.71		
BMS Ave.			0.57	0.31	6.6
			1	1	

Power Save Mode	Current		Power		Recovery [1]		Time in seconds
(PHY state: Active)	+5V Amp	+12V Amp	Watts	Watts Saved	12V DC peak	12V AC peak	Typical
ldle_A	0.27	0.30	5.0	0.3			0
ldle_B	0.21	0.22	3.7	1.6			1
ldle_C	0.21	0.18	3.2	2.1	0.88	1.18	4
Standby_Y	0.21	0.18	3.2	2.1	0.88	1.18	4
Standby_Z	0.20	0.003	1.0	4.3	1.23	1.82	12
Sleep	0.20	0.003	1.0	4.3	1.23	1.82	12

PHY power condition	Port A
	Watts Saved
Partial	0.28
Slumber	0.39

Table 15 SATA power consumption

Notes

Reference data, sample number = 10HDDs, DE temp. = 40degC (25degC for Spin up)

- 200mS windowed average
- Pk to Pk BWL @20MHz
- [1] [2] [3] Max transfer rate

6.3.3 Power supply generated ripple at drive power connector

	Maximum (mV pp)	MHz
+5V DC	200	0-10
+12V DC	250	0-10

Table 16 Power supply generated ripple at drive power connector

During drive start up and seeking 12-volt ripple is generated by the drive (referred to as dynamic loading). If the power of several drives is daisy chained together, the power supply ripple plus the dynamic loading of the other drives must remain within the above regulation tolerance. A common supply with separate power leads to each drive is a more desirable method of power distribution.

To prevent external electrical noise from interfering with the performance of the drive, the drive must be held by four screws in a user system frame which has no electrical level difference at the four screws position and has less than ±300 millivolts peak to peak level difference to the ground of the drive power connector.

6.4 Reliability

6.4.1 Data integrity

No more than one sector is lost at Power loss condition during the write operation when the write cache option is disabled. If the write cache option is active, the data in write cache will be lost. To prevent the loss of customer data, it is recommended that the last write access before power off be issued after setting the write cache off.

6.4.2 Cable noise interference

To avoid any degradation of performance throughput or error rate when the interface cable is routed on top or comes in contact with the HDA assembly, the drive must be grounded electrically to the system frame by four screws. The common mode noise or voltage level difference between the system frame and power cable ground or AT interface cable ground should be in the allowable level specified in the power requirement section.

6.4.3 Load/Unload

The product supports a minimum of 600,000 normal load/unloads in a 40° C environment. Load/unload is invoked by transition of the HDD's power mode.

Idle <-> unload idle Idle <-> Low rpm idle

6.4.4 Start/stop cycles

The drive withstands a minimum of 50,000 start/stop cycles in a 40° C environment and a minimum of 10,000 start/stop cycles in extreme temperature or humidity within the operating range. .

6.4.5 Preventive maintenance

None

6.4.6 Data reliability


Probability of not recovering data is 1 in 10¹⁵ bits read.

LDPC on the fly/ offline data correction

- 600 bit LDPC
- This implementation recovers maximum 330 bits single burst error by on the fly correction and maximum 450 bits single burst error by offline correction

6.5 Mechanical specifications

6.5.1 Physical dimensions

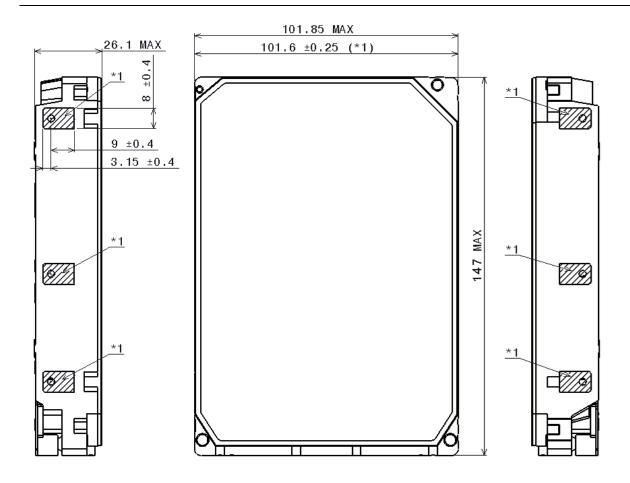

*1 101.6 \pm 0.25 IS APPLIED FOR HATCHED AREA ONLY.

Figure 6 Top and side views and mechanical dimensions

All dimensions are in millimeters.

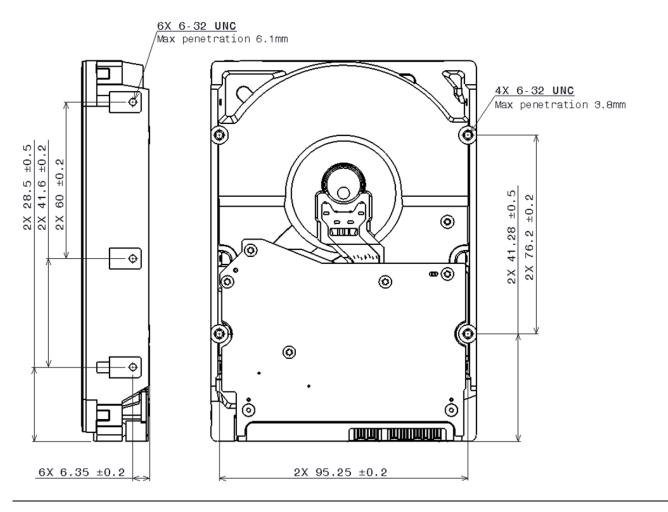


Figure 7 Bottom and side views with mounting hole locations


All dimensions in the above figure are in millimeters.

The following table shows the physical dimensions of the drive.

Height (mm)	Width (mm)	Length (mm)	Weight (grams)		
26.1 MAX	101.6 ± 0.25	147 MAX	650 MAX		

Table 17 Physical Dimensions

SATA

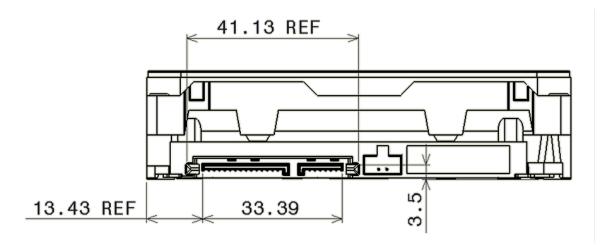

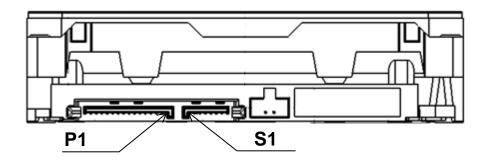


Figure 8 Connector locations

6.5.3 Drive mounting

The drive will operate in all axes (6 directions). Performance and error rate will stay within specification limits if the drive is operated in the other orientations from which it was formatted.

For reliable operation, the drive must be mounted in the system securely enough to prevent excessive motion or vibration of the drive during seek operation or spindle rotation, using appropriate screws or equivalent mounting hardware.

The recommended mounting screw torque is 0.6 - 1.0 Nm (6-10 Kgf.cm).

The recommended mounting screw depth is 4 mm maximum for bottom and 6.1 mm maximum for horizontal mounting.

Drive level vibration test and shock test are to be conducted with the drive mounted to the table using the bottom four screws.

6.5.4 Heads unload and actuator lock

Heads are moved out from disks (unload) to protect the disk data during shipping, moving, or storage. Upon power down, the heads are automatically unloaded from disk area and the locking mechanism of the head actuator will secure the heads in unload position.

6.6 Vibration and shock

All vibration and shock measurements recorded in this section are made with a drive that has no mounting attachments for the systems. The input power for the measurements is applied to the normal drive mounting points.

6.6.1 Operating vibration

6.6.1.1 Random vibration (Linear)

The test is 30 minutes of random vibration using the power spectral density (PSD) levels shown below in each of three mutually perpendicular axes. The disk drive will operate without non-recoverable errors when subjected to the below random vibration levels.

Frequency	5 Hz	17 Hz	45 Hz	48 Hz	62 Hz	65 Hz	150 Hz	200 Hz	500 Hz	RMS (m/sec²)
[(m/sec ²) ² /H	1.9 x 10E-3	1.1 x 10E–1					9.6 x 10E–2			6.57

Table 18 Random vibration PSD profile break points (operating)

The overall RMS (root mean square) level is 6.57 m/sec² (0.67 G).

6.6.1.2 Swept sine vibration (Linear)

The drive will meet the criteria shown below while operating in the specified conditions:

- No errors occur with 4.9 m/sec² (0.5 G) 0 to peak, 5 to 300 to 5 Hz sine wave, 0.5 oct/min sweep rate with 3-minute dwells at two major resonances
- No data loss occurs with 9.8 m/sec² (1 G) 0 to peak, 5 to 300 to 5 Hz sine wave, 0.5 oct/min sweep rate with 3-minute dwells at two major resonances

6.6.1.3 Random vibration (Rotational)

The drive will meet the criteria shown below while operating in the specified conditions:

- Less than 20% Performance degradation
- The overall RMS (Root Mean Square) level of vibration is 12.5Rad/sec^2. PSD profile is shown below.

Frequency	20 Hz	100 Hz	200 Hz	800 Hz	1000 Hz	1500 Hz	1700 Hz	2000 Hz	RMS (Rad/s²)
[(Rad/s²) ²/Hz]	1.90E-02	1.90E-02	1.87E-01	1.87E-01	5.33E-02	7.70E-03	4.00E-03	4.00E-03	12.5

Table 19 Random vibration (Rotational) PSD profile break points

6.6.2 Nonoperating vibration

The drive does not sustain permanent damage or loss of previously recorded data after being subjected to the environment described below

6.6.2.1 Random vibration

The test consists of a random vibration applied for each of three mutually perpendicular axes with the time duration of 10 minutes per axis. The PSD levels for the test simulate the shipping and relocation environment shown below. The overall RMS (Root Mean Square) level of vibration is 10.2 m/sec² (1.04 G).

Frequency	2 Hz	4 Hz	8 Hz	40 Hz	55 Hz	70 Hz	200 Hz
[(m/sec²)²/ Hz]	0.096	2.89	2.89	0.289	0.962	0.962	0.096

Table 20 Random vibration PSD profile break points (nonoperating)

6.6.2.2 Swept sine vibration

- 19.6 m/sec² (2 G) (Zero to peak), 5 to 500 to 5 Hz sine wave
- 0.5 oct/min sweep rate
- · 3 minutes dwell at two major resonances

6.6.3 Operating shock

The drive meets the following criteria while operating in the conditions described below. The shock test consists of 10 shock inputs in each axis and direction for total of 60. There must be a delay between shock pulses long enough to allow the drive to complete all necessary error recovery procedures.

- No error occurs with a 98.1 m/sec² (10 G) half-sine shock pulse of 11 ms duration
- No data loss occurs with a 294 m/sec² (30 G) half-sine shock pulse of 4 ms duration.
- No data loss occurs with a 686 m/sec² (70 G) half-sine shock pulse of 2 ms duration.

6.6.4 Nonoperating shock

The drive will operate without non-recoverable errors after being subjected to shock pulses with the following characteristics.

6.6.4.1 Trapezoidal shock wave

- · Approximate square (trapezoidal) pulse shape
- Approximate rise and fall time of pulse is 1 ms
- Average acceleration level is 490 m/sec² (50 G). (Average response curve value during the time following the 1 ms rise time and before the 1 ms fall with a time "duration of 11 ms")
- Minimum velocity change is 4.23 m/sec

6.6.4.2 Sinusoidal shock wave

The shape is approximately half-sine pulse. The figure below shows the maximum acceleration level and duration.

Acceleration level (m/sec ²)	Duration (ms)		
2940(300G)	1		
1470(150G)	11		

Table 21 Sinusoidal shock wave

6.6.5 Nonoperating Rotational shock

All shock inputs shall be applied around the actuator pivot axis.

Duration	Rad/sec ²		
1 ms	30,000		
2 ms	20,000		

Table 22 Rotational Shock

6.7 Acoustics

The upper limit criteria of the octave sound power levels are given in Bels relative to one picowatt and are shown in the following table. The sound power emission levels are measured in accordance with ISO 7779.

Mode	7200rpm (Typical / Max)
Idle	2.0 / 2.5
Operating	3.6 / 4.0

Table 23 Sound power levels

Mode definition:

Idle mode. The drive is powered on, disks spinning, track following, unit ready to receive and respond to interface commands.

Operating mode. Continuous random cylinder selection and seek operation of the actuator with a dwell time at each cylinder. The seek rate for the drive is to be calculated as shown below:

- Dwell time = 0.5 x 60/RPM
- Seek rate = 0.4 / (Average seek time + Dwell time)

6.8 Identification labels

The following labels are affixed to every drive shipped from the drive manufacturing location in accordance with the appropriate hard disk drive assembly drawing:

A label containing the HGST logo, the HGST Japan part number, and the statement "Made by HGST Japan, Ltd." or HGST Japan approved equivalent
A label containing the drive model number, the manufacturing date code, the formatted capacity, the place of manufacture. UL/CSA/TUV/CF/C-Tick mark logos and WFFF/China RoHS logos.

☐ A bar code label containing the drive serial number

☐ A label containing the jumper pin description

□ A user designed label per agreement

The above labels may be integrated with other labels.

6.9 Safety

6.9.1 UL and CSA standard conformity

The product is qualified per UL60950-1: Second Edition and CAN/CSA-C22.2 No.60950-1-07 Second Edition, for use in Information Technology Equipment including Electric Business Equipment.

The UL recognition or the CSA certification is maintained for the product life.

The UL and C-UL recognition mark or the CSA monogram for CSA certification appear on the drive.

6.9.2 German Safety Mark

The product is approved by TUV on Test requirement: EN60950-1: 2006+A11 but the GS mark is not applicable to internal devices such as this product.

6.9.3 Flammability

The printed circuit boards used in this product are made of material with the UL recognized flammability rating of V-1 or better. The flammability rating is marked or etched on the board. All other parts not considered electrical components are made of material with the UL recognized flammability rating of V-2 minimum basically.

6.9.4 Safe handling

The product is conditioned for safe handling in regards to sharp edges and corners.

6.9.5 Substance restriction requirements

The product complies with the Directive 2002/95/EC of the European Parliament on the restrictions of the use of the certain hazardous substances in electrical and electronic equipment (RoHS) and with Halogen free requirements based on the electronics industry standard, IEC 61249-2-21 (http://www.iec.ch/).

6.9.6 Secondary circuit protection

Spindle/VCM driver module includes 12 V over current protection circuit.

6.10 Electromagnetic compatibility

When installed in a suitable enclosure and exercised with a random accessing routine at maximum data rate, the drive meets the following worldwide EMC requirements:

- United States Federal Communications Commission (FCC) Rules and Regulations (Class B), Part 15. (A 6 dB buffer shall be maintained on the emission requirements).
- European Economic Community (EEC) directive number 76/889 related to the control of radio frequency interference and the Verband Deutscher Elektrotechniker (VDE) requirements of Germany (GOP). Spectrum Management Agency (SMA) EMC requirements of Australia. The SMA has approved C-Tick Marking for HGST Japan.

6.10.1 **CE Mark**

The product is declared to be in conformity with requirements of the following EC directives under the sole responsibility of HGST Japan, Ltd:

Council Directive 2004/108/EC on the approximation of laws of the Member States relating to electromagnetic compatibility.

6.10.2 **C-Tick Mark**

The product complies with the following Australian EMC standard:

Limits and methods of measurement of radio disturbance characteristics of information technology, AS/NZS 3548 : 1995 Class B.

6.10.3 **BSMI Mark**

The product complies with the Taiwan EMC standard "Limits and methods of measurement of radio disturbance characteristics of information technology equipment, CNS 13438 Class B."

6.10.4 KC Mark

The product complies with the Korea EMC standard. The regulation for certification of information and communication equipment is based on "Telecommunications Basic Act" and "Radio Waves Act" Korea EMC requirement are based technically on CISPR22 measurement standards and limits. KC standards are likewise based on IEC standards.



7 General

7.1 Introduction

This specification describes the host interface of HUS726060ALA64n

The interface conforms to the following working documents of Information technology with certain limitations described in the chapter 7.3 "Deviations from Standard" on page 43

Serial ATA International Organization: Serial ATA Revision 3.1

7.2 Terminology

Device Device indicates HUS726060ALA64n

Host Host indicates the system that the device is attached to.

7.3 Deviations From Standard

The device conforms to the referenced specifications, with deviations described below.

mode, Check Power Mode command returns FFh by Sector Count Register, instead

of returning 80h. Refer to 11.1 "Check Power Mode" for detail.

COMRESET COMRESET response is not the same as that of Power On Reset. Refer to

section 9.1, "Reset Response" for detail.

Download

Both Download Microcode and Download Microcode DMA are aborted when the

device is in security locked mode.

COMRESET response time During 500ms from Power On Reset, COMINIT is not returned within 10ms as a

response to COMRESET.

Streaming Commands When the device is in standby mode, Streaming Commands can't be completed

while waiting for the spindle to reach operating speed even if execution time exceeds specified CCTL (Command Completion Time Limit). The minimum CCTL is 50ms.CCTL is set to 50ms when the specified value is shorter than 50ms.

SCT Error Recovery Control When the device is in standby mode, any command where error recovery time limit

is specified can't be completed while waiting for the spindle to reach operating speed even if execution time exceeds specified recovery time limit. The minimum time limit is 6.5 second. When the specified time limit is shorter than 6.5 second,

the issued command is aborted.

8 Registers

In Serial ATA, the host adapter contains a set of registers that shadow the contents of the traditional device registers, referred to as the Shadow Register Block. Shadow Register Block registers are interface registers used for delivering commands to the device or posting status from the device. About details, please refer to the Serial ATA Specification.

In the following cases, the host adapter sets the BSY bit in its shadow Status Register and transmits a FIS to the device containing the new contents.

- Command register is written in the Shadow Register Block
- Device Control register is written in the Shadow Register Block with a change of state of the SRST bit
- COMRESET is requested

8.1 Alternate Status Register

Alternate Status Register							
7	6	5	4	3	2	1	0
BSY	RDY	DF	DSC /SERV	DRQ	COR	IDX	ERR

Table 24 Alternate Status Register

This register contains the same information as the Status Register. The only difference is that reading this register does not imply interrupt acknowledge or clear a pending interrupt. See 8.11 "Status Register" on the page 48 for the definition of the bits in this register.

8.2 Command register

This register contains the command code being sent to the device. Command execution begins immediately after this register is written. The command set is shown in Table 70 Command Set on page 107.

All other registers required for the command must be set up before writing the Command Register.

8.3 Cylinder High Register

This register contains the high order bits of the starting cylinder address for any disk access. At the end of the command, this register is updated to reflect the current cylinder number.

In LBA Mode this register contains Bits 16-23. At the end of the command, this register is updated to reflect the current LBA Bits 16-23.

The cylinder number may be from zero to the number of cylinders minus one.

When 48-bit addressing commands are used, the "most recently written" content contains LBA Bits 16-23, and the "previous content" contains Bits 40-47. The 48-bit Address feature set is described in 9.12.

8.4 Cylinder Low Register

This register contains the low order bits of the starting cylinder address for any disk access. At the end of the command, this register is updated to reflect the current cylinder number.

In LBA Mode this register contains Bits 8-15. At the end of the command, this register is updated to reflect the current LBA Bits 8-15.

The cylinder number may be from zero to the number of cylinders minus one.

When 48-bit addressing commands are used, the "most recently written" content contains LBA Bits 8-15, and the "previous content" contains Bits 32-39.

8.5 Device Control Register

Device Control Register							
7	6	5	4	3	2	1	0
НОВ	-	-	-	1	SRST	-IEN	0

Table 25 Device Control Register

Bit Definitions

HOB (high order byte) is defined by the 48-bit Address feature set. A write to any Command

Register shall clear the HOB bit to zero.

SRST (RST) Software Reset. The device is held reset when RST=1. Setting RST=0 re-enables the device.

The host must set RST=1 and wait for at least 5 microseconds before setting RST=0, to ensure

that the device recognizes the reset.

-IEN

Interrupt Enable. When –IEN=0, and the device is selected, device interrupts to the host will be enabled. When –IEN=1, or the device is not selected, device interrupts to the host will be disabled.

8.6 Device/Head Register

Device/Head Register							
7	6	5	4	3	2	1	0
1	L	1	DRV	HS3	HS2	HS1	HS0

Table 26 Device/Head Register

This register contains the device and head numbers.

Bit Definitions

L Binary encoded address mode select. When L=0, addressing is by CHS mode. When L=1,

addressing is by LBA mode.

DRV Device. This product ignores this bit.

HS3,HS2,HS1,HS0 Head Select. These four bits indicate binary encoded address of the head. HS0 is the least significant bit. At command completion, these bits are updated to reflect the currently selected

head.

The head number may be from zero to the number of heads minus one.

In LBA mode, HS3 through HS0 contain bits 24-27 of the LBA. At command completion, these

bits are updated to reflect the current LBA bits 24-27.

8.7 Error Register

Error Register							
7	6	5	4	3	2	1	0
ICRCE	UNC	0	IDNF	0	ABRT	TK0NF	AMNF

Table 27 Error Register

This register contains status from the last command executed by the device, or a diagnostic code.

At the completion of any command except Execute Device Diagnostic, the contents of this register are valid always even if ERR=0 in the Status Register.

Following a power on, a reset, or completion of an Execute Device Diagnostic command, this register contains a diagnostic code. See 0 on page 50 for the definition.

Bit Definitions

ICRCE (CRC) Interface CRC Error. ICRCE=1 indicates a CRC error occurred during FIS transmission or FIS

reception.

UNC Uncorrectable Data Error. UNC=1 indicates an uncorrectable data error has been encountered.

IDNot Found. IDN=1 indicates the requested sector's ID field could not be found.

ABRT (ABT) Aborted Command. ABT=1 indicates the requested command has been aborted due to a device

status error or an invalid parameter in an output register.

TK0NF (T0N) Track 0 Not Found. T0N=1 indicates track 0 was not found during a Recalibrate command.

AMNF (AMN)

Address Mark Not Found. This product does not report this error. This bit is always zero.

8.8 Features Register

This register is command specific. This is used with the Set Features command, SMART Function Set command and Format Unit command.

8.9 Sector Count Register

This register contains the number of sectors of data requested to be transferred on a read or write operation between the host and the device. If the value in the register is set to 0, a count of 256 sectors (in 28-bit addressing) or 65,536 sectors (in 48-bit addressing) is specified.

If the register is zero at command completion, the command was successful. If not successfully completed, the register contains the number of sectors which need to be transferred in order to complete the request.

The contents of the register are defined otherwise on some commands. These definitions are given in the command descriptions.

8.10 Sector Number Register

This register contains the starting sector number for any disk data access for the subsequent command. The sector number is from one to the maximum number of sectors per track.

In LBA mode, this register contains Bits 0-7. At the end of the command, this register is updated to reflect the current LBA Bits 0-7.

When 48-bit commands are used, the "most recently written" content contains LBA Bits 0-7, and the "previous content" contains Bits 24-31.

8.11 Status Register

	Status Register						
7	6	5	4	3	2	1	0
BSY	DRDY	DF	DSC /SERV	DRQ	CORR	IDX	ERR

Table 28 Status Register

This register contains the device status. The contents of this register are updated whenever an error occurs and at the completion of each command.

If the host reads this register when an interrupt is pending, it is considered to be the interrupt acknowledge. Any pending interrupt is cleared whenever this register is read.

If BSY=1, no other bits in the register are valid.

Bit Definitions

BSY Busy. BSY=1 whenever the device is accessing the registers. The host should not read or write

any registers when BSY=1. If the host reads any register when BSY=1, the contents of the Status

Register will be returned.

DRDY (RDY) Device Ready. RDY=1 indicates that the device is capable of responding to a command. RDY will

be set to 0 during power on until the device is ready to accept a command. If the device detects an error while processing a command, RDY is set to 0 until the Status Register is read by the host,

at which time RDY is set back to 1.

DF Device Fault. This product does not support DF bit. DF bit is always zero.

Device Seek Complete. DSC=1 indicates that a seek has completed and the device head is settled

over a track. DSC is set to 0 by the device just before a seek begins. When an error occurs, this bit is not changed until the Status Register is read by the host, at which time the bit again indicates

the current seek complete status.

When the device enters into or is in Standby mode or Sleep mode, this bit is set by device in spite

of not spinning up.

SERV (SRV) Service. This product does not support SERV bit.

DRQ Data Request. DRQ=1 indicates that the device is ready to transfer a word or byte of data between

the host and the device. The host should not write the Command register when DRQ=1.

CORR (COR) Corrected Data. Always 0.

Index. IDX=1 once per revolution. Since IDX=1 only for a very short time during each revolution,

the host may not see it set to 1 even if the host is reading the Status Register continuously.

Therefore, the host should not attempt to use IDX for timing purposes.

ERR Error. ERR=1 indicates that an error occurred during execution of the previous command. The

Error Register should be read to determine the error type. The device sets ERR=0 when the next

command is received from the host.

9 General Operation Descriptions

9.1 Reset Response

There are three types of reset in ATA as follows:

Power On Reset (POR)The device executes a series of electrical circuitry diagnostics.

COMRESET COMRESET is issued in Serial ATA bus.

The device resets the interface circuitry as well as Soft Reset.

Soft Reset (Software Reset) SRST bit in the Device Control Register is set, and then is reset.

The device resets the interface circuitry according to the Set Features

requirement.

The actions of each reset are shown in Table 29.

	POR	COMRESET	Soft Reset
Aborting Host interface	-	0	0
Aborting Device operation	-	(*1)	(*1)
Initialization of hardware	0	X	Х
Internal diagnostic	0	X	Х
Spinning spindle	(*6)	X	Х
Initialization of registers (*2)	0	0	0
Reverting programmed parameters to default - Number of CHS (set by Initialize Device Parameter) - Multiple mode - Write cache - Read look-ahead - ECC bytes	0	(*3)	(*3)
Disable Standby timer	0	Х	Х
Power mode	(*5)	(*4)	(*4)

o ---- Execute

x ---- Not execute

Table 29 Reset Response

Table Notes

- (*1) Execute after the data in write cache has been written.
- (*2) Default value on POR is shown in 0 Default Register Values on page50.
- (*3) The Set Features command with Feature register = CCh enables the device to revert these parameters to the power on defaults.
- (*4) In the case of Sleep mode, the device goes to Standby mode. In other case, the device does not change current mode.
- (*5) Idle when Power-Up in Standby feature set is disabled. Standby when Power-Up in Standby feature set is enabled.
- (*6) Spinning up when Power-Up in Standby feature set is disabled. Standby when Power-Up in Standby feature set is enabled.

9.1.1 Register Initialization

Register	Default Value		
Error	Diagnostic Code		
Sector Count	01h		
Sector Number	01h		
Cylinder Low	00h		
Cylinder High	00h		
Device/Head	00h		
Status	50h		
Alternate Status	50h		

Table 30 Default Register Values

After power on, hard reset, or software reset, the register values are initialized as shown in Table 30.

Code	Description
01h	No error Detected
02h	Formatter device error
03h	Sector buffer error
04h	ECC circuitry error
05h	Controller microprocessor error

Table 31 Diagnostic Codes

The meaning of the Error Register diagnostic codes resulting from power on, hard reset or the Execute Device Diagnostic command is shown in Table 31.

9.2 Diagnostic and Reset considerations

In each case of Power on Reset, COMRESET, Soft reset, and EXECUTE DEVICE DIAGNOSTIC command, the device is diagnosed. And Error register is set as shown in Table 31.

9.3 Sector Addressing Mode

All addressing of data sectors recorded on the device's media is by a logical sector address. The logical CHS address for HUS726060ALA64n is different from the actual physical CHS location of the data sector on the disk media. All addressing of data sectors recorded on the device's media.

HUS726060ALA64n support both Logical CHS Addressing Mode and LBA Addressing Mode as the sector addressing mode.

The host system may select either the currently selected CHS translation addressing or LBA addressing on a command-by-command basis by using the L bit in the DEVICE/HEAD register. So a host system must set the L bit to 1 if the host uses LBA Addressing mode.

9.3.1 Logical CHS Addressing Mode

The logical CHS addressing is made up of three fields: the cylinder number, the head number and the sector number. Sectors are numbered from 1 to the maximum value allowed by the current CHS translation mode but can not exceed 255(0FFh). Heads are numbered from 0 to the maximum value allowed by the current CHS translation mode but can not exceed 15(0Fh). Cylinders are numbered from 0 to the maximum value allowed by the current CHS translation mode but cannot exceed 65535(0FFFFh).

When the host selects a CHS translation mode using the INITIALIZE DEVICE PARAMETERS command, the host requests the number of sectors per logical track and the number of heads per logical cylinder. The device then computes the number of logical cylinders available in requested mode.

The default CHS translation mode is described in the Identify Device Information. The current CHS translation mode also is described in the Identify Device Information.

9.3.2 LBA Addressing Mode

Logical sectors on the device shall be linearly mapped with the first LBA addressed sector (sector 0) being the same sector as the first logical CHS addressed sector (cylinder 0, head 0, sector 1). Irrespective of the logical CHS translation mode currently in effect, the LBA address of a given logical sector does not change. The following is always true:

Where heads_per_cylinder and sectors_per_track are the current translation mode values.

On LBA addressing mode, the LBA value is set to the following register.

Device/Head	←	LBA	27-24
Cylinder High	←	bits LBA	23-16
Cylinder Low	(bits LBA	15- 8
Sector Number	←	bits LBA bits	7- 0

9.4 Power Management Feature

The power management feature set allows an application client to modify the behavior of a device in a manner that reduces the power required to operate. The power management feature set provides a set of commands and a timer that enables a device to implement low power consumption modes.

The Power Management feature set implements the following set of functions.

- 1. A Standby timer
- 2. Idle command
- 3. Idle Immediate command
- 4. Sleep command
- 5. Standby command
- 6. Standby Immediate command

9.4.1 Power Mode

The lowest power consumption when the device is powered on occurs in Sleep Mode. When in sleep mode, the device requires a reset to be activated.

In Idle Mode the device is capable of responding immediately to media access requests.

In Active Mode the device is under executing a command or accessing the disk media with read look-ahead function or writes cache function.

9.4.1.1 Active Idle mode

Servo is mostly off but heads are loaded. The spindle is rotated at the full speed.

9.4.1.2 Low Power Idle mode

Additional electronics are powered off, and heads are unloaded on the ramp, however the spindle is still rotated at the full speed.

9.4.1.3 Low RPM Idle mode

The heads are unloaded on the ramp, and the spindle is rotated at the 85-90% of the full speed.

9.4.1.4 Standby Mode

The device interface is capable of accepting commands, but as the media may not immediately accessible, there is a delay while waiting for the spindle to reach operating speed.

9.4.2 Power Management Commands

The Check Power Mode command allows a host to determine if a device is in, going, to or leaving standby or idle mode.

The Idle and Idle Immediate commands move a device to idle mode immediately from the active or standby modes. The idle command also sets the standby timer count and enables or disables the standby timer.

The Standby and Standby Immediate commands move a device to standby mode immediately from the active or idle modes. The standby command also sets the standby timer count and enables or disables the Standby timer.

The Sleep command moves a device to sleep mode. The device's interface becomes inactive after the device reports command completion for the sleep command. A device only transitions from sleep mode after processing hardware reset, a software reset.

9.4.3 Standby timer

The standby timer provides a method for the device to automatically enter standby mode from either active or idle mode following a host programmed period of inactivity. If the device is in the active or idle mode, the device waits for the specified time period and if no command is received, the device automatically enters the standby mode.

If the value of SECTOR COUNT Register on Idle command or Standby command is set to 00h, the standby timer is disabled.

9.4.4 Interface Capability for Power Modes

Each power mode affects the physical interface as defined in the following table:

Mode	BSY	RDY	Interface active	Media
Active	Х	Х	Yes	Active
Idle	0	1	Yes	Active
Standby	0	1	Yes	Inactive
sleep	x	х	No	Inactive

Table 32 Power conditions

Ready (RDY) is not a power condition. A device may post ready at the interface even though the media may not be accessible.

9.5 SMART Function

The intent of Self-monitoring, analysis and reporting technology (SMART) is to protect user data and prevent unscheduled system downtime that may be caused by predictable degradation and/or fault of the device. By monitoring and storing critical performance and calibration parameters, SMART devices employ sophisticated data analysis algorithms to predict the likelihood of near-term degradation or fault condition. By alerting the host system of a negative reliability status condition, the host system can warn the user of the impending risk of a data loss and advise the user of appropriate action.

9.5.1 Attributes

Attributes are the specific performance or calibration parameters that are used in analyzing the status of the device. Attributes are selected by the device manufacturer based on that attribute's ability to contribute to the prediction of degrading or faulty conditions for that particular device. The specific set of attributes being used and the identity of these attributes is vendor specific and proprietary.

9.5.2 Attribute values

Attribute values are used to represent the relative reliability of individual performance or calibration attributes. The valid range of attribute values is from 1 to 253 decimal. Higher attribute values indicate that the analysis algorithms being used by the device are predicting a lower probability of a degrading or faulty condition existing. Accordingly, lower attribute values indicate that the analysis algorithms being used by the device are predicting a higher probability of a degrading or faulty condition existing.

9.5.3 Attribute thresholds

Each attribute value has a corresponding attribute threshold limit which is used for direct comparison to the attribute value to indicate the existence of a degrading or faulty condition. The numerical values of the attribute thresholds are determined by the device manufacturer through design and reliability testing and analysis. Each attribute threshold represents the lowest limit to which its corresponding attribute value can be equal while still retaining a positive reliability status. Attribute thresholds are set at the device manufacturer's factory and cannot be changed in the field. The valid range for attribute thresholds is from 1 through 253 decimal.

9.5.4 Threshold exceeded condition

If one or more attribute values, whose Pre-failure bit of their status flag is set, are less than or equal to their corresponding attribute thresholds, then the device reliability status is negative, indicating an impending degrading or faulty condition.

9.5.5 SMART commands

The SMART commands provide access to attribute values, attribute thresholds and other logging and reporting information.

9.5.6 Off-line Read Scanning

The device provides the off-line read scanning feature with reallocation. This is the extension of the off-line data collection capability. The device performs the entire read scan with reallocation for the marginal sectors to prevent the user data lost.

If interrupted by the host during the read scanning, the device services the host command.

9.5.7 Error Log

Logging of reported errors is supported. The device provides information on the last five errors that the device reported as described in SMART error log sector. The device may also provide additional vendor specific information on these reported errors. The error log is not disabled when SMART is disabled. Disabling SMART shall disable the delivering of error log information via the SMART READ LOG SECTOR command.

If a device receives a firmware modification, all error log data is discarded and the device error count for the life of the device is reset to zero.

9.5.8 Self-test

The device provides the self-test features which are initiated by SMART Execute Off-line Immediate command. The self-test checks the fault of the device, reports the test status in Device Attributes Data and stores the test result in the SMART self-test log sector as described in SMART self-test log data structure. All SMART attributes are updated accordingly during the execution of self-test.

If interrupted by the host during the self-tests, the device services the host command.

If the device receives a firmware modification, all self-test log data is discarded.

9.6 Security Mode Feature Set

Security Mode Feature Set is a powerful security feature. With a device lock password, a user can prevent unauthorized access to hard disk device even if the device is removed from the computer.

The following commands are supported for this feature.

Security Set Password ('F1'h)
Security Unlock ('F2'h)
Security Erase Prepare ('F3'h)
Security Erase Unit ('F4'h)
Security Freeze Lock ('F5'h)
Security Disable Password ('F6'h)

9.6.1 Security mode

Following security modes are provided.

Device Locked mode The device disables media access commands after power on. Media accesses

commands are enabled by either a security unlock command or a security erases unit

command.

Device Unlocked mode The device enables all commands. If a password is not set this mode is entered after

power on, otherwise it is entered by a security unlock or a security erases unit command.

Device Frozen mode The device enables all commands except those which can update the device lock

function, set/change password. The device enters this mode via a Security Freeze Lock

command. It cannot guit this mode until power off.

9.6.2 Security Level

Following security levels are provided.

High level security When the device lock function is enabled and the User Password is forgotten the device

can be unlocked via a Master Password.

Maximum level security When the device lock function is enabled and the User Password is forgotten then only

the Master Password with a Security Erase Unit command can unlock the device. Then

user data is erased.

9.6.3 Password

This function can have 2 types of passwords as described below.

Master Password When the Master Password is set, the device does NOT enable the Device Lock Function,

and the device can NOT be locked with the Master Password, but the Master Password

can be used for unlocking the device locked.

Identify Device Information word 92 contains the value of the Master Password Revision

Code set when the Master Password was last changed. Valid values are 0001h through

FFFEh.

User Password The User Password should be given or changed by a system user. When the User

Password is set, the device enables the Device Lock Function, and then the device is

locked on next power on reset or hard reset.

The system manufacturer/dealer who intends to enable the device lock function for the end users, must set the master password even if only single level password protection is required.

9.6.4 Operation example

9.6.4.1 Master Password setting

The system manufacturer/dealer can set a new Master Password from default Master Password using the Security Set Password command, without enabling the Device Lock Function.

The Master Password Revision Code is set to FFFEh as shipping default by the HDD manufacturer

9.6.4.2 User Password setting

When a User Password is set, the device will automatically enter lock mode the next time the device is powered on.

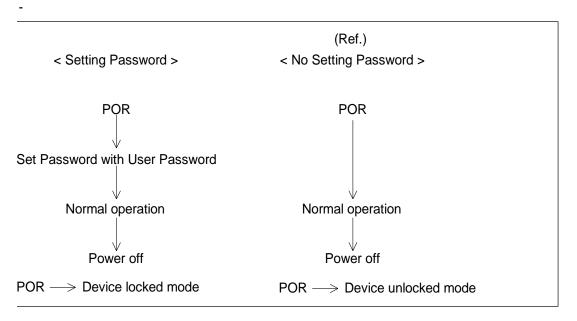


Figure 9 Initial Setting

Operation from POR after User Password is set 9.6.4.3

When Device Lock Function is enabled, the device rejects media access command until a Security Unlock command is successfully completed.

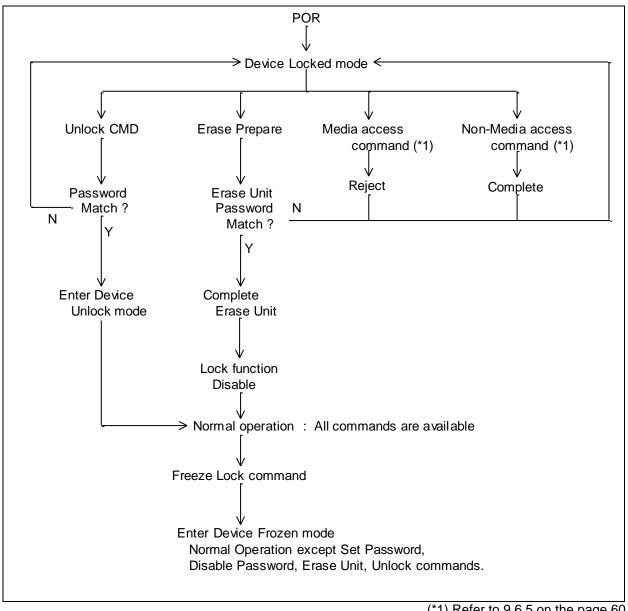


Figure 10 Usual Operation

(*1) Refer to 9.6.5 on the page.60

9.6.4.4 User Password Lost

If the User Password is forgotten and High level security is set, the system user can't access any data. However, the device can be unlocked using the Master Password.

If a system user forgets the User Password and Maximum security level is set, data access is impossible. However, the device can be unlocked using the Security Erase Unit command to unlock the device and erase all user data with the Master Password.

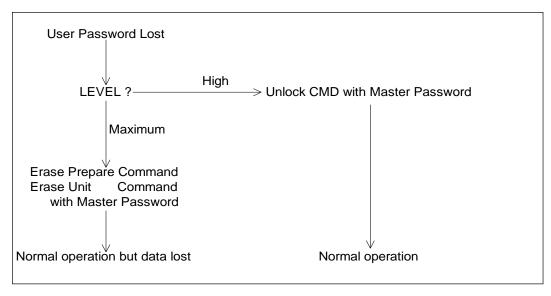


Figure 11 Password Lost

9.6.4.5 Attempt limit for SECURITY UNLOCK command

The SECURITY UNLOCK command has an attempt limit. The purpose of this attempt limit is to prevent that someone attempts to unlock the drive by using various passwords many times.

The device counts the password mismatch. If the password does not match, the device counts it up without distinguishing the Master password and the User password. If the count reaches 5, EXPIRE bit (bit 4) of Word 128 in Identify Device information is set, and then SECURITY ERASE UNIT command and SECURITY UNLOCK command are aborted until a hard reset or a power off. The count and EXPIRE bit are cleared after a power on reset or a hard reset.

9.6.5 Command Table

This table shows the device's response to commands when the Security Mode Feature Set (Device lock function) is enabled.

Command	Locked Mode	Unlocked Mode	Frozen Mode
Check Power Mode	Executable	Executable	Executable
Configure Stream	Command aborted	Executable	Executable
Crypto Scramble Ext (data encryption model only)	Command aborted	Executable	Executable
Device Configuration Restore	Command aborted	Executable	Executable
Device Configuration Freeze Lock	Command aborted	Executable	Executable
Device Configuration Identify	Command aborted	Executable	Executable
Device Configuration Set	Command aborted	Executable	Executable
Download Microcode	Command aborted	Executable	Executable
Download Microcode DMA	Command aborted	Executable	Executable
Execute Device Diagnostic	Executable	Executable	Executable
Flush Cache	Command aborted	Executable	Executable
Flush Cache Ext	Command aborted	Executable	Executable
Format Track	Command aborted	Executable	Executable
Identify Device	Executable	Executable	Executable
Idle	Executable	Executable	Executable
Idle Immediate	Executable	Executable	Executable
Initialize Device Parameters	Executable	Executable	Executable
NCQ Queue Management	Command aborted	Executable	Executable
Overwrite Ext	Command aborted	Executable	Executable
Read Buffer	Executable	Executable	Executable
Read DMA	Command aborted	Executable	Executable
Read DMA Ext	Command aborted	Executable	Executable
Read FPDMA Queued	Command aborted	Executable	Executable
Read Log Ext	Executable	Executable	Executable
Read Log DMA Ext	Executable	Executable	Executable
Read Multiple	Command aborted	Executable	Executable
Read Multiple Ext	Command aborted	Executable	Executable
Read Native Max Address	Executable	Executable	Executable
Read Native Max Ext	Executable	Executable	Executable
Read Sector(s)	Command aborted	Executable	Executable
Read Sector(s) Ext	Command aborted	Executable	Executable
Read Stream DMA Ext	Command aborted	Executable	Executable
Read Stream Ext	Command aborted	Executable	Executable
Read Verify Sector(s)	Command aborted	Executable	Executable
Read Verify Sector(s) Ext	Command aborted	Executable	Executable
Recalibrate	Executable	Executable	Executable
Request Sense Data Ext	Executable	Executable	Executable
Sanitize Freeze Lock Ext	Command aborted	Executable	Executable
Sanitize Status Ext	Executable	Executable	Executable

Table 33 Command table for device lock operation -1

Command	Locked Mode	Unlocked Mode	Frozen Mode
SCT Read/Write Long	Command aborted	Command aborted	Command aborted
SCT Write Same	Command aborted	Executable	Executable
SCT Error Recovery Control	Command aborted	Executable	Executable
SCT Feature Control	Command aborted	Executable	Executable
SCT Data Table	Command aborted	Executable	Executable
SCT Read Status	Executable	Executable	Executable
Security Disable Password	Command aborted	Executable	Command aborted
Security Erase Prepare	Executable	Executable	Command aborted
Security Erase Unit	Executable	Executable	Command aborted
Security Freeze Lock	Command aborted	Executable	Executable
Security Set Password	Command aborted	Executable	Command aborted
Security Unlock	Executable	Executable	Command aborted
Seek	Executable	Executable	Executable
Set Features	Executable	Executable	Executable
Set Max Address	Command aborted	Executable	Executable
Set Max Address Ext	Command aborted	Executable	Executable
Set Multiple Mode	Executable	Executable	Executable
Sleep	Executable	Executable	Executable
SMART Disable Operations	Executable	Executable	Executable
SMART Enable/Disable Attribute Autosave	Executable	Executable	Executable
SMART Enable Operations	Executable	Executable	Executable
SMART Execute Off-line Immediate	Executable	Executable	Executable
SMART Read Attribute Values	Executable	Executable	Executable
SMART Read Attribute Thresholds	Executable	Executable	Executable
SMART Return Status	Executable	Executable	Executable
SMART Save Attribute Values	Executable	Executable	Executable
SMART Read Log Sector	Executable	Executable	Executable
SMART Write Log Sector	Executable	Executable	Executable
SMART Enable/Disable Automatic Off-Line	Executable	Executable	Executable
Standby	Executable	Executable	Executable
Standby Immediate	Executable	Executable	Executable
Write Buffer	Executable	Executable	Executable
Write DMA	Command aborted	Executable	Executable
Write DMA Ext	Command aborted	Executable	Executable
Write DMA FUA Ext	Command aborted	Executable	Executable
Write FPDMA Queued	Command aborted	Executable	Executable
Write Log Ext	Command aborted	Executable	Executable
Write Log DMA Ext	Command aborted	Executable	Executable

Table 34 Command table for device lock operation -2

Command	Locked Mode	Unlocked Mode	Frozen Mode
Write Multiple	Command aborted	Executable	Executable
Write Multiple Ext	Command aborted	Executable	Executable
Write Multiple FUA Ext	Command aborted	Executable	Executable
Write Sector(s)	Command aborted	Executable	Executable
Write Sector(s) Ext	Command aborted	Executable	Executable
Write Stream DMA Ext	Command aborted	Executable	Executable
Write Stream Ext	Command aborted	Executable	Executable
Write Uncorrectable Ext	Command aborted	Executable	Executable

Table 35 Command table for device lock operation -3

9.7 Host Protected Area Feature

Host Protected Area Feature is to provide the 'protected area' which can not be accessed via conventional method. This 'protected area' is used to contain critical system data such as BIOS or system management information. The contents of entire system main memory may also be dumped into 'protected area' to resume after system power off. The LBA/CYL changed by following command affects the Identify Device Information.

The following set of commands is implemented for this function.

Read Native Max ADDRESS ('F8'h)
Set Max ADDRESS ('F9'h)

9.7.1 Example for operation (In LBA mode)

Assumptions:

For better understanding, the following example uses actual values for LBA, size, etc. Since it is just an example, these values could be different.

Device characteristics

Capacity (native) : 6,498,680,832 byte (6.4GB)

Max LBA (native) : 12,692,735 (C1ACFFh)

Required size for protected area : 206,438,400 byte

Required blocks for protected area : 403,200 (062700h)

Customer usable device size : 6,292,242,432 byte (6.2GB)

Customer usable sector count : 12,289,536 (BB8600h)

LBA range for protected area : BB8600h to C1ACFFh

1. Shipping HDDs from HDD manufacturer

When the HDDs are shipped from HDD manufacturer, the device has been tested to have usable capacity of 6.4GB besides flagged media defects not to be visible by system.

2. Preparing HDDs at system manufacturer

Special utility software is required to define the size of protected area and store the data into it. The sequence is:

Issue Read Native Max Address command to get the real device maximum LBA. Returned value shows that native device Maximum LBA is 12,692,735 (C1ACFFh) regardless of the current setting.

Make entire device be accessible including the protected area by setting device Maximum LBA as 12,692,735 (C1ACFFh) via Set Max Address command. The option could be either nonvolatile or volatile.

Test the sectors for protected area (LBA >= 12,289,536 (BB8600h)) if required.

Write information data such as BIOS code within the protected area.

Change maximum LBA using Set Max Address command to 12,289,535 (BB85FFh) with nonvolatile option.

From this point, the protected area cannot be accessed till next Set Max Address command is issued. Any BIOSes, device drivers, or application software access the HDD as if that is the 6.2GB device because the device acts exactly the same as real 6.2GB device does.

3. Conventional usage without system software support

Since the HDD works as 6.2GB device, there is no special care to use this device for normal use.

4. Advanced usage using protected area

The data in the protected area is accessed by following.

Issue Read Native Max Address command to get the real device maximum LBA. Returned value shows that native device Maximum LBA is 12,692,735 (C1ACFFh) regardless of the current setting.

Make entire device be accessible including the protected area by setting device Maximum LBA as 12,692,735 (C1ACFFh) via Set Max Address command with volatile option. By using this option, unexpected power removal or reset will not make the protected area remained accessible.

Read information data from protected area.

Issue hard reset or POR to inhibit any access to the protected area.

9.7.2 Security extensions

- 1. Set Max Set Password
- 2. Set Max Lock
- 3. Set Max Freeze Lock
- Set Max Unlock.

The Set Max Set Password command allows the host to define the password to be used during the current power on cycle. The password does not persist over a power cycle but does persist over a hardware or software reset. This password is not related to the password used for the Security Mode Feature set. When the password is set the device is in the Set_Max_Unlocked mode. The Set Max Lock command allows the host to disable the Set Max commands (except set Max Unlock) until the next power cycle or the issuance and acceptance of the Set Max Unlock command. When this command is accepted the device is in the Set_Max_Locked mode. The Set Max Unlock command changes the device from the Set_Max_Locked mode to the Set_Max_Unlocked mode. The Set Max Freeze Lock command allows the host to disable the Set Max commands (including Set Max UNLOCK) until the next power cycle. When this command is accepted the device is in the Set_Max_Frozen mode.

The IDENTIFY DEVICE response word 83, bit 8 indicates that this extension is supported if set, and word 86, bit 8 indicate the Set Max security extension enabled if set.

9.8 Write Cache Function

Write cache is a performance enhancement whereby the device reports as completing the write command (Write Sector(s), Write Multiple and Write DMA) to the host as soon as the device has received all of the data into its buffer. And the device assumes responsibility to write the data subsequently onto the disk.

- While writing data after completed acknowledgment of a write command, soft reset or hard reset does not affect
 its operation. But power off terminates writing operation immediately and unwritten data are to be lost.
- Soft reset, Standby (Immediate) command and Flush Cache commands during writing the cached data are
 executed after the completion of writing to media. So the host system can confirm the completion of write cache
 operation by issuing Soft reset, Standby (Immediate) command or Flush Cache command to the device before
 power off.

9.9 Reassign Function

The reassign Function is used with read commands and write commands. The sectors of data for reassignment are prepared as the spare data sector.

This reassignment information is registered internally, and the information is available right after completing the reassign function. Also the information is used on the next power on reset or hard reset.

If the number of the spare sector reaches 0 sectors, the reassign function will be disabled automatically.

The spare tracks for reassignment are located at regular intervals from Cylinder 0. As a result of reassignment, the physical location of logically sequenced sectors will be dispersed.

9.9.1 Auto Reassign Function

The sectors that show some errors may be reallocated automatically when specific conditions are met. The spare tracks for reallocation are located at regular intervals from Cylinder 0. The conditions for auto-reallocation are described below.

Non recovered write errors

When a write operation can not be completed after the Error Recovery Procedure (ERP) is fully carried out, the sector(s) are reallocated to the spare location. An error is reported to the host system only when the write cache is disabled and the auto reallocation is failed.

If the write cache function is ENABLED, and when the number of available spare sectors reaches 0 sectors, both auto reassign function and write cache function are disabled automatically.

Non recovered read errors

When a read operation is failed after defined ERP is fully carried out, a hard error is reported to the host system. This location is registered internally as a candidate for the reallocation. When a registered location is specified as a target of a write operation, a sequence of media verification is performed automatically. When the result of this verification meets the criteria, this sector is reallocated.

Recovered read errors

When a read operation for a sector failed once then recovered at the specific ERP step, this sector of data is reallocated automatically. A media verification sequence may be run prior to the relocation according to the predefined conditions.

9.10 Power-up in Standby feature set

Power-Up In Standby feature set allows devices to be powered-up into the Standby power management state to minimize inrush current at power-up and to allow the host to sequence the spin-up of devices.

This feature set will be enabled/disabled via the SET FEATURES command. The enabling of this feature set shall be persistent after power cycle.

A device needs a SET FEATURES subcommand to spin-up to active state when the device has powered-up into Standby. The device remains in Standby until the SET FEATURES subcommand is received.

If power-up into Standby is enabled, when an IDENTIFY DEVICE is received while the device is in Standby as a result of powering up into Standby, the device shall set word 0 bit 2 to one to indicate that the response is incomplete, then only words 0 and 2 are correctly reported.

The IDENTIFY DEVICE information indicates the states as follows:

- identify device information is complete or incomplete
- this feature set is implemented
- this feature set is enabled or disabled
- the device needs the Set Features command to spin-up into active state

9.11 Advanced Power Management feature set (APM)

This feature allows the host to select an advanced power management level. The advanced power management level is a scale from the lowest power consumption setting of 01h to the maximum performance level of FEh. Device performance may increase with increasing advanced power management levels. Device power consumption may increase with increasing advanced power management levels. The advanced power management levels contain discrete bands, described in the section of Set Feature command in detail. This feature set uses the following functions:

- 1. A SET FEATURES subcommand to enable Advanced Power Management
- 2. A SET FEATURES subcommand to disable Advanced Power Management

Advanced Power Management is independent of the Standby timer setting. If both Advanced Power Management and the Standby timer are set, the device will go to the Standby state when the timer times out or the device's Advanced Power Management algorithm indicates that the Standby state should be entered.

The IDENTIFY DEVICE response word 83, bit 3 indicates that Advanced Power Management feature is supported if set. Word 86, bit 3 indicates that Advanced Power Management is enabled if set. Word 91, bits 7-0 contain the current Advanced Power Management level if Advanced Power Management is enabled.

9.12 48-bit Address Feature Set

The 48-bit Address feature set allows devices:

- a) with capacities up to 281,474,976,710,655 logical sectors (i.e., up to 144,115,188,075,855,360 bytes for a 512-byte logical block device); and
 - b) to transfer up to 65 536 logical sectors in a single command.

The 48-bit Address feature set operates in LBA addressing only. Devices also implement commands using 28-bit addressing, and 28-bit and 48-bit commands may be intermixed.

Support of the 48-bit Address feature set is indicated in the Identify Device response bit 10 words 83. In addition, the maximum user LBA address accessible by 48-bit addressable commands is contained in Identify Device response words 230 through 233.

When the 48-bit Address feature set is implemented, the native maximum address is the value returned by a Read Native Max Address Ext command. If the native maximum address is equal to or less than 268,435,455, a Read Native Max Address shall return the native maximum address. If the native maximum address is greater than 268,435,455, a Read Native Max Address shall return a value of 268,435,455.

9.13 Streaming feature Set

The Streaming feature set is an optional feature set that allows a host to request delivery of data from a contiguous logical block address range within an allotted time. This places a priority on time to access the data rather than the integrity of the data. Streaming feature set commands only support 48-bit addressing.

A device that implements the Streaming feature set shall implement the following minimum set of commands:

- Configure Stream
- Read Stream Ext
- Write Stream Ext
- Read Stream DMA Ext
- Write Stream DMA Ext
- Read Log Ext

Support of the Streaming feature set is indicated in Identify Device work 84 bit 4.

Note that PIO versions of these commands limit the transfer rate (16.6 MB/s), provide no CRC protection, and limit status reporting as compared to a DMA implementation.

9.13.1 Streaming commands

The streaming commands are defined to be time critical data transfers rather than the standard data integrity critical commands. Each command shall be completed within the time specified in the Configure Stream command or in the streaming command itself in order to ensure the stream requirements of the AV type application. The device may execute background tasks as long as the Read Stream and Write Stream command execution time limits are still met.

Using the Configure Stream command, the host may define the various stream properties including the default Command Completion Time Limit (CCTL) to assist the device in setting up its caching for best performance. If the host does not use a Configure Stream command, the device shall use the CCTL specified in each streaming command, and the time limit is effective for one time only. If the CCTL is not set by Configure Stream command, the operation of a streaming command with a zero CCTL is device vendor specific. If Stream ID is not set by a Configure Stream command, the device shall operate according to the Stream ID set by the streaming command. The operation is device vendor specific.

The streaming commands may access any user LBA on a device. These commands may be interspersed with non-streaming commands, but there may be an impact on performance due to the unknown time required to complete the non-streaming commands.

The streaming commands should be issued using a specified minimum number of sectors transferred per command, as specified in word 95 of the Identify Device response. The transfer length of a request should be a multiple of the minimum number of sectors per transfer.

The host provided numeric stream identifier, Stream ID, may be used by the device to configure its resources to support the streaming requirements of the AV content. One Stream ID may be configured for each read and write operation with different command completion time limits be each Configure Stream command.

9.13.1.1 **Urgent bit**

The Urgent bit in the Read Stream and Write Stream commands specifies that the command should be completed in the minimum possible time by the device and shall be completed within the specified Command Completion Time Limit.

9.13.1.2 Flush to Disk bit

The Flush to Disk bit in the Write Stream command specifies that all data for the specified stream shall be flushed to the media before posting command completion. If a host requests flushes at times other than the end of each Allocation Unit, streaming performance may be degraded. The Set Features command to enable/disable caching shall not affect caching for streaming commands.

9.13.1.3 Not Sequential bit

The Not Sequential bit specifies that the next read stream command with the same Stream ID may not be sequential in LBA space. This information helps the device with pre-fetching decisions.

9.13.1.4 Read Continuous bit

If the Read Continuous bit is set to one for the command, the device shall transfer the requested amount of data to the host within the Command Completion Time Limit even if an error occurs. The data sent to the host by the device in an error condition is vendor specific.

9.13.1.5 Write Continuous bit

If the Write Continuous bit is set to one for the command, and an error is encountered, the device shall complete the request without posting an error. If an error cannot be resolved within the Command Completion Time Limit, the erroneous section on the media may be unchanged or may contain undefined data. A future read of this area may not report an error, even though the data is erroneous.

9.13.1.6 Handle Streaming Error bit

The Handle Streaming Error bit specifies to the device that this command starts at the LBA of a recently reported error section, so the device may attempt to continue its corresponding error recovery sequence where it left off earlier. This mechanism allows the host to schedule error recovery and defect management for content critical data.

9.13.2 Streaming Logs

The Streaming Data Transfer feature set provides two error logs; the Read Stream Error Log (11.21.7) and the Write Stream Error Log (11.21.8). These error logs are 512 bytes in length and retain the last 31 errors that occurred during any Streaming Data transfer. A host can access these logs via the READ LOG EXT command (11.21). The information included in these error logs is volatile and is not maintained across power cycles, hard resets, or sleep.

9.14 SATA BIST (Built-in Self Test)

The device supports the following BIST modes, and begins operations when it receives BIST Activate FIS.

- F Far End Analog Loopback.
- L Far End Retimed Loopback
- T Far End Transmit only
- A ALIGN Bypass (valid only in combination with T bit)
- S Bypass Scrambling (valid only in combination with T bit)

9.15 SATA Interface Power Management

The device supports both receiving host-initiated interface power management requests and initiating interface power management. The device initiates interface power management when the device enters its power saving mode whose power consumption is lower than Idle mode.

9.16 Software Setting Preservation

When a device is enumerated, software will configure the device using SET FEATURES and other commands. These software settings are often preserved across software reset but not necessarily across hardware reset. In Parallel ATA, only commanded hardware resets can occur, thus legacy software only reprograms settings that are cleared for the particular type of reset it has issued. In Serial ATA, COMRESET is equivalent to hard reset and a non-commanded COMRESET may occur if there is an asynchronous loss of signal. Since COMRESET is equivalent to hardware reset, in the case of an asynchronous loss of signal some software settings may be lost without legacy software knowledge. In order to avoid losing important software settings without legacy driver knowledge, the software settings preservation ensures that the value of important software settings is maintained across a COMRESET. Software settings preservation may be enabled or disabled using SET FEATURES with a subcommand code of 06h. If a device supports software settings preservation, the feature shall be enabled by default.

9.16.1 COMRESET Preservation Requirements

The software settings that shall be preserved across COMRESET are listed below. The device is only required to preserve the indicated software setting if it supports the particular feature/command the setting is associated with. **INITIALIZE DEVICE PARAMETERS:** Device settings established with the INITIALIZE DEVICE PARAMETERS command.

<u>Power Management Feature Set Standby Timer:</u> The Standby timer used in the Power Management feature set.

<u>Read/Write Stream Error Log:</u> The Read Stream Error Log and Write Stream Error Logs (accessed using READ LOG EXT and WRITE LOG EXT).

<u>Security mode state:</u> The security mode state established by Security Mode feature set commands (refer to section 6.13 of the ATA/6 specification). The device shall not transition to a different security mode state based on a COMRESET. For example, the device shall not transition from the SEC5: Unlocked / not Frozen state to state SEC4: Security enabled / Locked when a COMRESET occurs, instead the device shall remain in the SEC5: Unlocked / not Frozen state.

SECURITY FREEZE LOCK: The Frozen mode setting established by the SECURITY FREEZE LOCK command.

SECURITY UNLOCK: The unlock counter that is decremented as part of a failed SECURITY UNLOCK command attempt.

SET ADDRESS MAX (EXT): The maximum LBA specified in SET ADDRESS MAX or SET ADDRESS MAX EXT.

<u>SET FEATURES (Write Cache Enable/Disable):</u> The write cache enable/disable setting established by the SET FEATURES command with subcommand code of 02h or 82h.

<u>SET FEATURES (Set Transfer Mode)</u>: PIO, Multiword, and UDMA transfer mode settings established by the SET FEATURES command with subcommand code of 03h.

<u>SET FEATURES (Advanced Power Management Enable/Disable):</u> The advanced power management enable/disable setting established by the SET FEATURES command with subcommand code of 05h or 85h. The advanced power management level established in the Sector Count register when advanced power management is enabled (SET FEATURES subcommand code 05h) shall also be preserved.

<u>SET FEATURES (Read Look-Ahead)</u>: The read look-ahead enable/disable setting established by the SET FEATURES command with subcommand code of 55h or AAh.

<u>SET FEATURES (Reverting to Defaults):</u> The reverting to power-on defaults enable/disable setting established by the SET FEATURES command with a subcommand code of CCh or 66h.

SET MULTIPLE MODE: The block size established with the SET MULTIPLE MODE command.

SANITIZE FREEZE LOCK MODE: The Sanitize Frozen state established by the SANITIZE FREEZE LOCK EXT command.

9.17 Serial ATA Revision 3.0 Optional Features

There are several optional features defined in Serial ATA Revision 3.0. The following shows whether these features are supported or not.

9.17.1 Asynchronous Signal Recovery

The device supports asynchronous signal recovery defined in Serial ATA Revision 3.0.

9.17.2 Device Power Connector Pin 11 Definition

Serial ATA Revision 3.0 specification defines that Pin 11 of the power segment of the device connector may be used to provide the host with an activity indication and disabling of staggered spin-up.

9.17.3 Phy Event Counters

Phy Event Counters are an optional feature to obtain more information about Phy level events that occur on the interface. This information may aid designers and integrators in testing and evaluating the quality of the interface. A device indicates whether it supports the Phy event counters feature in IDENTIFY (PACKET) DEVICE Word 76, bit 10. The host determines the current values of Phy event counters by issuing the READ LOG EXT command with a log page of 11h. The counter values shall not be retained across power cycles. The counter values shall be preserved across COMRESET and software resets.

The counters defined can be grouped into three basic categories: those that count events that occur during Data FIS transfers, those that count events that occur during non-Data FIS transfers, and events that are unrelated to FIS transfers. Counters related to events that occur during FIS transfers may count events related to host-to-device FIS transfers, device-to-host FIS transfers, or bi-directional FIS transfers. A counter that records bi-directional events is not required to be the sum of the counters that record the same events that occur on device-to-host FIS transfers and host-to-device FIS transfers.

Implementations that support Phy event counters shall implement all mandatory counters, and may support any of the optional counters as shown in 0. Note that some counters may increment differently based on the speed at which non-Data FIS retries are performed by the host and device. Implementations may record CRC and non-CRC error events differently. For example, there is a strong likelihood that a disparity error may cause a CRC error. Thus, the disparity error may cause both the event counter that records non-CRC events and the event counter that records CRC events to be incremented for the same event. Another example implementation difference is how a missing EOF event is recorded; a missing EOF primitive may imply a bad CRC even though the CRC on the FIS may be correct. These examples illustrate that some Phy event counters are sensitive to the implementation of the counters themselves, and thus these implementation sensitive counters cannot be used as an absolute measure of interface quality between different implementations.

9.17.3.1 Counter Reset Mechanisms

There are two mechanisms by which the host can explicitly cause the Phy counters to be reset.

The first mechanism is to issue a BIST Activate FIS to the device. Upon reception of a BIST Activate FIS the device shall reset all Phy event counters to their reset value. The second mechanism uses the READ LOG EXT command. When the device receives a READ LOG EXT command for log page 11h and bit 0 in the Features register is set to one, the device shall return the current counter values for the command and then reset all Phy event counter values.

9.17.3.2 Counter Identifiers

Each counter begins with a 16-bit identifier. 0 defines the counter value for each identifier. Any unused counter slots in the log page should have a counter identifier value of 0h.

Optional counters that are not implemented shall not be returned in log page 11h. A value of '0' returned for a counter means that there have been no instances of that particular event. There is no required ordering for event counters within the log page; the order is arbitrary and selected by the device vendor.

For all counter descriptions, 'transmitted' refers to items sent by the device to the host and 'received' refers to items received by the device from the host.

Bits 14:12 of the counter identifier convey the number of significant bits that counter uses. All counter values consume a multiple of 16-bits. The valid values for bits 14:12 and the corresponding counter sizes are:

1h 16-bit counter

2h 32-bit counter

3h 48-bit counter

4h 64-bit counter

Any counter that has an identifier with bit 15 set to one is vendor specific. This creates a vendor specific range of counter identifiers from 8000h to FFFFh. Vendor specific counters shall observe the number of significant bits 14:12 as defined above.

Identifier (Bits 11:0)	Mandatory / Optional	Description
000h	Mandatory	No counter value; marks end of counters in the page
001h	Mandatory	Command failed and ICRC bit set to one in Error register
002h	Optional	R_ERR response for Data FIS
003h	Optional	R_ERR response for Device-to-Host Data FIS
004h	Optional	R_ERR response for Host-to-Device Data FIS
005h	Optional	R_ERR response for Non-data FIS
006h	Optional	R_ERR response for Device-to-Host Non-data FIS
007h	Optional	R_ERR response for Host-to-Device Non-data FIS
008h	Optional	Not supported (Device-to-Host non-Data FIS retries)
009h	Optional	Transitions from drive PhyRdy to drive PhyNRdy
00Ah	Mandatory	Signature Device-to-Host Register FISes sent due to a COMRESET
00Bh	Optional	CRC errors within a Host-to-Device FIS
00Dh	Optional	Non-CRC errors within a Host-to-Device FIS
00Fh	Optional	Not supported (R_ERR response for Host-to-Device Data FIS due to CRC errors)
010h	Optional	Not supported (R_ERR response for Host-to-Device Data FIS due to non-CRC errors)
012h	Optional	Not supported (R_ERR response for Host-to-Device Non-data FIS due to CRC errors)
013h	Optional	Not supported (R_ERR response for Host-to-Device Non-data FIS due to non-CRC errors)

Table 36 Phy Event Counter Identifiers

9.17.3.2.1 Counter Definitions

The counter definitions in this section specify the events that a particular counter identifier represents.

9.17.3.2.1.1**Identifier 000h**

There is no counter associated with identifier 000h. A counter identifier of 000h indicates that there are no additional counters in the log page.

9.17.3.2.1.2**Identifier 001h**

The counter with identifier 001h returns the number of commands that returned an ending status with the ERR bit set to one in the Status register and the ICRC bit set to one in the Error register.

9.17.3.2.1.3**Identifier 002h**

The counter with identifier 002h returns the sum of (the number of transmitted Device-to-Host Data FISes to which the host responded with R_ERRP) and (the number of received Host-to-Device Data FISes to which the device responded with R_ERRP).

9.17.3.2.1.4**Identifier 003h**

The counter with identifier 003h returns the number of transmitted Device-to-Host Data FISes to which the host responded with R_ERRP .

9.17.3.2.1.5Identifier 004h

The counter with identifier 004h returns the number of received Host-to-Device Data FISes to which the device responded with R_ERRP. The count returned for identifier 004h is not required to be equal to the sum of the counters with identifiers 00Fh and 010h.

9.17.3.2.1.6**Identifier 005h**

The counter with identifier 005h returns the sum of (the number of transmitted Device-to-Host non-Data FISes to which the host responded with R_ERR_P) and (the number of received Host-to-Device non-Data FISes to which the device responded with R_ERR_P). Retries of non-Data FISes are included in this count.

9.17.3.2.1.7Identifier 006h

The counter with identifier 006h returns the number of transmitted Device-to-Host non-Data FISes to which the host responded with R_ERRP. Retries of non-Data FISes are included in this count.

9.17.3.2.1.8Identifier 007h

The counter with identifier 007h returns the number of received Host-to-Device non-Data FISes to which the device responded with R_ERRP. Retries of non-Data FISes are included in this count.

9.17.3.2.1.9**Identifier 009h**

The counter with identifier 009h returns the number of times the device transitioned into the PHYRDY state from the PHYNRDY state, including but not limited to asynchronous signal events, power management events, and COMRESET events. If interface power management is enabled, then this counter may be incremented due to interface power management transitions.

9.17.3.2.1.10 Identifier 00Ah

The counter with identifier 00Ah returns the number of transmitted Device-to-Host Register FISes with the device reset signature in response to a COMRESET, which were successfully followed by an R_OK from the host.

9.17.3.2.1.11 **Identifier 00Bh**

The counter with identifier 00Bh returns the number of received Host-to-Device FISes of all types (Data and non-Data) to which the device responded with R_ERRP due to CRC error.

9.17.3.2.1.12 **Identifier 00Dh**

The counter with identifier 00Dh returns the number of received Host-to-Device FISes of all types (Data and non-Data) to which the devices responded with R_ERRp for reasons other than CRC error.

9.17.3.3 READ LOG EXT Log Page 11h

READ LOG EXT log page 11h is one page (512 bytes) in length. The first Dword of the log page contains information that applies to the rest of the log page. Software should continue to process counters until a counter identifier with value 0h is found or the entire page has been read. A counter identifier with value 0h indicates that the log page contains no more counter values past that point. Log page 11h is defined in Table 37.

Byte	7	6	5	4	3	2	1	0		
0	Reserved									
1		Reserved								
2				Res	erved					
3				Res	erved					
n		Counter n Identifier								
n+1		Counter it identifier								
n+2										
n +				Counte	r n Value					
Counter				Oddrite	i ii value					
n Length										
508		Reserved								
509										
510										
511				Data Structu	ire Checksum	า				

Table 37 READ LOG EXT Log Page 11h data structure definition

Counter n Identifier

Phy event counter identifier that corresponds to Counter n Value. Specifies the particular event counter that is being reported. The Identifier is 16 bits in length.

Valid identifiers are listed in Table 37.

Counter n Value

Value of the Phy event counter that corresponds to Counter n Identifier. The number of significant bits is determined by Counter n Identifier bits 14:12 (as defined in section 4.3.2). The length of Counter n Value shall always be a multiple of 16-bits. All counters are one-extended. For example, if a counter is only physically implemented as 8-bits when it reaches the maximum value of 0xFF, it shall be one-extended to 0xFFF. The counter shall stop (and not wrap to zero) after reaching its maximum value.

Counter n Length

Size of the Phy event counter as defined by bits 14:12 of Counter n Identifier.

The size of the Phy event counter shall be a multiple of 16-bits.

Data Structure Checksum

The data structure checksum is the 2's complement of the sum of the first 511 bytes in the data structure. Each byte shall be added with unsigned arithmetic and overflow shall be ignored. The sum of all 512 bytes of the data structure will be zero when the checksum is correct.

Reserved All reserved fields shall be cleared to zero

9.17.4 NCQ Queue Management (63h)

The NCQ Queue Management feature allows the host to manage the outstanding NCQ commands and/or affect the processing of NCQ commands.

The NCQ Queue Management command is a non-data NCQ command. Only specified NCQ Queue Management subcommands are executed as Immediate NCQ commands.

If NCQ is disabled and an NCQ Queue Management command is issued to the device, then the device aborts the command with the ERR bit set to one in the Status register and the ABRT bit set to one in the Error register. This command is prohibited for devices that implement the PACKET feature set. The queuing behavior of the device depends on which subcommand is specified.

Register	7	6	5	4	3	2	1	0		
Features(7:0)		Subcomma	ind Specific			Subcommand				
Features(15:8)				Rese	erved					
Count(7:0)	TAG					Rese	rved			
Count(15:8)		Reserved								
LBA(7:0)	Subcommand Specific (TTAG)					Reserved				
LBA(15:8)										
LBA(39:24)				Poor	erved					
LBA(23:16)				Rest	erveu					
LBA(47:40)										
Device	Res 1 Res 0 Reserved									
Command	63h									

Table 38 NCQ Queue Management – Command definition

Table 38 defines the Subcommand values. If an invalid subcommand is specified, then the device aborts the command with the ERR bit set to one in the Status register, the ABRT bit set to one in the Error register, and causes all outstanding commands to be aborted.

Subcommand	Description	Reference		
0h	Abort NCQ queue	11.15.1		
1h	Deadline Handling	11.15.2		
2h - Fh	Reserved	-		

Table 39 Subcommand Field

Subcommand Specific (TTAG) is the selected queue TAG. This allows the host to select the specific outstanding queued command to be managed.

The error and normal returns for this command are subcommand specific.

9.17.4.1 Abort NCQ Queue Subcommand (0h)

A Subcommand set to 0h specifies the Abort NCQ Queue subcommand(see 11.15.1). The Abort NCQ Queue subcommand is an immediate NCQ command. Support for this subcommand is indicated in the NCQ Queue Management log (see 9.17.4.3).

The Abort NCQ Queue subcommand affects only those NCQ commands for which the device has indicated command acceptance before accepting this NCQ Queue Management command.

This command is prohibited for devices that implement the PACKET feature set.

Normal Outputs

If a supported Abort Type parameter is specified, then the device indicates success, even if the command results in no commands being aborted.

When an Abort NCQ Queue command completes successfully, a Set Device Bits FIS is sent to the host to complete the Abort subcommand and commands that were aborted as a consequence of the Abort subcommand by setting the ACT bits for those commands to one. This SDB FIS may also indicate other completed commands.

Error Outputs

The device returns command aborted if:

- a) NCQ is disabled and an Abort NCQ queue command is issued to the device;
- b) The value of the TTAG field equals the value of the TAG field;
- c) The value of the TTAG field is an invalid TAG number; or
- d) An unsupported Abort type parameter is specified.

9.17.4.2 Deadline Handling Subcommand (1h)

A Subcommand set to 1h specifies the Deadline Handling Subcommand(see 11.15.2). This subcommand controls how NCQ Streaming commands are processed by the device. Support for this subcommand is indicated in the NCQ Queue Management Log (see 9.17.4.3).

The state of the WDNC and RDNC bits are preserved across software resets and COMRESETs (via Software Setting Preservations), and are not preserved across power cycles.

Normal Outputs

If this Deadline Handling Subcommand command is supported, the device returns command completed with no error.

When a Deadline Handling Subcommand completes successfully, a Set Device Bits FIS is sent to the host to complete the Deadline Handling subcommand. This SDB FIS may also indicate other completed commands.

Error Outputs

The device returns command aborted if:

- a) NCQ is disabled and a Deadline Handling command is issued to the device;
- b) The value of the TTAG field equals the value of the TAG field;
- c) The value of the TTAG field is an invalid TAG number; or
- d) An unsupported Abort type parameter is specified.

9.17.4.3 READ LOG EXT Log Page 12h

To determine the supported NCQ Queue Management subcommands and their respective features, host software reads log address 12h. This log is supported if the NCQ Queue Management command is supported (i.e., IDENTIFY DEVICE word 77 bit 5 is set to one). Table 40 defines the 512 bytes that make up the SATA NCQ Queue Management log. The value of the General Purpose Logging Version word is 0001h.

Byte	7	6	5	4	3	2	1	0
0	F	Reserved		Abort Selected TTAG	Abort Non- Streaming	Abort Streaming	Abort All	Abort NCQ
1								
2					Reserved			
3								
4				Reserved		RDNC	WDNC	Deadline Handling
5								
6		Reserved						
7								
8511		•		_	Reserved	_		

Table 40 NCQ Queue Management Log (12h) data structure definition

9.17.4.3.1 Supports the Abort NCQ subcommand

If Supports the Abort NCQ subcommand is set to one, then the device supports the Abort NCQ Queue command (11.15.1). If Supports the Abort NCQ subcommand is cleared to zero, then the device does not support the Abort NCQ Queue command.

9.17.4.3.2 Supports Abort All

If Supports Abort All is set to one, then the device supports the value of Abort All for the Abort Type parameter of the Abort NCQ Queue command. If Supports Abort All is cleared to zero, then the device does not support the value of Abort All for the Abort Type parameter of the Abort NCQ Queue command.

9.17.4.3.3 Supports Abort Streaming

If Supports Abort Streaming is set to one, then the device supports the value of Abort Streaming for the Abort Type parameter of the Abort NCQ Queue command. If Supports Abort Streaming is cleared to zero, then the device does not support the value of Abort Streaming for the Abort Type parameter of the Abort NCQ Queue command.

9.17.4.3.4 Supports Abort Non-Streaming

If Supports Abort Non-Streaming is set to one, then the device supports the value of Abort Non-Streaming for the Abort Type parameter of the Abort NCQ Queue command. If Supports Abort Non-Streaming is cleared to zero, then the device does not support the value of Abort Non-Streaming for the Abort Type parameter of the Abort NCQ Queue command.

9.17.4.3.5 Supports the Abort Selected TTAG

If Supports Abort Selected TTAG is set to one, then the device supports the value of Abort Selected for the Abort Type parameter of the Abort NCQ Queue command. If Supports Abort Selected TTAG is cleared to zero, then the device does not support the value of Abort Selected for the Abort Type parameter of the Abort NCQ Queue command.

9.17.4.3.6 Supports the Deadline Handling subcommand

If Supports the Deadline Handling subcommand is set to one, then the device supports the Deadline Handling command. If the Supports the Deadline Handling subcommand is cleared to zero, then the device does not support the Deadline Handling command.

9.17.4.3.7 **Supports WDNC**

If Supports WDNC is set to one, then the device supports the WDNC bit of the DEADLINE HANDLING command. If Supports WDNC is cleared to zero, then the device does not support the WDNC bit of the DEADLINE HANDLING command.

9.17.4.3.8 **Supports RDNC**

If Supports RDNC is set to one, then the device supports the RDNC bit of the Deadline Handling command. If Supports RDNC is cleared to zero, then the device does not support the WDNC bit of the Deadline Handling command.

9.18 SCT Command Transport feature Set

9.18.1 Overview

9.18.1.1 Introduction

SMART Command Transport (SCT) is the method for the drive to receive commands using log page E0h and transporting data using log page E1h. These log pages are used as follows:

	Log page E0h	Log Page E1h					
Write log page	Issue Command	Send Data to the drive					
Read log page	Return Status	Received Data from the drive					

Table 41 SCT Log Page and direction

There are two ways to access the log pages: using SMART READ/WRITE LOG and READ/WRITE LOG EXT. Both sets of commands access the same log pages and provide the same capabilities.

The log directory for log pages E0h and E1h should report a length of one. The length of log page E1h does not indicate the length of an SCT data transfer.

If SMART is supported, but not enabled, the drive supports SMART READ/WRITE LOG for Log page E0h and E1h.

If security is enabled and password has not been issued to unlock the device, all SCT commands will fail.

9.18.1.2 Capability definition

Capability Identification is performed by issuing Identify Device command. Word 206 of Identify Data is used to determine if SCT is enabled and which SCT Action Codes are supported.

Word		Description							
206	SCT Com	mmand set support							
	15-12	Vendor Specific							
	11-6	Reserved							
	5	Action Code 5 (SCT Data Table) supported							
	4	Action Code 4 (Features Control) supported							
	3	Action Code 3 (Error Recovery Control) supported							
	2	Action Code 2 (SCT Write Same) supported							
	1	Obsolete							
	0	SCT Feature Set supported (includes SCT status)							

Table 42 Identify Device Information Word 206

9.18.1.3 SCT Command Nesting and intermingling with Standard commands

In general, standard ATA commands can be intermingled with SCT Commands but SCT commands cannot be nested. SCT commands that do require a follow-on data transfer operation never have an issue with being intermixed with any ATA commands or each other. SCT commands that do require data transfer, on the other hand, may not be nested; that is, if a key command that requires a data transfer is issued, all data transfer – to or from the host – must complete before another SCT command is issued. In most cases, however, ATA read/write commands may be inserted in between SCT data transfers, that is, between complete SMART Read Log/Write Log commands. Furthermore, any reset (power-on, software or hardware) will cause the SCT command to be aborted.

9.18.1.4 **Resets**

If an SCT command is executing, any reset including Soft Reset, Hard Reset, COMRESET, and Power-On Reset all cause the command to be terminated. This could result in partial command execution or data loss. There is no indication once the drive becomes ready that the previous command was terminated.

9.18.2 SCT Command Protocol

9.18.2.1 Command Transport

SCT Command Transport occurs when a 512-byte data packet (called "Key Sector") is created and the written to SMART or extended log page E0h. The key sector specifies Action and Function Codes along with the parameters that are required to perform the action.

9.18.2.1.1 Issue SCT Command Using SMART

Command Block Output	t Re	egis	ster	s				
Register	7 6 5 4 3 2 1						0	
Feature		D6h						
Sector Count	01h							
Sector Number				E)h			
Cylinder Low				4F	-h			
Cylinder High	C2h							
Device/Head	D						-	
Command	B0h							

Table 43 Output Registers of SCT Command Using SMART

Command Block Input I	Reg	iste	ers	(Su	CCE	ess)	
Register	7 6 5 4 3 2 1						0	
Error				00)h			
Sector Count	Depends on command (LSB)							
Sector Number	Depends on command (MSB)							
Cylinder Low			nbe tran)
Cylinder High	Number of sectors to transfer (MSB)							
Device/Head						-		
Status	50h							

Command Block Input F	Reg	iste	ers	(Er	ror))		
Register 7 6 5 4 3 2 1						0		
Error				04	4h			
Sector Count	Extended Status code (LSB)							
Sector Number	Extended Status code (MSB)							
Cylinder Low					se r (L)
Cylinder High	Number of sectors to transfer (MSB))
Device/Head	-	-	-	-	-	-	-	-
Status	51h						•	

Table 44 Input Registers of SCT Command Using SMART

9.18.2.1.2 Issue SCT Command Using Write Log Ext

Command Blo	ock Outpu	t Re	gis	ster	s				
Register			6	5	4	3	2	1	0
Feature	Current	Reserved							
	Previous	Reserved							
Sector Count	Current		01h						
	Previous	00h							
LBA Low Current		E0h							
	Previous			R	ese	erve	d		
LBA Mid	Current	00h							
	Previous				00)h			
LBA High	Current			R	ese	erve	d		
	Previous	Reserved							
Device/Head		-	-	-	D	-	-	-	-
Command		3Fh							

Table 45 Input Registers of SCT Command Using Write Log Ext

Command Blo	ck Input F	Reg	iste	ers	(Su	CCE	ess)	
Register		7	6	5	4	3	2	1	0
Error					00)h			
Sector Count	HOB=0	Depends on command (LSB)							
	HOB=1	HOB=1 Reserved							
LBA Low	HOB=0	Depends on command (MSB)				d			
	HOB=1	Reserved							
LBA Mid	HOB=0	Νι	ımb	er (of s	ecto	ors	(LS	B)
	HOB=1			R	ese	rve	d		
LBA High	HOB=0	Nι	ımb	er c	of se	ecto	ors ((MS	B)
	HOB=1	Reserved							
Device/Head	<u> </u>	-	-	-	-	-	-	-	-
Status			50h						

Command Blo	ck Input F	Registers (Error)						
Register		7 6 5 4 3 2 1 0						
Error		04h						
Sector Count	HOB=0	Extended Status Code (LSB)						
	HOB=1	Reserved						
LBA Low	HOB=0	Extended Status Code (MSB)						
	HOB=1	Reserved						
LBA Mid	HOB=0	Number of sectors (LSB)						
	HOB=1	Reserved						
LBA High	HOB=0	Number of sectors (MSB)						
	HOB=1	Reserved						
Device/Head								
Status		51h						

All ATA "previous" registers are reserved in Write Log Ext responses.

Table 46 Output Registers of SCT Command Using Write Log Ext

9.18.2.1.3 Key Sector Format

An SCT command (Key Sector) is always 512 bytes long. Table below shows the generic format of an SCT command.

Byte	Field	Words	Description
1:0	Action Code	1	This field defines the command type and
			generally specifies the type of data being
			accessed, such as sector or physical action
			being performed, such as seek.
3:2	Function Code	1	This field specifies the type of access, and
			varies by command. For example, this can
			specify read, write, verify, etc.
X:4	Parameter1	Depends on command	Depends on command
Y:x+1	Parameter2	Depends on command	Depends on command
	Total Words	256	

Table 47 Key Sector Format

The action codes are defined in Table below.

Action Code	Block Data	TF Data	Description
0000h	-	-	Reserved
0001h	Read/Write	Υ	Long Sector Access (Not Supported)
0002h	Write	N	SCT Write Same
0003h	-	Υ	Error Recovery Control
0004h	-	Υ	Features Control
0005h	Read	N	SCT Data Table
0006h-BFFFh	-	-	Reserved
C000h-FFFFh	-	-	Vendor Specific

Table 48 SCT Action Code List

9.18.2.1.4 Extended Status Code

Status Code	Definition			
0000h	Command complete without error			
0001h	Invalid Function Code			
0002h	Input LBA out of range			
0003h	Request sector count overflow. The number of sectors requested to transfer (Sector Count register) in the read or write log command is larger than required by SCT command.			
0004h	Invalid Function code in Error Recovery command			
0005h	Invalid Selection code in Error Recovery command			
0006h	Host read command timer is less than minimum value			
0007h	Host write command timer is less than minimum value			
0008h	Background SCT command was aborted because of an interrupting host command			
0009h	Background SCT command was terminated because of unrecoverable error			
000Ah	Invalid Function code in Long Sector Access command			
000Bh	SCT data transfer command was issued without first issuing an SCT command			
000Ch	Invalid Function code in Feature Control command			
000Dh	Invalid Feature code in Feature Control command			
000Eh	Invalid New State value in Feature Control command			
000Fh	Invalid Option Flags in Feature Control command			
0010h	Invalid SCT Action code			
0011h	Invalid Table ID (table not supported)			
0012h	Command was aborted due to drive security being locked			
0013h	Invalid revision code			
0015h	SCT Timeout			
0017h	Blocking SCT Write Same command was terminated because of unrecoverable error			
0018h-BFFFh	Reserved			
C000h-C002h	Vendor Specific			
C003h	Overlay switch failure in Long Sector Access command			
C004h	Read Long failure			
C005h	Write Long failure			
C006h	Write Cache enable failure			
C007h-FFEFh	Vendor Specific			
FFF0h-FFFEh	Reserved			
FFFFh	SCT command executing in background			

Table 49 Extended Status Code

9.18.2.2 Data transfer

Once an SCT command has been issued, status can be checked and data can be transferred. Data transfer uses log page E1h.

9.18.2.2.1 Read/Write SCT Data Using SMART

Command Block Output Registers								
Register	7 6 5 4 3 2 1 0						0	
Feature	С	D5h(Read)/D6h(Write)						
Sector Count	Number of sectors to be transferred							
Sector Number	E1h							
Cylinder Low	Cylinder Low 4F			-h				
Cylinder High	C2h							
Device/Head	-	-	-	D	-	-	-	-
Command		B0h						

Table 50 Input Registers of SCT Data Transfer Using SMART

9.18.2.2.2 Read/Write SCT Data Using Read/Write Log Ext

Command Block Output Registers									
Register		7	6	5	4	3	2	1	0
Feature	Current			R	ese	erve	d		
	Previous			R	ese	erve	d		
Sector Count	Current				01	1h			
	Previous	00h							
LBA Low	Current	E1h							
	Previous	Reserved							
LBA Mid	Current				00)h			
	Previous		00h						
LBA High	Current	Reserved				d			
	Previous	Reserved							
Device/Head		-	-	-	D	-	-	•	-
Command			2Fh(Read)/3Fh(Write)						

Table 51 Input Registers of SCT Data Transfer using Read/Write Log Ext

9.18.2.3 SCT Status Request

10nce an SCT command has been issued, a status is reported in the ATA registers. This status indicates that the command was accepted or that an error occurred. This ATA status return does not indicate successful completion of the SCT actions. Some commands can take several minutes or even hours to execute. In this case, the host can determine execution progress by requesting SCT status.

3Log page E0h contains the status information. Reading log page E0h retrieves the status information. The SCT status may be acquired any time that the host is allowing to send a command to the device. This command will not change the power state of the drive, nor terminate any background activity, including any SCT command in progress.

9.18.2.3.1 SCT Status Request Using SMART

Command Block Output Registers								
Register	7 6 5 4 3 2 1						0	
Feature				D!	5h			
Sector Count	01h							
Sector Number	ctor Number E0h							
Cylinder Low 4Fr				-h				
Cylinder High	C2h							
Device/Head	D				-			
Command	B0h							

Table 52 Input Registers of SCT Status Request Using SMART

9.18.2.3.2 SCT Status Request Using Read Log Ext

Command Block Output Registers									
Register		7	6	5	4	3	2	1	0
Feature	Current			R	ese	erve	d		
	Previous			R	ese	erve	d		
Sector Count	Current				01	lh			
	Previous	00h							
LBA Low	Current	E0h							
	Previous			R	ese	erve	d		
LBA Mid	Current	00h							
	Previous	00h							
LBA High Current			Reserved						
	Previous	s Reserved							
Device/Head		-	-	-	ם	-	-	-	-
Command					2F	-h			

Table 53 Input Registers of SCT Status Request Using Read Log Ext

$9.18.2.3.3 \quad \textbf{Format of SCT Status Response}$

Byte	Туре	Field Name	Value	Description
1:0	Word	Format Version	0003h	Status Response format version number
3:2	Word	SCT Version		Manufacturer's vendor specific implementation version number
5:4	Word	SCT Spec.	0001h	Highest level of SCT Technical Report supported
9:6	Dword	Status Flags		Bit 0 : Segment Initialized Flag If this bit is set to 1, an SCT Write Same command write to all LBAs of the drive has completed without error. This bit shall be cleared to 0 when any user LBA is written, even if write cache is enabled. This bit is else cleared if the capacity of the drive is changed via SETMAX, SETMAX EXT or DCO. This bit is preserved through a power cycle. Bit 1-31 : Reserved
10	Byte	Drive Status		0 = Active waiting for a command 1 = Stand-by 2 = Sleep 3 = DST executing in background 4 = SMART ODC executing in background 5 = SCT executing in background
13:11	Byte[3]	reserved	00h	
15:14	Word	Extended Status Code		Status Of last SCT command issued. FFFFh if SCT command executing in background.
17:16	Word	Action Code		Action code of last SCT command issued. If the Extended Status Code is FFFFh, this is the Action Code of the command that is current executing.
19:18	Word	Function Code		Function code of last SCT command issued. If the Extended Status Code is FFFFh, this is the Function Code of the command that is current executing.
39:20	Byte[20]	reserved	00h	
47:40	Qword	LBA		Current LBA of SCT command execution in background. If there is no command currently executing in the background, this field is undefined.
199:48	Byte[152]		00h	
200	Byte	HDA Temp		Current HDA temperature in degrees Celsius. This is a 2's complement number. 80h indicates that this value is invalid.
201	Byte	Min Temp		Minimum HDA temperature in degrees Celsius. This is a 2's complement integer. 80h indicates that this value is invalid.
202	Byte	Max Temp		Maximum HDA temperature in degrees Celsius. This is a 2's complement number. 80h indicates that this value is invalid.
203	Byte	Life Min Temp		Minimum HDA temperature in degrees Celsius seen for the life of the device. This is a 2's complement integer. 80h indicates that this value is invalid.

Table 54 Data Format of SCT Status Response -1

Byte	Туре	Field Name	Value	Description
204	Byte	Life Max Temp		Maximum HDA temperature in degrees Celsius seen for the life of the drive. This is a 2's complement number. 80h indicates that this value is invalid.
205	Byte	Reserved	00h	
209:206	Dword	Over Limit Count		Number of temperature recording Intervals since the last power-on reset where the recorded temperature was greater than Max Op Limit. See table 93 for information about this Interval.
213:210	Dword	Under Limit Count		Number of temperature recording Intervals since the last power-on reset where the recorded temperature was less than Min Op Limit. See table 93 for information about this Interval.
479:214	Byte[275]	Reserved	00h	
511:480	Byte[32]	Vendor Specific	00h	

Table 55 Data Format of SCT Status Response -2

9.18.3 SCT Command Set

9.18.3.1 SCT Write Same (action code: 0002h)

Inputs: (Key Sector)

Word	Name	Value	Description
0	Action Code	0002h	This action writes a pattern or sector of data repeatedly to the media. This capability could also be referred to as "Write All" or "Write Same".
1	Function Code	0001h	Repeat Write Pattern (Background Operation)
		0002h	Repeat Write Sector (Background Operation)
		0101h	Repeat Write Pattern (Blocking Operation)
		0102h	Repeat Write Sector (Blocking Operation)
5:2	Start LBA	Qword	First LBA
9:6	Count	Qword	Number of sectors to fill
11:10	Pattern	Dword	If the Function Code is 0001h, this field contains a 32-bit pattern that is written on the media starting at the location specified in words two through five
255:12	reserved	0000h	

Table 56 SCT Write Same (Inputs)

Outputs: (TF Data)

Command Block Input Registers (Success)					
Error	00h				
Sector Count	Reserved				
Sector Number	Reserved				
Cylinder Low	Number of sectors to transfer (LSB) = 01h				
Cylinder High	Number of sectors to transfer (MSB) = 00h				
Device/Head	Reserved				
Status	50h				

Table 57 SCT Write Same (Outputs)

The SCT Write Same command will begin writing sectors from Start LBA in incrementing order until Count sectors have been written. A Count of zero means apply operation from Start LBA until the last user LBA on the drive is reached. The HPA feature determines the last user LBA. This command will not write over a hidden partition when hidden partitions are enabled using the Host Protected Area drive capabilities. Automatic sector reassignment is permitted during the operation of this function.

If Start LBA or Start LBA + Count go beyond the last user LBA then an error is reported and the SCT command is not executed. Issuing this command with a value of zero for Start LBA and Count will cause all LBAs of the drive to be written the specified pattern.

Once the key sector has been issued, if the Function Code was 0002h or 0102h and the TF Data indicates that the drive is ready to receive data, log page E1h should be written to transfer the data.

This command can change the Segment Initialized Flag. If the command writes all the user addressable sectors and completes without encountering an error or being aborted, then the "Segment Initialized Flag" (bit 0 of the Status Flags in the SCT Status. See0) shall be set to 1. A write to any user addressable sector on the drive (except another complete write all), shall cause the Segment Initialized Flag to be cleared. Reallocations as a result of reading data (foreground or background) do not clear the Segment Initialized Flag.

Implementation note for Background Operation (Function code = 0001h, 0002h)

In this mode, the drive will return command completion status when the drive finished receiving data.

Any command, including IDENTIFY DEVICE, other than SCT Status, issued to the drive while this command is in progress will terminate the SCT Write Same command. The incoming command is executed.

Use the SCT Status command to retrieve status information about the current SCT command. Example status information includes: command active or complete, current LBA, and errors. When this command is in progress, the SCT status error code will be FFFFh, and set to 0000h if the command completes without error. It will be less than FFFFh and grater the 0000h if the command terminated prematurely for any reason.

Possible Extended Status Code for Background Operation (Function code = 0001h, 0002h)					
0008h	Background SCT command was aborted because of an interrupting host command				
0009h	Background SCT command was terminated because of unrecoverable error				
FFFFh	SCT command executing in background				

<u>Implementation note for Blocking Operation (Function code = 0101h, 0102h)</u>

In this mode, the drive will return command completion status when the drive finished the SCT Write Same operation.

Outputs for Error

Command Block Input Registers (Error)								
Register	7	7 6 5 4 3 2 1 0					0	
Error				04	1h			
Sector Count	E	Extended Status code (LSB)						
Sector Number	Extended Status code (MSB)							
Cylinder Low	N/A							
Cylinder High	N/A							
Device/Head	-	-	-	-	-	-	-	-
Status	51h							

Possible Ex	tended Status Code for Blocking Operation (Function code = 0101h, 0102h)
0017h	Blocking SCT Write Same command was terminated because of unrecoverable error

9.18.3.2 Error Recovery Control command (action code: 0003h)

Inputs: (Key Sector)

Word	Name	Value	Description
0	Action Code	0003h	Set the read and write error recovery time
1	Function Code	0001h	Set New Value
		0002h	Return Current Value
2	Selection Code	0001h	Read Timer
		0002h	Write Timer
3	Value	Word	If the function code is 0001h, then this field contains the recovery time limit in 100ms units. The minimum SCT timeout value is 65 (=6.5 second). When the specified time limit is shorter than 6.5 second, the issued command is aborted.
255:4	reserved	0000h	

Table 58 Error Recovery Control command (Inputs)

Outputs: (TF Data)

Command Block Input Registers (Success)				
Error	00h			
Sector Count	If Function Code was 0002h, then this is the LSB of the requested recovery limit. Otherwise, this field is reserved.			
Sector Number	If Function Code was 0002h, then this is the MSB of the requested recovery limit. Otherwise, this field is reserved.			
Cylinder Low	reserved			
Cylinder High	reserved			
Device/Head	reserved			
Status	50h			

Table 59 Error Recovery Control command (On puts)

The Error Recovery Control command can be used to set time limits for read and write error recovery. For non-queued commands, these timers apply to command completion at the host interface. For queued commands where in order data delivery is enabled, these timers begin counting when the command is sent to the device. These timers do not apply to streaming commands, or to queued commands when out-of-order data delivery is enabled.

These command timers are volatile. The default value is 0 (i.e. disable command time-out).

9.18.3.3 Feature Control Command (action code: 0004h)

Inputs: (Key Sector)

Word	Name	Value	Description
0	Action Code	0004h	Set or return the state of drive features described in 0
1	Function Code	0001h	Set state for a feature
		0002h	Return the current state of a feature
		0003h	Return feature option flags
2	Feature Code	Word	See 0 for a list of the feature codes
3	State	Word	Feature code dependent value
4	Option Flags	Word	Bit15:1 = Reserved
			If the function code is 0001h, setting bit 0 to one causes the requested feature state change to be preserved across power cycles.
			If the function code is 0001h, setting bit 0 to zero causes the requested feature state change to be volatile. A hard reset causes the drive to revert to default, or last non-volatile setting.
255:5	reserved	0000h	

Table 60 Feature Control command (Inputs)

Outputs: (TF Data)

Command Block Input Registers (Success)				
Error	00h			
Sector Count	If Function Code was 0002h, then this is the LSB of Feature State. If Function Code was 0003h, then this is the LSB of Option Flags. Otherwise, this field is reserved.			
Sector Number	If Function Code was 0002h, then this is the MSB of Feature State. If Function Code was 0003h, then this is the MSB of Option Flags. Otherwise, this field is reserved.			
Cylinder Low	reserved			
Cylinder High	reserved			
Device/Head	reserved			
Status	50h			

Table 61 Feature Control command (Outputs)

Feature Code	State Definition
0001h	0001h : Allow write cache operation to be determined by Set Feature command
	0002h : Force write cache enabled
	0003h : Force write cache disabled
	If State 0001h is selected, the ATA Set Feature command will determine the operation state of write cache. If State 0002h or 0003h is selected, write cache will be forced into the corresponding operation state, regardless of the current ATA Set Feature state. Any attempt to change the write cache setting through Set Feature shall be accepted, but otherwise ignored, and not affect the operation state of write cache and complete normally without reporting an error.
	In all cases, bit 5 of word 85 in the Identify Device information will reflect the true operation state of write cache, one indicating enabled and zero indicating disabled.
	The default state is 0001h.
0002h	0001h : Enable Write Cache Reordering
	0002h : Disable Write Cache Reordering
	The default state is 0001h.
	The drive does not return error for setting state 0002h, but the state is ignored.
0003h	Set time interval for temperature logging.
	0000h is invalid.
	0001h to FFFFh logging interval in minutes.
	This value applies to the Absolute HDA Temperature History queue. Issuing this command will cause the queue to be reset and any prior values in the queue will be lost. Queue Index shall be set to zero and the first queue location will be set to the current value. All remaining queue locations are set to 80h. The Sample Period, Max Op Limit, Over Limit, Min Op Limit and Under Limit values are preserved.
	Default value is 0001h.
0004h-CFFFh	Reserved
D000h-FFFFh	Vendor Specific

Table 62 Feature Code List

9.18.3.4 SCT Data Table Command (action code: 0005h)

Inputs: (Key Sector)

Word	Name	Value	Description
0	Action Code	0005h	Read a data table
1	Function Code	0001h	Read Table
2	Table ID	Word	See 0 for a list of data tables
255:2	reserved	0000h	

Table 63 SCT Data Table command (Inputs)

Outputs: (TF Data)

Command Block Input Registers (Success)			
Error	00h		
Sector Count	reserved		
Sector Number	reserved		
Cylinder Low	Number of sectors to transfer (LSB) = 01h		
Cylinder High	Number of sectors to transfer (MSB) = 00h		
Device/Head	reserved		
Status	50h		

Table 64 SCT Data Table command (Outputs)

Table ID	Description
0000h	Invalid
0001h	Reserved
0002h	HDA Temperature History Table (in absolute degree C). See 0
0003h-CFFFh	Reserved
D000h-FFFFh	Vendor Specific

Table 65 Table ID

Byte	Size	Field Name	Description	
1:0	Word	Format Version	Data table format version (=0002h)	
3:2	Word	Sampling Period	Absolute HDA Temperature sampling period in minutes. 0000h indicates sampling is disabled.	
5:4	Word	Interval	Timer interval between entries in the history queue.	
6	Byte	Max Op Limit	Maximum recommended continuous operating temperature. This is a one byte 2's complement number that allows a range from -127°C to +127°C to be specified. 80h is an invalid value. This is a fixed value.	
7	Byte	Over Limit	Maximum temperature limit. This is a one byte 2's complement number that allows a range from -127°C to +127°C to be specified. 80h is an invalid value. This is a fixed value.	
8	Byte	Min Op Limit	Minimum recommended continuous operating limit. This is a one byte 2's complement number that allows a range from -127°C to +127°C to be specified. 80h is an invalid value. This is a fixed value.	
9	Byte	Under Limit	Minimum temperature limit. This is a one byte 2's complement number that allows a range from -127°C to +127°C to be specified. 80h is an invalid value. This is a fixed value.	
29:10	Byte[20]	Reserved		
31:30	Word	Queue Size	Number of entry locations in history queue. This value is 128.	
33:32	Word	Queue Index	Last updated entry in queue. Queue Index is zero-based, so Queue Index 0000h is the first location in the buffer (at offset 34). The most recent temperature entered in the buffer is at Queue Index + 34. See Note 1 and Note 2.	

Table 66 Data Format of HDA Absolute Temperature History Table -1

Byte	Size	Field Name	Description
(Queue Size+33):34	Byte[Queue Size]	Queue Buffer	This is a circular buffer of absolute HDA Temperature values. These are one byte 2's complement numbers, which allow a range from -127°C to +127°C to be specified. A value of 80h indicates an initial value or a discontinuity in temperature recording. The Actual time between samples may vary because commands may not be interrupted. The sampling period is the minimum time between samples. See Note 1. If the host changes the logging interval using the volatile option, the interval between entries
			in the queue may change between power cycles with no indication to the host.
511⊝Queue Size +34)	Byte [512-Queue Size-34]	Reserved	

Note 1 – The Absolute HDA Temperature History is preserved across power cycles with the requirement that when the drive powers up, a new entry is made in the history queue of 80h, an invalid absolute temperature value. This way an application viewing the history can see the discontinuity in temperature result from the drive being turned off.

Note 2 – When the Absolute HDA Temperature history is cleared, for new drives or after changing the Logging Interval, the Queue Index shall be set to zero and the first queue location shall be set to the current Absolute HDA Temperature value. All remaining queue locations are set to 80h.

Table 67 Data Format of HDA Absolute Temperature History Table -2

9.19 Extended Power Conditions (EPC) feature

The Extended Power Conditions feature set provides a host with additional methods to control the power condition of a device. Host can check power condition using Check Power Mode command.

Subcommand code 4Ah enables, disables, and configures the use of the Extended Power Conditions feature set. If the EPC feature set is not supported, then the device return command aborted Table 68 describes the EPC subcommands and Table 69 describes the power condition IDs.

EPC Subcommand	Description
0h	Restore Power Condition Settings
1h	Go To Power Condition
2h	Set Power Condition Timer
3h	Set Power Condition State
4h	Enable the EPC feature
5h	Disable the EPC feature
6h Fh	Reserved

Table 68 Extended Power Conditions Subcommands

Power Condition ID	Power Condition Name	Description
00h	standby_z	Standby
01h	standby_y	Low RPM Idle
02h80h		Reserved
81h	idle_a	Active Idle
82h	idle_b	Low Power Idle
83h	idle_c	Low RPM Idle
84h FEh		Reserved
FFh	All	All supported EPC power conditions

Table 69 Power Condition IDs

9.19.1 Power conditions

idle_a, idle_b and idle_c are power conditions within the PM1:Idle power management state. standby_y and standby_z are power conditions within the PM2:Standby power management state. Please refer to ACS-2 "3.1 Definitions and abbreviations" about PM1:Idle and PM2:Standby. The power conditions are ordered from highest power consumption (i.e., shortest recovery time) to lowest power consumption (i.e., longest recovery time) as follows:

idle_a power >= idle_b power >= idle_c power >= standby_y power >= standby_z power

Each of these power conditions has a set of current, saved and default settings. Default settings are not modifiable. Default and saved settings persist across power cycles. The current settings do not persist across power cycles.

9.19.2 Power condition timers

The device has manufacturer specified power-on default settings for the power condition timers. Power condition timers are changeable with the SET FEATURES Extended Power Conditions subcommand. A power condition timer set to zero indicates that the associated power condition is disabled.

If the power condition is enabled, then the value of each timer specifies the time after command completion that the device waits before transitioning to the power condition. All enabled power condition timers run concurrently.

On command completion all timers that were stopped are initialized with the Current Timer settings values and started.

As a result of processing any command, the device may change to a different power condition.

If an enabled timer associated with a power condition lower than the power condition that the device is currently in expires, then the device transitions to the power condition associated with that timer (e.g., if the standby_z timer is set to a smaller interval than the idle_b timer, and the device is currently in the standby_z power condition, then the device remains in the Standby_z power condition when the idle_b timer expires). If the timer expiration qualifies the device to transition to more than one enabled power condition, then the device transitions to the power condition with the least power consumption.

If a command is accepted that requires a transition to Active, then the timers are stopped. If a command is accepted that does not require a transition to Active (e.g., a Check Power Mode command), then the timers continues to run.

Prior to entering into any power condition that prevents accessing the media (e.g., before a hard drive stops its spindle motor during transition to the standby_z power condition) and if volatile write cache is enabled, then the device shall write all cached data to the medium for the device (e.g., as a device does in response to a flush command).

9.19.3 Interaction with resets, commands and other features

On successful processing of a power cycle, the EPC enables sub command, the device: When EPC is Enabling, the following content is executed.

- 1) stop all EPC timers.
- 2) copy the Saved Timer Enabled field to the Current Timer Enabled field, for all supported power conditions.
- 3) copy the Saved Timer Settings field to the Current Timer Settings field, for all supported power conditions.
- 4) initialize and restart all enabled EPC timers with Current values.

On successful processing of a hardware reset, a software reset, or a DEVICE RESET command, the device: When EPC is Enabling, the following content is executed.

- 1) stop all EPC timers.
- 2) remain in the current power condition.
- 3) initialize and restart all enabled EPC timers with Current values.

The Extended Power Conditions feature set and the Advanced Power Management feature set are mutually exclusive. All EPC subcommands, except Enable the EPC feature set, returns command aborted if the EPC feature set is disabled. If the device processes a SET FEATURES Enable APM subcommand without error and IDENTIFY DEVICE data word 120 bit 7 is set to one, then the device shall disable the EPC feature set.

During background activities, all EPC timers may be stopped. On completion of the activity, any stopped EPC timers are restarted from where they were stopped.

9.20 Sanitize Device feature set

9.20.1 **Overview**

The Sanitize Device feature set allows hosts to request that devices modify the content of all user data areas in the device using sanitize operations. Sanitize operations use one of the operations defined in this sub clause to make all previously written content in the user data area of the device unable to be read. Sanitize operations affect the following:

- a) user data areas
- b) user data areas that are not currently allocated (e.g., previously allocated areas and physical sectors that have become inaccessible)
- c) user data caches

Sanitize operations render user data previously stored in caches, using any methods, unable to be read.

The Sanitize Device feature set is implemented, the following commands are supported:

- a) SANITIZE STATUS EXT
- b) SANITIZE FREEZE LOCK EXT
- c) CRYPTO SCRAMBLE EXT (data encryption model only)
- d) OVERWRITE EXT

If physical sectors that have become inaccessible are not successfully sanitized, then Sanitize operations don't cause a transition to the SD3: Sanitize Operation Failed state.

Sanitize operations don't affect non-user data areas (e.g., logs, and Device SMART data structure).

Sector reallocation is able to be performed during the operation of this function. After completion of a sanitize operation, if:

- a) all physical sectors that are available to be allocated for user data have been successfully sanitized
- b) any physical areas that were not successfully sanitized were removed from use,

then:

- a) the Sanitize Device state machine transitions to SD4: Sanitize Operation Succeeded; and
- b) in subsequent SANITIZE STATUS EXT commands, set the SANITIZE OPERATION COMPLETED WITHOUT ERROR bit to one in the Normal Outputs

Conversely, if physical sectors that are available to be allocated for user data (e.g. allocated physical sectors) were not successfully

sanitized, then:

- a) the Sanitize Device state machine transitions to SD3: Sanitize Operation Failed; and
- b) in subsequent SANITIZE STATUS EXT commands, return an error and set the LBA field of the Error Outputs to report the value of Sanitize Command Unsuccessful

To initiate a sanitize operation the host issues one of the following sanitize operation commands:

- a) A CRYPTO SCRAMBLE EXT command (data encryption model only)
- b) An OVERWRITE EXT command

The sanitize operation continues after command completion of the initiating sanitize operation command. The SANITIZE STATUS EXT command to reports progress and completion.

After a device has started processing a sanitize operation, and until the device transitions to the SD0:

Sanitize Idle state, the device aborts all commands other than:

- a) IDENTIFY DEVICE command
- b) IDLE IMMEDIATE command with UNLOAD feature
- c) Request Sense Data Ext command;
- d) SANITIZE STATUS EXT command;
- e) SMART READ LOG command requesting log address E0h;
- f) READ LOG EXT command requesting one of the following log addresses:
 - A) E0h;
 - B) 30h; or
 - C) 10h;
- g) READ LOG DMA EXT command requesting one of the following log addresses:
 - A) E0h;
 - B) 30h; or
 - C) 10h;
- h) SMART RETURN STATUS command; or
- i) SET FEATURES PUIS feature set device spin-up subcommand.

If a sanitize operation is interrupted by a power-on reset, the sanitize operation continues. If the device processes a power-on reset and enters the PM5: PUIS and spin-up subcommand not supported state (see Figure 12), then the device resumes processing the sanitize operation after receiving a media access command. (The media access command reports failure because the sanitize operation does not allow media access commands. However, since the device has received a media access command, the device is spin-up.)

The SANITIZE STATUS EXT command returns information about the current sanitize operation, if any, including a percentage of completion if a sanitize operation is in progress.

A CRYPTO SCRAMBLE EXT command (data encryption model only), or OVERWRITE EXT command that returns command completion with no error transitions the device into the SD2: Sanitize Operation state. The device remains in this state until the device has completed the sanitize operation (see figure 9).

The SANITIZE FREEZE LOCK EXT command causes the device to transition to the SD1: Sanitize Frozen state and causes any subsequent CRYPTO SCRAMBLE EXT command (data encryption model only) or OVERWRITE EXT command to be aborted. If the device processes a power-on reset or a hardware reset, then the device transitions from the Sanitize Frozen state to the Sanitize Idle state.

The crypto scramble operation makes previously written contents in the user data area irretrievable. (data encryption model only)

The overwrite operation fills all user data with a four byte pattern passed within the LBA field of the command. Parameters for the OVERWRITE EXT command include a count for multiple overwrites and the option to invert the four byte pattern between consecutive overwrite passes.

A software reset does not cause the SD2: Sanitize Operation state to transition to another state.

9.20.2 Sanitize Device Feature

Sanitize Device Feature Set is a powerful data erase feature. Two data erase features are supported. One is an Overwrite Ext command, and the other is Crypto Scramble Ext command. Crypto Scramble Ext command can be supported with a data encryption model only.

Individual Sanitize Device commands are identified by the value specified in the FEATURE field.

The following commands are supported for this feature.

Command	COMMAND field value	FEATURE field value
SANITIZE STATUS EXT	('B4'h)	('0000'h)
CRYPTO SCRAMBLE EXT (data encryption model only)	('B4'h)	('0011'h)
OVERWRITE EXT	('B4'h)	('0014'h)
SANITIZE FREEZE LOCK EXT	('B4'h)	('0020'h)

9.20.3 Sanitize Device state machine

Figure 12 describes the operation of the Sanitize Device state machine.

9.20.3.1 SD0: Sanitize Idle State

In SD0: Sanitize Idle state the Sanitize Device state machine is ready for a sanitize operation command or a SANITIZE FREEZE LOCK EXT command.

This state is entered when the device processes a power-on reset while in the SD1: Sanitize Freeze Lock state or the SD4: Sanitize Operation Succeeded state.

While in this state, Sanitize Device state machine does not change state if the device processes:

- a) a hardware reset or power-on reset
- b) a SANITIZE STATUS EXT command...

Transition SD0:SD1: If the device processes a SANITIZE FREEZE LOCK EXT command, then the device transitions to the SD1: Sanitize Frozen state.

Transition SD0:SD2: If the device successfully processes a supported sanitize operation command, then the device transitions to the SD2: Sanitize Operation state.

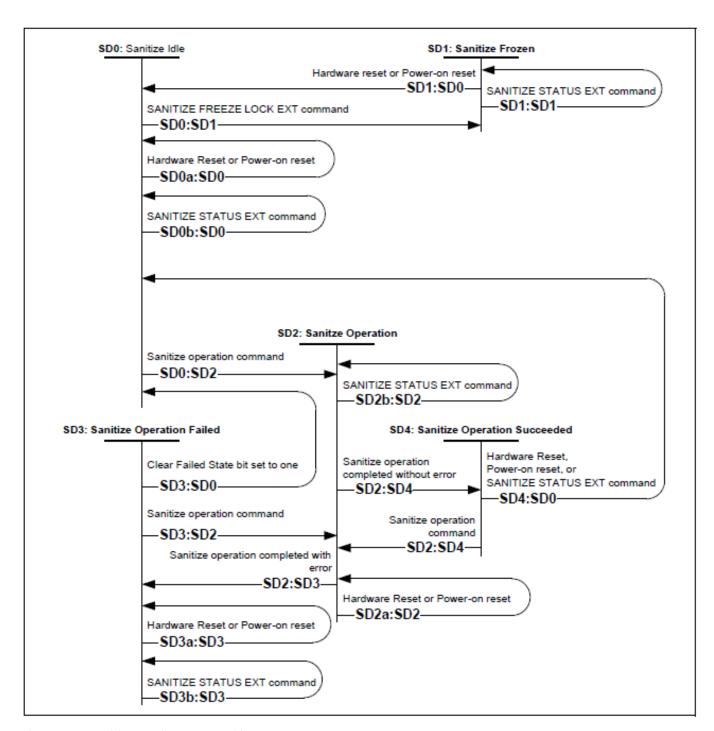


Figure 12 Sanitize Device state machines

9.20.3.2 SD1: Sanitize Frozen State

In SD1: Sanitize Frozen state, the device will abort Sanitize operation commands.

While in this state, Sanitize Device state machine does not change state if the device processes a SANITIZE STATUS EXT command.

Transition SD1:SD0: If the device processes a hardware reset or a power-on reset, then the device transitions to the SD0: Sanitize Idle state.

9.20.3.3 SD2: Sanitize Operation State

In the SD2: Sanitize Operation state, the device is processing a sanitize operation.

While in this state, Sanitize Device state machine does not change state if the device processes:

- a) a hardware reset or power-on reset; and
- b) a SANITIZE STATUS EXT command.

Transition SD2:SD3: If a sanitize operation completes with an error, then the device transitions to the SD3: Sanitize Operation Failed state.

Transition SD2:SD4: If a sanitize operation completes without an error, then the device transitions to the SD4: Sanitize Operation Succeeded state.

9.20.3.4 SD3: Sanitize Operation Failed State

In the SD3: Sanitize Operation Failed state, the device has completed processing a sanitize operation without success. While in this state, Sanitize Device state machine does not change state if the device processes:

- a) a hardware reset or power-on reset; and
- b) a SANITIZE STATUS EXT command with the CLEAR SANITIZE OPERATION FAILED bit cleared to zero.

Transition SD3:SD0: If

- a) the Sanitize operation was initiated by a Sanitize operation command with the FAILURE MODE bit set to one;
 and
- b) the SANITIZE STATUS EXT command has been successfully processed with the CLEAR SANITIZE OPERATION FAILED bit set to one.

then the device transitions to the SD0: Sanitize Idle state.

Transition SD3:SD2: If the device processes a supported sanitize operation command that reports command completion with no error, then the device transitions to the SD2: Sanitize Operation state.

9.20.3.5 SD4: Sanitize Operation Succeeded State

In the SD4: Sanitize Operation Succeeded state, the device has completed processing a successful sanitize operation. **Transition SD4:SD0:** If the device processes

- a) a hardware reset;
- b) a power-on reset; or
- c) a SANITIZE STATUS EXT command

then the device transitions to the SD0: Sanitize Idle state.

Transition SD4:SD2: If the device successfully processes a supported Sanitize operation command, then the device transitions to the SD2: Sanitize Operation state.

10 Command Protocol

The commands are grouped into different classes according to the protocols followed for command execution. The command classes with their associated protocols are defined below.

Please refer to Serial ATA Revision 3.0 about each protocol.

For all commands, the host must first check if BSY=1, and should proceed no further unless and until BSY=0. For all commands, the host must also wait for RDY=1 before proceeding.

A device must maintain either BSY=1 or DRQ=1 at all times until the command is completed. The INTRQ signal is used by the device to signal most, but not all, times when the BSY bit is changed from 1 to 0 during command execution.

A command shall only be interrupted with a COMRESET or software reset. The result of writing to the Command register while BSY=1 or DRQ=1 is unpredictable and may result in data corruption. A command should only be interrupted by a reset at times when the host thinks there may be a problem, such as a device that is no longer responding.

Interrupts are cleared when the host reads the Status Register, issues a reset, or writes to the Command Register.

10.1 PIO Data In commands

These commands are:

- Device Configuration Identify
- Identify Device
- Read Buffer
- Read Log Ext
- Read Multiple
- Read Multiple Ext
- Read Sector(s)
- Read Sector(s) Ext
- Read Stream Ext
- SMART Read Attribute Values
- SMART Read Attribute Thresholds
- SMART Read Log Sector

Execution includes the transfer of one or more 512 byte sectors of data from the device to the host.

10.2 PIO Data Out commands

These commands are:

- Device Configuration Set
- Download Microcode
- Format Track
- Security Disable Password
- Security Erase Unit
- Security Set Password
- Security Unlock
- Set Max Set Password command
- Set Max Unlock command
- SMART Write Log Sector
- Write Buffer
- Write Log Ext
- Write Multiple
- Write Multiple Ext
- Write Multiple FUA Ext

- Write Sector(s)
- Write Sector(s) Ext
- · Write Stream Ext

Execution includes the transfer of one or more 512 byte sectors of data from the host to the device.

10.3 Non-Data commands

These commands are:

- · Check Power Mode
- Configure Stream
- Crypto Scramble Ext (data encryption model only)
- Device Configuration Freeze Lock
- Device Configuration Restore
- Execute Device Diagnostic
- Flush Cache
- Flush Cache Ext
- Idle
- Idle Immediate
- Initialize Device Parameters
- NCQ Queue Management
- NOP
- Overwrite Ext
- Read Native Max Address
- Read Native Max Address Ext
- Read Verify Sector(s)
- Read Verify Sector(s) Ext
- Recalibrate
- Sanitize Freeze Lock Ext
- Sanitize Status Ext
- Security Erase Prepare
- Security Freeze Lock
- Seek
- Set Features
- Set Max Address
- Set Max Address Ext
- Set Max Lock command
- Set Max Freeze Lock command
- Set Multiple Mode
- Sleep
- SMART Disable Operations
- SMART Enable/Disable Attribute Autosave
- SMART Enable Operations
- SMART Execute Off-line Data Collection
- SMART Return Status
- SMART Save Attribute Values
- SMART Enable/Disable Automatic Off-Line
- Standby
- Standby Immediate
- Write Uncorrectable Ext

Execution of these commands involves no data transfer.

10.4 DMA Data In commands and DMA Data Out commands

These commands are:

- Download Microcode DMA
- Read DMA
- Read DMA Ext
- Read Log DMA Ext
- Read Stream DMA Ext
- Write DMA
- Write DMA Ext
- Write DMA FUA Ext
- Write Log DMA Ext
- Write Stream DMA Ext

Execution of this class of command includes the transfer of one or more blocks of data between the device and the host using DMA transfer.

10.5 First-party DMA commands

These commands are:

- Read FPDMA Queued
- · Write FPDMA Queued

Execution of this class of commands includes command queuing and the transfer of one or more blocks of data between the device and the host. The protocol is described in the section 13.6 "Native Command Queuing" of "Serial ATA Revision 3.0".

Host knowledge of I/O priority may be transmitted to the device as part of the command. There are two priority classes for NCQ command as high priority, the host is requesting a better quality of service for that command than the commands issued with normal priority.

The classes are forms of soft priority. The device may choose to complete a normal priority command before an outstanding high priority command, although preference is given to the high priority commands. The priority class is indicated in bit 7 (Priority Information) in the Sector Count register for NCQ commands (READ FPDMA QUEUED and WRITE FPDMA QUEUED). This bit can indicate either the normal priority or high priority class. If a command is marked by the host as high priority, the device attempts to provide better quality of service for the command. The device may not process all high priority requests before satisfying normal priority requests.

Command Descriptions 11

Protocol	Command	Code	Binary Code Bit								
		(Hex)	7	6	5	4	3	2	1	0	
3	Check Power Mode	E5	1	1	1	0	0	1	0	1	
3	Check Power Mode*	98	1	0	0	1	1	0	0	0	
3	Configure Stream	51	0	1	0	1	0	0	0	1	
3	Crypto Scramble Ext (data encryption model only)	B4	1	0	1	1	0	1	0	0	
3	Device Configuration Restore	B1	1	0	1	1	0	0	0	1	
3	Device Configuration Freeze Lock	B1	1	0	1	1	0	0	0	1	
1	Device Configuration Identify	B1	1	0	1	1	0	0	0	1	
2	Device Configuration Set	B1	1	0	1	1	0	0	0	1	
2	Download Microcode	92	1	0	0	1	0	0	1	0	
3	Execute Device Diagnostic	90	1	0	0	1	0	0	0	0	
3	Flush Cache	E7	1	1	1	0	0	1	1	1	
3	Flush Cache Ext	EA	1	1	1	0	1	0	1	0	
2	Format Track	50	0	1	0	1	0	0	0	0	
1	Identify Device	EC	1	1	1	0	1	1	0	0	
3	Idle	E3	1	1	1	0	0	0	1	1	
	Idle*		1				1		<u> </u>		
3		97		0	0	1	0	1	1	1	
3	Idle Immediate	E1	1	1	1	0	0	0	0	1	
3	Idle Immediate*	95	1	0	0	1	0	1	0	1	
3	Initialize Device Parameters	91	1	0	0	1	0	0	0	1	
3	NCQ Queue Management	63	0	1	1	0	0	0	1	1	
3	Overwrite Ext	B4	1	0	1	1	0	1	0	0	
1	Read Buffer	E4	1	1	1	0	0	1	0	0	
4	Read DMA	C8	1	1	0	0	1	0	0	0	
4	Read DMA	C9	1	1	0	0	1	0	0	1	
4	Read DMA Ext	25	0	0	1	0	0	1	0	1	
5	Read FPDMA Queued	60	0	1	1	0	0	0	0	0	
1	Read Log Ext	2F	0	0	1	0	1	1	1	1	
4	Read Log DMA Ext	47	0	1	0	0	0	1	1	1	
1	Read Multiple	C4	1	1	0	0	0	1	0	0	
3	Read Multiple Ext Read Native Max Address	29 F8	0	0	1	0	1	0	0	1	
3	Read Native Max Address Ext	27	0	0	1	0	0	1	1	1	
1	Read Sector(s)	20	0	0	1	0	0	0	0	0	
1	Read Sector(s)	21	0	0	1	0	0	0	0	1	
1	Read Sector(s) Ext	24	0	0	1	0	0	1	0	0	
4	Read Stream DMA Ext	2A	0	0	1	0	1	0	1	0	
4	Read Stream Ext	2B	0	0	1	0	1	0	1	0	
3	Read Verify Sector(s)	40	0	1	0	0	0	0	0	0	
3	Read Verify Sector(s)	41	0	1	0	0	0	0	0	1	
3	Read Verify Sector(s) Ext	42	0	1	0	0	0	0	1	0	
3	Recalibrate	1x	0	0	0	1	-	-	-	-	
3	Sanitize Freeze Lock Ext	B4	1	0	1	1	0	1	0	0	
3	Sanitize Status Ext	B4	1	0	1	1	0	1	0	0	

Table 70 Command Set

Dueteeel	Commond	Code	Binary Code Bit							
Protocol	Command	(Hex)	7	6	5	4	3	2	1	0
2	Security Disable Password	F6	1	1	1	1	1	0	1	0
3	Security Erase Prepare	F3	1	1	1	1	0	0	1	1
2	Security Erase Unit	F4	1	1	1	1	0	1	0	0
3	Security Freeze Lock	F5	1	1	1	1	0	1	0	1
2	Security Set Password	F1	1	1	1	1	0	0	0	1
2	Security Unlock	F2	1	1	1	1	0	0	1	0
3	Seek	7x	0	1	1	1	-	-	-	-
3	Set Features	EF	1	1	1	0	1	1	1	1
3	Set Max Address	F9	1	1	1	1	1	0	0	1
3	Set Max Address Ext	37	0	0	1	1	0	1	1	1
3	Set Multiple Mode	C6	1	1	0	0	0	1	1	0
3	Sleep	E6	1	1	1	0	0	1	1	0
3	Sleep*	99	1	0	0	1	1	0	0	1
3	SMART Disable Operations	B0	1	0	1	1	0	0	0	0
3	SMART Enable/Disable Attribute Auto save	В0	1	0	1	1	0	0	0	0
3	SMART Enable Operations	B0	1	0	1	1	0	0	0	0
3	SMART Execute Off-line Data Collection	B0	1	0	1	1	0	0	0	0
1	SMART Read Attribute Values	В0	1	0	1	1	0	0	0	0
1	SMART Read Attribute Thresholds	B0	1	0	1	1	0	0	0	0
3	SMART Return Status	B0	1	0	1	1	0	0	0	0
3	SMART Save Attribute Values	B0	1	0	1	1	0	0	0	0
2	SMART Write Log Sector	В0	1	0	1	1	0	0	0	0
3	SMART Enable/Disable Automatic Off-line	В0	1	0	1	1	0	0	0	0
3	Standby	E2	1	1	1	0	0	0	1	0
3	Standby*	96	1	0	0	1	0	1	1	0
3	Standby Immediate	E0	1	1	1	0	0	0	0	0
3	Standby Immediate*	94	1	0	0	1	0	1	0	0
2	Write Buffer	E8	1	1	1	0	1	0	0	0
4	Write DMA	CA	1	1	0	0	1	0	1	0
4	Write DMA	СВ	1	1	0	0	1	0	1	1
4	Write DMA Ext	35	0	0	1	1	0	1	0	1
4	Write DMA FUA Ext	3D	0	0	1	1	1	1	0	1
5	Write FPDMA Queued	61	0	1	1	0	0	0	0	1
2	Write Log Ext	3F	0	0	1	1	1	1	1	1
4	Write Log DMA Ext	57	0	1	0	1	0	1	1	1
2	Write Multiple	C5	1	1	0	0	0	1	0	1
2	Write Multiple Ext	39	0	0	1	1	1	0	0	1
2	Write Multiple FUA Ext	CE	1	1	0	0	1	1	1	0
2	Write Sector(s)	30	0	0	1	1	0	0	0	0
2	Write Sector(s)	31	0	0	1	1	0	0	0	1
2	Write Sector(s) Ext	34	0	0	1	1	0	1	0	0
4	Write Stream DMA Ext	3A	0	0	1	1	1	0	1	0
4	Write Stream Ext	3B	0	0	1	1	1	0	1	1
3	Write Uncorrectable Ext	45	0	1	0	0	0	1	0	1
J	WILLE OHOUHERIADIE EXT	40	U		U	U	U	ı	U	l I

Protocol: 1: PIO data IN command

2: PIO data OUT command

3: Non data command

4: DMA command

5: DMA Queued command

+: Vendor specific command

Table 71 Command Set -Continued-

Commands marked * are alternate command codes for previous defined commands.

Command (Subcommand)	Command code (Hex)	Feature Register (Hex)
(SMART Function)		
SMART Read Attribute Values	B0	D0
SMART Read Attribute Thresholds	В0	D1
SMART Enable/Disable Attribute Autosave	В0	D2
SMART Save Attribute Values	B0	D3
SMART Execute Off-line Data Collection	В0	D4
SMART Read Log	В0	D5
SMART Write Log	В0	D6
SMART Enable Operations	В0	D8
SMART Disable Operations	В0	D9
SMART Return Status	B0	DA
SMART Enable/Disable Automatic Off-line	В0	DB
(Set Features)		
Enable Write Cache	EF	02
Set Transfer Mode	EF	03
Enable Advanced Power Management	EF	05
Enable Power-up in Standby Feature Set	EF	06
Power-up in Standby Feature Set Device Spin- up	EF	07
Disable read look-ahead feature	EF	55
Disable reverting to power on defaults	EF	66
Disable write cache	EF	82
Disable Advanced Power Management	EF	85
Disable Power-up in Standby Feature Set	EF	86
Enable read look-ahead feature	EF	AA
Enable reverting to power on defaults	EF	СС
(Sanitize Device Feature Set)		
Sanitize Status Ext	B4	0000
Crypto Scramble Ext (data encryption model only)	B4	0011
Overwrite Ext	B4	0014
Sanitize Freeze Lock Ext	B4	0020
(NCQ Queue Management)		
Abort NCQ queue – Abort All	63	00
Abort NCQ queue – Abort Streaming	63	10
Abort NCQ queue – Abort Non-Streaming	63	20
Abort NCQ queue – Abort Selected	63	30
Deadline Handling – WDNC	63	Set:11 Clear:01
Deadline Handling – RDNC	63	Set:21 Clear:01

Table 72 Command Set (Subcommand)

Table 70 Command Set on the page 107 and Table 71 Command Set –Continued– on the page 109 show the commands that are supported by the device. Table 72 Command Set (Subcommand) on the page 110 shows the sub-commands they are supported by each command or feature.

The following symbols are used in the command descriptions:

Output Registers

- Indicates that the bit must be set to 0.
- 1 Indicates that the bit must be set to 1.
- **D** The device number bit. Indicates that the device number bit of the Device/Head Register should be specified. This bit is reserved since all Serial ATA devices behave like Device 0.
- **H** Head number. Indicates that the head number part of the Device/Head Register is an output parameter and should be specified.
- L LBA mode. Indicates the addressing mode. Zero specifies CHS mode and one does LBA addressing mode.
- **R** Retry. Original meaning is already obsolete, there is no difference between 0 and 1. (Using 0 is recommended for future compatibility.)
- **B** Option Bit. Indicates that the Option Bit of the Sector Count Register should be specified. (This bit is used by Set Max ADDRESS command)
- V Valid. Indicates that the bit is part of an output parameter and should be specified.
- X Indicates that the hex character is not used.
- Indicates that the bit is not used.

Input Registers

- **0** Indicates that the bit is always set to 0.
- 1 Indicates that the bit is always set to 1.
- **H** Head number. Indicates that the head number part of the Device/Head Register is an input parameter and will be set by the device.
- V Valid. Indicates that the bit is part of an input parameter and will be set to 0 or 1 by the device.
- Indicates that the bit is not part of an input parameter.

The command descriptions show the contents of the Status and Error Registers after the device has completed processing the command and has interrupted the host.

Please refer to ATA interface specifications about other commands' descriptions which are not described in this SATA interface specification. However, be careful that Serial ATA Device/Head register bit-4 (d) is different from that of Parallel ATA. In Serial ATA, Device/Head register bit-4 is reserved for all commands.

11.1 Check Power Mode (E5h/98h)

Command Block	k Oı	ιtρι	ıt R	egis	ters	S		
Register	7	6	5	4	3	2	1	0
Data	1	-	-	1	ı	-	1	ı
Feature	-	-	-	-	1	-	-	ı
Sector Count	•	-	-	-	1	-	-	1
Sector Number	-	-	-	-	-	-	-	-
Cylinder Low	-	-	-	-	-	-	-	-
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	1	-	1	ם		-	-	
Command	1	1	1	0	0	1	0	1

Command Bloc	k In	put	Reg	jiste	ers			
Register	7	6	5	4	3	2	1	0
Data	•	1	1	•	•	•	1	1
Error			S	ee E	3elo	W		
Sector Count	٧	٧	٧	٧	٧	٧	٧	/
Sector Number	-	-	-	-	-	-	-	
Cylinder Low	-	-	-	-	-	-	-	
Cylinder High	-	-	-	-	-	-		
Device/Head	-	-	-	-	-	-	-	•
Status		·	S	ee E	3elo	w	·	

	Error Register										
7	7 6 5 4 3 2 1 0										
CRC	UNC	0	IDN	0	ABT	TON	AMN				
0	0	0	0	0	٧	0	0				

	Status Register											
7	6	5	4	3	2	1	0					
BSY	RDY	DF	DSC	DRQ COR		IDX	ERR					
0	V	0	-	-	0	-	V					

Table 73 Check Power Mode Command (E5h/98h)

The Check Power Mode command will report whether the device is spun up and the media is available for immediate access.

Input Parameters From The Device

Sector Count

The power mode code.

If the Extended Power Conditions feature set is disabled and the device is in Idle mode, Check Power Mode returns FFh by Sector Count Register, instead of returning 80h as defined in ACS-3 standard. Check Power Mode returns 0 in the Sector Count Register if the device is in Standby mode.

If the Extended Power Conditions feature set is enabled, the command returns power condition. idle_a condition is 81h, idle_b condition is 82h, idle_c condition is 83h, standby_y condition is 01h, standby_z condition is 00h.

EPC condition	Power Mode	Sector Count Register
Disabled	Active or Idle	FFh
	Standby	00h
Enabled	Active or Idle	FFh
	Idle_a	81h
	Idle_b	82h
	ldle_c	83h
	Standby_y	01h
	Standby_z	00h
	standby_z	00h

11.2 Configure Stream (51h)

Command Block	Output Re	giste	ers						
Register		7	6	5	4	3	2	1	0
Data Low		•	•	•	•	ı	•	•	1
Data High		-	-	-	-	•	-	-	1
Costuro	Current	٧	٧	-	-	•	٧	٧	/
Feature	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Coator Count	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Count	Previous	٧	٧	٧	٧	V	٧	٧	٧
Sector Number	Current	-	-	-	-	-	-	-	-
Sector Number	Previous	-	-	-	-	-	-	-	-
Culin do a Laur	Current	-	-	-	-	-	-	-	-
Cylinder Low	Previous	-	-	-	-	-	-	-	-
Cylinder High	Current	-	-	-	-	-	-	-	-
Cylinder High	Previous	-	-	-	-	-	-	-	-
Device/Head		1	1	1	D	-	-	-	-
Command		0	1	0	1	0	0	0	1

Command Bloc	ck Input R	t Registers							
Register		7 6 5 4 3 2 1 0					0		
Data Low		-	-	-	-	-	-	-	-
Data High		•	1	•	•	•	ı	1	ı
Error				S	ee E	Belo	W		
Coator Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
Sector Number	HOB=0	-	-	-	-	-	-	-	-
Sector Number	HOB=1	-	-	-	-	-	-	-	-
Cylinder Lew	HOB=0	-	-	-	-	-	-	-	-
Cylinder Low	HOB=1	-	-	-	-	-	-	-	-
Cylinder High	HOB=0							ı	
Cylinder High	HOB=1								
Device/Head		- - - - - - -						•	
Status				Se	ee E	Belo	W		

	Error Register											
7	6	5	2	1	0							
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	0	0	V	0	0					

	Status Register											
7	6	5	4	3	2	1	0					
BSY	RDY	SE	DSC	DRQ	COR	IDX	ERR					
0	V	0	V	-	0	-	V					

Table 74 Configure Stream Command (51h)

The Configure Stream command specifies the operating parameters of an individual stream. A Configure Stream command may be issued for each stream that is to be added or removed from the current operating configuration. If A/R = 1 and the specified ID is already valid at the device, the new parameters shall replace the old parameters, unless Command Abort is returned (see abort conditions for Error Register). In this case the old parameters for the specified Stream ID shall remain in effect.

Abort conditions for Error register are the following.

- The device does not support the Streaming Feature Set.
- A/R is cleared to zero and the Feature field contains a Stream ID that has not been sent in a previous CONFIGURE STREAM command.

Output Parameters To The Device

Feature Current bit 7 (A/R) If set to one, a request to add a new stream.

If cleared to zero, a request to remove a previous configured stream is

specified.

Feature Current bit 6 (R/W) R/W specifies a read stream if cleared to zero and a write stream if set

to one.

Feature Current bit 0..2 (Stream ID)

Feature Previous

The Stream ID shall be a value between 0 and 7. The default Command Completion Time Limit (CCTL).

The value is calculated as follows:

(Default CCTL) = ((content of the Features register)* (Identify

Device words (99:98))) microseconds.

This time shall be used by the device when a streaming command with the same stream ID and a CCTL of zero are issued. The time is measured from the write of the command register to the final INTRQ for command completion. The device has minimum CCTL value. When the specified value is shorter than the minimum value, CCTL is set to the minimum value. Actual minimum CCTL value is described in the

"Deviations from Standard" section.

Sector Count Current Allocation Unit Size In Sectors (7:0)
Sector Count Previous Allocation Unit Size In Sectors (15:8)

11.3 Device Configuration Overlay (B1h)

Command Block	k Oı	utpu	ıt R	egis	ters	6		
Register	7	6	5	4	3	2	1	0
Data	-	-	-	-	-	-	-	-
Feature	1	0	1	0	>	٧	>	>
Sector Count	-	-	-	-		-		-
Sector Number	-	-	-	-	-	-	-	-
Cylinder Low	-	-	-		•	-	•	ı
Cylinder High	-	-	-	-		-		-
Device/Head	-	-	-	ם	-	-	-	-
Command	1	0	1	1	0	0	0	1

Command Bloc	k In	put	Reg	giste	ers			
Register	7	6	5	4	3	2	1	0
Data	-	-	-	-	-	-	-	-
Error			S	ee E	3elo	W		
Sector Count	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	-	-	-	-	-	-	-	ı
Cylinder Low	>	٧	٧	>	>	٧	>	٧
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head	•	-	-	•	•	•	•	ı
Status			S	ee E	3elo	w		

	Error Register									
7	6	5	4	3	2	1	0			
CRC	UNC	0	IDN	0	ABT	TON	AMN			
0	0	0	0	0	V	0	0			

	Status Register										
7	6	5	4	3	2	1	0				
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR				
V	V	0	-	V	-	-	V				

Table 75 Device Configuration Overlay Command (B1h)

Individual Device Configuration Overlay feature set commands are identified by the value placed in the Features register. The table below shows these Features register values.

Value	Command
C0h	DEVICE CONFIGURATION RESTORE
C1h	DEVICE CONFIGURATION FREEZE LOCK
C2h	DEVICE CONFIGURATION IDENTIFY
C3h	DEVICE CONFIGURATION SET
other	Reserved

Table 76 Device Configuration Overlay Features register values

11.3.1 Device Configuration Restore (Subcommand C0h)

The Device Configuration Restore command disables any setting previously made by a Device Configuration Set command and returns the content of the Identify Device or Identify Packet Device command response to the original settings as indicated by the data returned from the execution of a Device Configuration Identify command.

11.3.2 Device Configuration Freeze Lock (Subcommand C1h)

The Device Configuration Freeze Lock command prevents accidental modification of the Device Configuration Overlay settings. After successful execution of a Device Configuration Freeze Lock command, all Device Configuration Set, Device Configuration Freeze Lock, Device Configuration Identify, and Device Configuration Restore commands are aborted by the device. The Device Configuration Freeze Lock condition shall be cleared by a power-down. The Device Configuration Freeze Lock condition shall not be cleared by hardware or software reset.

11.3.3 Device Configuration Identify (Subcommand C2h)

The Device Configuration Identify command returns a 512 byte data structure via PIO data-in transfer. The content of this data structure indicates the selectable commands, modes, and feature sets that the device is capable of supporting. If a Device Configuration Set command has been issued reducing the capabilities, the response to an Identify Device or Identify Packet Device command will reflect the reduced set of capabilities, while the Device Configuration Identify command will reflect the entire set of selectable capabilities.

The format of the Device Configuration Overlay Data structure is shown on next page.

11.3.4 Device Configuration Set (Subcommand C3h)

The Device Configuration Set command allows a device manufacturer or a personal computer system manufacturer to reduce the set of optional commands, modes, or feature sets supported by a device as indicated by a Device Configuration Identify command. The Device Configuration Set command transfers an overlay that modifies some of the bits set in words 63, 82, 83, 84, and 88 of the Identify Device command response. When the bits in these words are cleared, the device no longer supports the indicated command, mode, or feature set. If a bit is set in the overlay transmitted by the device that is not set in the overlay received from a Device Configuration Identify command, no action is taken for that bit.

The format of the overlay transmitted by the device is described in the table on next page. The restrictions on changing these bits are described in the text following that table. If any of the bit modification restrictions described is violated or any setting is changed with Device Configuration Set command, the device shall return command aborted. At that case, error reason code is returned to sector count register, invalid word location is returned to cylinder high register, and invalid bit location is returned to cylinder low register. The Definition of error information is shown on page 118.

Error Information Example 1:

After establish a protected area with Set Max address, if a user attempts to change maximum LBA address (Device Configuration Set or Device Configuration Restore), device shall abort that command and return error reason code as below.

Cylinder high : 03h = word 3 is invalid

Cylinder low : 00h this register is not assigned in this case
Sector Number : 00h this register is not assigned in this case
Sector count : 06h = Protected area is now established

Error Information Example 2:

When device is enabled the Security feature set, if user attempts to disable that feature, device abort that command and return error reason code as below.

Cylinder high : 07h = word 7 is invalid Cylinder low : 00h = bit 8-15 are valid Sector Number : 08h = bit 3 is invalid

Sector count : 04h = now Security feature set is enabled

Word	Content	
0	0002h	Data Structure revision
1	Multiword [DMA modes supported
	15-3	Reserved
	2	1 = Multiword DMA mode 2 and below are supported
	1	1 = Multiword DMA mode 1 and below are supported
	0	1 = Multiword DMA mode 0 is supported
2	Ultra DMA	modes supported
	15-7	Reserved
	6	1 = Ultra DMA mode 6 and below are supported
	5	1 = Ultra DMA mode 5 and below are supported
	4	1 = Ultra DMA mode 4 and below are supported
	3	1 = Ultra DMA mode 3 and below are supported
	2	1 = Ultra DMA mode 2 and below are supported
	1	1 = Ultra DMA mode 1 and below are supported
	0	1 = Ultra DMA mode 0 is supported
3-6	Maximum I	BA address

Table 77 Device Configuration Overlay Data structure

Word	Content	
7	Command	set/feature set supported
	15	0 = Reserved
	14	0 = Reserved
	13	0 = Reserved
	12	1 = SMART Selective self-test is supported
	11	1 = Forced Unit Access is supported
	10	0 = Reserved
	9	1 = Streaming feature set is supported
	8	1 = 48-bit Addressing feature set supported
	7	1 = Host Protected Area feature set supported
	6	0 = Reserved
	5	1 = Read/Write DMA Queued commands supported
	4	1 = Power-up in Standby feature set supported
	3	1 = Security feature set supported
	2	1 = SMART error log supported
	1	1 = SMART self-test supported
	0	1 = SMART feature set supported
8	Serial ATA	command / feature sets supported
	15-5	Reserved
	4	1 = Supports software settings preservation Reserved
	3 2	1 = Supports interface power management
	1	1 = Supports non-zero buffer offset in DMA Setup FIS
	0	1 = Supports native command queuing
9-20	Reserved	
21	15-14	Reserved
	13 12-10	1 = Support for WRITE UNCORRECTABLE is allowed Reserved
	9	1 = Extended Power Conditions feature set supported
	8-0	Reserved
22-254	Reserved	Note
255	Integrity w	
	15-8	Checksum
	7-0	Signature (A5h)

Table 78 Device Configuration Overlay Data structure - Continued -

Note.

Bits 7:0 of this word contain the value A5h. Bits 15:8 of this word contain the data structure checksum. The data structure checksum is the two's complement of the sum of all byte in words 0 through 254 and the byte consisting of bits 7:0 of word 255. Each byte is added with unsigned arithmetic, and overflow is ignored. The sum of all bytes is zero when the checksum is correct.

Cylinder high	invalid	nvalid word location					
Cylinder low	invalid	valid bit location (bits (15:8))					
Sector number	invalid	valid bit location (bits (7:0))					
Sector count	error	error reason code & description					
	01h 02h 03h 04h 05h 06h 07h 08h	DCO feature is frozen Device is now Security Locked mode Device's feature is already modified with DCO User attempt to disable any feature enabled Device is now SET MAX Locked or Frozen mode Protected area is now established DCO is not supported Subcommand code is invalid					
	FFh	other reason					

Table 79 DCO error information definition

11.4 Download Microcode (92h)

Command Block Output Registers										
Register	7 6 5 4 3 2 1 0									
Data	•	ı	-	•	•	1	•	•		
Feature	SUBCOMMAND(00-07)									
Sector Count	SECTOR_COUNT(00-07)									
Sector Number	S	ECT	ΓOR		NUC	IT(0	8-1	5)		
Cylinder Low	В	JFF	ER.	_OF	FSE	ET(C	0-0	7)		
Cylinder High	В	JFF	ER.	_OF	FSE	ET(C	8-1	5)		
Device/Head	•	1	-	ם	•	•	•	•		
Command	1	0	0	1	0	0	1	0		

Command Bloc	Command Block Input Registers										
Register	7	6	5	4	3	2	1	0			
Data	•	ı	ı	-	-	•	•	ı			
Error		See Below									
Sector Count	-	-	-	-	-	-	-	-			
Sector Number	-	-	-	-	-	-	-	-			
Cylinder Low	-	-	-	-	-	-	-	-			
Cylinder High	-	-	-	-	-	-	-	-			
Device/Head	-	-	ı	-	-	-	•	ı			
Status			S	ee E	3elo	W					

	Error Register									
7	6	5	4	3	2	1	0			
CRC	UNC	0	IDN	0	ABT	TON	AMN			
0	V	0	0	0	V	0	0			

	Status Register										
7	6	5	4	3	2	1	0				
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR				
0	1	0	1	0	0	-	V				

Table 80 Download Microcode Command (92h)

Output Parameters To The Device

Feature Subcommand code.

03h: Download and save microcode with offsets. (See 11.4.3)

07h: Download and save microcode.

0Eh : Download and save microcode with offsets for future use. (See 11.4.4)

0Fh: Activate downloaded microcode. (See 11.4.5)

Other values are reserved.

Sector Count Lower byte of 16-bit sector count value to transfer from the host. (See 11.4.2)

Sector Number Higher byte of 16-bit sector count value to transfer from the host. (See 11.4.2)

Cylinder Buffer offset (only used for Feature = 03h or 0Eh)

11.4.1 Overview

This command enables the host to alter the device's microcode. The data transferred using the Download Microcode commands is vendor specific.

In reloading new microcode, when the spin-up of the device is disabled, the device spins down after reloading new microcode.

The device may abort the Download Microcode command and discard all previously downloaded Microcode, if the current buffer offset is not equal to the sum of the previous Download Microcode command buffer offset and the previous sector count. The first Download Microcode command must have a buffer offset of zero. The new firmware should become effective immediately after the transfer of the last data segment has completed.

When the device detects the last Download Microcode command for the firmware download the device performs any device required verification and saves the complete set of downloaded microcode.

Power on reset prior to the receipt of the last segment will discard all of the microcode segments received.

11.4.2 Sector Count / Sector Number

All transfers be an integer multiple of the sector size. The size of the data transfer is determined by the contents of the Sector Number and Sector Count registers. The Sector Number register is used to extend the Sector Count register to create a 16-bit sector count value. The Sector Number register is the most significant eight bits and the Sector Count register is the least significant eight bits. A value of zero in both the Sector Number and Sector Count registers indicate no data is to be transferred.

11.4.3 Download and save microcode with offsets

A Features register value of 03h indicates that the microcode will be transferred in one or more Download Microcode commands using the offset transfer method. The buffer offset value is defined by the value in Cylinder registers. The buffer offset value is the starting location in the microcode file, which varies in 512 byte increments. All microcode segments will be sent to the device in sequence.

11.4.4 Download and save microcode with offsets for future use

A Features register value of 0Eh indicates that the microcode will be transferred in one or more Download Microcode commands using the offset transfer method, and stored for deferred update. The buffer offset value is defined by the value in Cylinder registers. The buffer offset value is the starting location in the microcode file, which varies in 512 byte increments.

All microcode segments will be sent to the device in sequence.

11.4.5 Activate downloaded microcode

The device may abort the Download Microcode command and discard all previously downloaded Microcode, if the current buffer offset is not equal to the sum of the previous Download Microcode command buffer offset and the previous sector count. The first Download Microcode command must have a buffer offset of zero.

After the transfer of the last data segment has completed, the device performs any device required verification and stores the complete set of downloaded microcode which has not been activated. The new firmware will be activated after the device receives following Download Microcode command with a Features register value of 0Fh.

Power on reset prior to the receipt of the last segment or activate downloaded microcode will discard all of the microcode segments which are received or stored.

11.4.6 Error Outputs

ABT will be set to 1 in the Error Register if the value in the Feature register is neither 03h, 07h, 0Eh nor 0Fh, or the device is in Security Locked mode. When the reload of new microcode is requested in the data sent by the host for this Download command, UNC error will be set to 1 in the Error Register if the device fails to reload new microcode. This error is reported only when the reload of microcode is requested.

11.5 Download Microcode DMA (93h)

Command Block Output Registers										
Register	7 6 5 4 3 2 1 0									
Data	-	·	-	•	•	•	•	•		
Feature	SUBCOMMAND(00-07)									
Sector Count	SECTOR_COUNT(00-07)									
Sector Number	S	EC	ΓOR		OUN	IT(0	8-1	5)		
Cylinder Low	ВІ	JFF	ER.	_OF	FSE	ET(C	0-0	7)		
Cylinder High	ВІ	JFF	ER.	_OF	FSE	ET(C	8-1	5)		
Device/Head	-		-	D	•	•	•			
Command	1	0	0	1	0	0	1	1		

Command Block Input Registers										
Register	7	6	5	4	3	2	1	0		
Data	•	•	•	•	•	-	•	-		
Error			S	ee E	Belo	W				
Sector Count		•	-		•	•	-	-		
Sector Number	-	-	-	-	-	-	-			
Cylinder Low	-	-	-	-	-	-	-			
Cylinder High	-	-	-	-	-	-	-	-		
Device/Head	•	•	•	•	•	-	•	-		
Status			S	ee E	3elo	W	1			

	Error Register									
7	6 5 4 3 2				2	1	0			
CRC	UNC	0	· · · - ·				AMN			
0	V	0	0	0	V	0	0			

	Status Register										
7	6	5	4	3	2	1	0				
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR				
0	1	0	1	0	0	-	V				

Table 81 Download Microcode DMA Command (93h)

Output Parameters To The Device

Feature Subcommand code.

03h : Download and save microcode with offsets. (See 11.5.3)

07h: Download and save microcode.

0Eh: Download and save microcode with offsets for future use. (See 11.5.4)

0Fh: Activate downloaded microcode. (See 11.5.5)

Other values are reserved.

Sector Count Lower byte of 16-bit sector count value to transfer from the host. (See 11.5.2)

Sector Number Higher byte of 16-bit sector count value to transfer from the host. (See 11.5.2)

Cylinder Buffer offset (only used for Feature = 03h, 0Eh)

11.5.1 Overview

This command enables the host to alter the device's microcode. The data transferred using the Download Microcode DMA commands is vendor specific.

In reloading new microcode, when the spin-up of the device is disabled, the device spins down after reloading new microcode.

The device may abort the Download Microcode DMA command and discard all previously downloaded Microcode, if the current buffer offset is not equal to the sum of the previous Download Microcode DMA command buffer offset and the previous sector count. The first Download Microcode DMA command must have a buffer offset of zero. The new firmware should become effective immediately after the transfer of the last data segment has completed.

When the device detects the last Download Microcode command for the firmware download the device performs any device required verification and saves the complete set of downloaded microcode.

Power on reset prior to the receipt of the last segment will discard all of the microcode segments received.

11.5.2 Sector Count / Sector Number

All transfers shall be an integer multiple of the sector size. The size of the data transfer is determined by the contents of the Sector Number and Sector Count registers. The Sector Number register is used to extend the Sector Count register to create a 16-bit sector count value. The Sector Number register is the most significant eight bits and the Sector Count register is the least significant eight bits.

11.5.3 Download and save microcode with offsets

A Features register value of 03h indicates that the microcode will be transferred in one or more Download Microcode DMA commands using the offset transfer method. The buffer offset value is defined by the value in Cylinder registers. The buffer offset value is the starting location in the microcode file, which varies in 512 byte increments.

All microcode segments will be sent to the device in sequence.

11.5.4 Download and save microcode with offsets for future use

A Features register value of 0Eh indicates that the microcode will be transferred in one or more Download Microcode DMA commands using the offset transfer method, and stored for deferred update. The buffer offset value is defined by the value in Cylinder registers. The buffer offset value is the starting location in the microcode file, which varies in 512 byte increments.

All microcode segments will be sent to the device in sequence.

11.5.5 Activate downloaded microcode

The device may abort the Download Microcode DMA command and discard all previously downloaded Microcode, if the current buffer offset is not equal to the sum of the previous Download Microcode DMA command buffer offset and the previous sector count. The first Download Microcode DMA command must have a buffer offset of zero. After the transfer of the last data segment has completed, the device performs any device required verification and stores the complete set of downloaded microcode which has not been activated. The new firmware will be activated after the device receives following Download Microcode DMA command with a Features register value of 0Fh. Power on reset prior to the receipt of the last segment or activate downloaded microcode will discard all of the microcode segments which are received or stored.

11.5.6 Error Outputs

ABT will be set to 1 in the Error Register if the value in the Feature register is neither 03h, 07h, 0Eh nor 0Fh, or the device is in Security Locked mode. When the reload of new microcode is requested in the data sent by the host for this Download command, UNC error will be set to 1 in the Error Register if the device fails to reload new microcode. This error is reported only when the reload of microcode is requested.

11.6 Execute Device Diagnostic (90h)

Command Bloc	Command Block Output Registers										
Register	7	6	5	4	3	2	1	0			
Data	•	ı	ı	1	1	1	1	1			
Feature	•	ı	ı	1	1	1	1	ı			
Sector Count	-	-	-	-	-	-	-	-			
Sector Number	-	•	•	•	•	ı	•	ı			
Cylinder Low	•	ı	ı	1	1	1	1	ı			
Cylinder High	-	-	-	-	-	-	-	-			
Device/Head	1	1	1	-	•	-	-	1			
Command	1	0	0	1	0	0	0	0			

Command Bloc	Command Block Input Registers									
Register	7	6	5	4	ფ	2	1	0		
Data	ı	ı	-	1	1	ı	1	1		
Error	See Below									
Sector Count	-	-	-	-	-	-	-			
Sector Number	1	ı	-	•	•	•	•	-		
Cylinder Low	ı	ı	-	1	1	ı	1	1		
Cylinder High	-	-	-	-	-	-	-			
Device/Head										
Status		•	S	ee E	Belo	W				

Error Register	
Diagnostic Code	

	Status Register										
7	6	5	4	3	2	1	0				
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR				
0	V	0	-	-	0	-	0				

Table 82 Execute Device Diagnostic Command (90h)

The Execute Device Diagnostic command performs the internal diagnostic tests implemented by the device. The results of the test are stored in the Error Register.

The normal Error Register bit definitions do not apply to this command. Instead, the register contains a diagnostic code. See Table 31 Diagnostic Codes" on the page 50 for its definition.

11.7 Flush Cache (E7h)

Command Block	Ou	tpu	t Re	gist	ers			
Register	7	6	5	4	თ	2	1	0
Data	ı	ı	1	1	ı	1	1	ı
Feature	ı	ı	1	1	ı	1	1	ı
Sector Count	-	-	-	-	-	-	-	-
Sector Number	ı	•	•	•	•	•	•	ı
Cylinder Low	ı	ı	1	1	ı	1	1	ı
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	1	-	1	Δ	-	-	•	ı
Command	1	1	1	0	0	1	1	1

Command Bloc	Command Block Input Registers										
Register	7 6 5 4 3 2 1 0										
Data	1	ı	-	1	1	1	1	ı			
Error	See Below										
Sector Count	-	-	-	-	-	-	-	-			
Sector Number	•	•	-	•	•	•	•	1			
Cylinder Low	1	ı	-	1	1	1	1	ı			
Cylinder High	-	-	-	-	-	-	-	-			
Device/Head											
Status		·	S	ee E	Belo	w	·				

	Error Register									
7	6	5	4	3	2	1	0			
CRC	UNC	0	IDN	0	ABT	TON	AMN			
0	0	0	0	0	V	0	0			

	Status Register										
7	7 6 5 4 3 2 1					0					
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR				
0	V	0	V	-	0	-	V				

Table 83 Flush Cache Command (E7h)

This command causes the device to complete writing data from its cache.

The device returns good status after data in the write cache is written to disk media.

11.8 Flush Cache Ext (EAh)

Command Block Output Registers									
Register			6	5	4	3	2	1	0
Data Low	-	-	-	-	-	-	-	-	
Data High		-	-	ı	ı	ı	-	ı	ı
Feature	Current	-	-	ı	ı	ı	-	ı	ı
realure	Previous	-	-	-	-	-	-	-	-
Sector Count	Current	-	-	-	-	-	-	-	-
Sector Count	Previous	-	-	-	-	-	-	-	-
Sector Number	Current	-	-	-	-	-	-	-	-
Sector Number	Previous	-	-	1	-	1	-	1	-
Cylinder Low	Current	-	-	ı	ı	ı	-	ı	ı
Cylinder Low	Previous	-	-	-	-	-	-	-	-
Culindor High	Current	-	-	ı	ı	ı	-	ı	ı
Cylinder High Previous		-	-	-	-	-	-	-	-
Device/Head		-	-	•	ם	•	-	•	•
Command	1	1	1	0	1	0	1	0	

Command Block	Input Re	gis	ters	5					
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	•
Data High		-	-	-	ı	-	-	ı	ı
Error				.Se	ee E	Belo	OW.		
Contar Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
Sector Number	HOB=0	-	-	-	-	-	-	-	-
Sector Number	HOB=1	-	-	-	-	-	-	-	-
Cylinder Low	HOB=0	-	-	-	-	-	-	-	-
Cylinder Low	HOB=1	-	-	-	-	-	-	-	-
Culin doublinds	HOB=0	-	-	-	-	-	-	-	-
Cylinder High HOB=1		-	-	-	-	-	-	-	-
Device/Head			-	-	-	-	-	-	-
Status			.Se	ee E	3eld	ow.			

		I	Error R	egiste	r							
7	7 6 5 4 3 2 1 0											
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	0	0	V	0	0					

	Status Register											
7	6	5	4	3	2	1	0					
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	V	-	0	-	V					

Table 84 Flush Cache Ext Command (EAh)

This command causes the device to complete writing data from its cache.

The device returns good status after data in the write cache is written to disk media.

11.9 Format Track (50h)

Command Bloc	k O	utpı	ıt R	egis	ters	3		
Register	7	6	5	4	3	2	1	0
Data	1	-	1	1	•	1	•	-
Feature		-	-		-		-	
Sector Count	-	-	-	-	-	-	-	-
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	>	٧	>	>	٧	>	٧	٧
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head	1	Ĺ	1	D	Н	Η	Τ	Н
Command	0	1	0	1	0	0	0	0

Command Block	Inp	ıt R	egis	sters	3				
Register	7	6	5	4	3	2	1	0	
Data	1	ı	1	-	-	1	•	ı	
Error	See Below								
Sector Count	-	-	-	-	-	-	-	-	
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧	
Cylinder Low	>	>	>	٧	٧	>	٧	>	
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧	
Device/Head	-	-	-	-	Н	Н	Н	Н	
Status			S	ee l	Belo	w		•	

	Error Register											
7 6 5 4 3 2 1 0												
CRC	C UNC 0 IDN 0 ABT TON AMI											
0	0 0 0 V 0 V 0 O											

	Status Register										
7	7 6 5 4 3 2 1 0										
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR				
0	0 V 0 V - 0 - V										

Table 85 Format Track Command (50h)

The Format Track command formats a single logical track on the device. Each good sector of data on the track will be initialized to zero with write operation. At this time, whether the sector of data is initialized correctly is not verified with read operation. Any data previously stored on the track will be lost.

The host may transfer a sector of data containing a format table to the device. But the device ignores the format table and writes zero to all sectors on the track regardless of the descriptors.

Since device performance is optimal at 1:1 interleave, and the device uses relative block addressing internally, the device will always format a track in the same way no matter what sector numbering is specified in the format table.

Output Parameters To The Device

Sector Number In LBA mode, this register specifies LBA address bits 0-7 to be formatted. (L=1)

Cylinder High/Low The cylinder number of the track to be formatted. (L=0)

In LBA mode, this register specifies LBA address bits 8-15 (Low), 16-23 (High) to be

formatted. (L=1)

H The head number of the track to be formatted. (L=0)

In LBA mode, this register specifies LBA address bits 24-27 to be formatted. (L=1)

Input Parameters From The Device

Sector Number In LBA mode, this register specifies current LBA address bits 0-7. (L=1)

Cylinder High/Low In LBA mode, this register specifies current LBA address bits 8-15 (Low), 16-23 (High)

H In LBA mode, this register specifies current LBA address bits 24-27. (L=1)

Error The Error Register. An Abort error (ABT=1) will be returned when LBA out of range.

In LBA mode, this command formats a single logical track including the specified LBA.

11.10 Format Unit (F7h)

Command Block	Ou	tpu	t Re	gist	ers			
Register	7	6	5	4	3	2	1	0
Data	-	-		-	-	-	-	1
Feature	0	0	0	1	0	0	0	1
Sector Count	-	-	-	-	-	-	-	-
Sector Number	-	-		-	-	-	-	1
Cylinder Low	•	-	•	-	•	•	•	•
Cylinder High	-	-		-	-	-	-	1
Device/Head	1	L	1	D	-	-	-	-
Command	1	1	1	1	0	1	1	1

Command Bloc	Command Block Input Registers										
Register	7	6	5	4	3	2	1	0			
Data	1	-	-	1	1	-	-	1			
Error	See Below										
Sector Count	-	-	-	-	-	-	-	-			
Sector Number	1	-	-	1	1	-	-	1			
Cylinder Low	•	•	•	•	•	•	•	-			
Cylinder High	1	-	-	1	1	-	-	1			
Device/Head	-	-	-	-	-	-	-	-			
Status	See Below										

	Error Register										
7	7 8 9 10 3 2 1 0										
CRC	UNC	0	IDN	0	ABT	TON	AMN				
0	V	0	V	0	V	0	0				

	Status Register											
7 6 5 4 3 2 1 0												
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	V	0	0	-	V					

Table 86 Format Unit Command (F7h)

The Format Unit command initializes all user data sectors after merging reassigned sector location into the defect information of the device and clearing the reassign information. Both new reassign information and new defect information are available right after command completion of this command. Previous information of reassign and defect are erased from the device by executing this command.

Note that the Format Unit command initializes from LBA 0 to Native MAX LBA regardless of setting by Initialize Device Parameter (91h) command, Device Configuration Overlay, or Set Max Address (F9h) command, so the protected area defined by these commands is also initialized.

Security Erase Prepare (F3h) commands should be completed just prior to the Format Unit command. If the device receives a Format Unit command without a prior Security Erase Prepare command, the device aborts the Format Unit command.

All values in Feature register are reserved, and any values other than 11h should not be put into Feature register.

This command does not request to data transfer.

Command execution time depends on drive capacity. To determine command timeout value, Word 89 of Identify Device data should be referred.

11.11 Identify Device (ECh)

Command Blo	ck (Out	put	Reg	iste	rs		
Register	7	6	5	4	3	2	1	0
Data	ı	ı	-	•	ı	ı	ı	ı
Feature	-	-	-		-	-	-	-
Sector Count	•	1	-	•	•	•	•	1
Sector Number	-	-	-		-	-	-	-
Cylinder Low	-	-	-	-	-	-	-	-
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	1	-	1	D	-	-	-	-
Command	1	1	1	0	1	1	0	0

Command Block	Inp	ut R	egi	ste	'S			
Register	7	6	5	4	ფ	2	1	0
Data	•	-	-	•	•	1	-	•
Error	See Below							
Sector Count	ı	-	-	ı	•	-	•	ı
Sector Number	1	-	-	1	-		-	1
Cylinder Low	ı	-	-	ı	•	-	•	ı
Cylinder High	-	-	-	-	-		-	-
Device/Head								
Status		See Below						

Error Register							
0							
AMN							
0							
/							

	Status Register						
7	6	5	4	3	2	1	0
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR
0	V	0	-	-	0	-	V

Table 87 Identify Device Command (ECh)

The Identify Device command requests the device to transfer configuration information to the host. The device will transfer a sector to the host containing the information described in the following pages.

Word	Content		Description	
00	045AH		Drive classificati	ion, bit assignments:
	or		15 (=0):	1=ATAPI device, 0=ATA device
	045EH		14 – 8 :	retired
			7 (=0):	1=removable cartridge device
			6 (=1):	1=fixed device
			5-3 :	retired
			2 (=0):	Response incomplete
			1:	retired
			0 (=0):	Reserved
01	xxxxH			ders in default translate mode
02	C837H		Specific Configu	ıration
			37C8H:	Need Set Feature for spin-up after power-up Identify Device is incomplete
			738CH:	Need Set Feature for spin-up after power-up Identify Device is complete
			8C73H:	No Need Set Feature for spin-up after power-up Identify Device is incomplete
			C837H:	No Need Set Feature for spin-up after power-up Identify Device is complete
03	00xxH		Number of head	s in default translate mode
04	0	*	Reserved	
05	0	*	Reserved	
06	003FH		Number of sector	ors per track in default translate mode
07	0000H	*	Number of bytes	s of sector gap
80	0000H	*	Number of bytes	s in sync field
09	0000H	*	Reserved	
10-19	XXXX		Serial number in	ASCII (0 = not specified)
20	0003H	*	Controller type:	
				ed, multiple sector buffer with look-ahead read
21	XXXXH	*	Buffer size in 51	2-byte increments. In case of 64MB buffer, it is set to 0x0000.
22	0038H	*	Reserved	
23-26	XXXX		Microcode version	
27-46	XXXX		Model number in	n ASCII
47	8010H		15-8 :	
			7-0 :	Maximum number of sectors that can be transferred per interrupt on Read and Write Multiple commands
48	4000H			ting feature set options
			15 (=0) :	Shall be cleared to zero
			14 (=1) :	Shall be set to one
			13-1 (=0) :	Reserved for the Trusted Computing Group
			0 (=0) :	0=Trusted Computing feature set is not supported

Table 88 Identify device information

Word	Content	Description
49	xF00H	Capabilities, bit assignments:
		15-14 (=0) Reserved
		13 Standby timer
		(=1) values as specified in ATA standard are supported
		(=0) values are vendor specific
		12 (=0) Reserved
		11 (=1) IORDY Supported
		10 (=1) IORDY can be disabled
		9 (=1) LBA supported
		8 (=1) DMA supported
		7- 0 (=0) Reserved
50	4000H	Capabilities, bit assignments:
		15-14 (=01) word 50 is valid
		13-1 (=0) Reserved
		0 (=0) Minimum value of Standby timer less than 5 minutes
51	0200H	PIO data transfer cycle timing mode
52	0200H *	DMA data transfer cycle timing mode
		Refer Word 62 and 63
53	0007H	Validity flag of the word
		15-8 (=0) Free-fall Control Sensitivity
		00h = Vendor's recommended setting
		7-3 (=0) Reserved
		2 (=1) 1=Word 88 is Valid
		1 (=1) 1=Word 64-70 are Valid
		0 (=1) 1=Word 54-76 are Valid
54	xxxxH	Number of current cylinders
55	xxxxH	Number of current heads
56	xxxxH	Number of current sectors per track
57-58	xxxxH	Current capacity in sectors
		Word 57 specifies the low word of the capacity
59	xxxxH	Sanitize capabilities and Current Multiple setting. Bit assignments
		15 (=0) The BLOCK ERASE EXT command is supported
		14 (=1) The OVERWRITE EXT command is supported
		13 (=0or1) The CRYPTO SCRAMBLE EXT command is supported
		12 (=1) The Sanitize Device Feature Set is supported
		11-9 (=0) Reserved
		8 1= Multiple Sector Setting is Valid
		7-0 xxh = Current setting for number of sectors
60-61	xxxxH	Total Number of User Addressable Sectors
		Word 60 specifies the low word of the number
		FFFFFFh=The 48-bit native max address is greater than 268,435,455
62	0000H	Reserved
63	xx07H	Multiword DMA Transfer Capability
		15- 8 Multi word DMA transfer mode active
		7-0 (=7) Multi word DMA transfer modes supported
		(support mode 0,1 and 2)
64	0003H	Flow Control PIO Transfer Modes Supported
		15-8 (=0) Reserved
		7-0 (=3) Advanced PIO Transfer Modes Supported
		'11' = PIO Mode 3 and 4 Supported

Table 89 Identify device information -Continued-

Word	Content	Description
65	0078H	Minimum Multiword DMA Transfer Cycle Time Per Word
		15-0 (=78) Cycle time in nanoseconds (120ns, 16.6MB/s)
66	0078H	Manufacturer's Recommended Multiword DMA Transfer Cycle Time
		15-0 (=78) Cycle time in nanoseconds (120ns, 16.6MB/s)
67	0078H	Minimum PIO Transfer Cycle Time Without Flow Control
		15-0 (=78) Cycle time in nanoseconds (120ns, 16.6MB/s)
68	0078H	Minimum PIO Transfer Cycle Time With IORDY Flow Control
69	0C08H	15-0 (=78) Cycle time in nanoseconds (120ns, 16.6MB/s) Additional Supported
09	000011	11 (=1) READ BUFFER DMA command is supported
		10 (=1) WRITE BUFFER DMA command is supported
		4 (=0) 1=Device Encrypts All User Data on the device
		3 (=1) Extended Number of User Addressable Sectors is supported
70-74	0000H	Reserved
75	001FH	Queue depth
		15-5 (=0) Reserved
		4-0 (=1F) Maximum queued depth – 1
76	970xH	SATA capabilities
		15 (=1) READ LOG DMA EXT command is supported
		14-13 (=0) Reserved
		12 (=1) High Priority command (Please see 6.5 First-party DMA commands)
		11 (=0) Unload while NCQ commands are outstanding is supported
		10 (=1) Phy event counters 9 (=1) Receipt of host-initiated interface power management requests
		9 (=1) Receipt of host-initiated interface power management requests 8 (=1) Native Command Queuing supported
		7-4 (=0) Reserved
		3 (=x) SATA Gen-3 speed (6.0Gbps) supported
		2 (=x) SATA Gen-2 speed (3.0Gbps) supported
		1 (=1) SATA Gen-1 speed (1.5Gbps) supported
		0 (=0) Reserved
77	003xH	15-6 (=0) Reserved
		5 (=1) Supports NCQ Queue Management Command
		4 (=1) Supports NCQ Streaming
		3-1 (=011) Current negotiated SATA speed Gen-3 speed of 6.0Gbps
		(=010) Current negotiated SATA speed Gen-2 speed of 3.0Gbps
		(=001) Current negotiated SATA speed Gen-1 speed of 1.5Gbps
		0 (=0) Reserved
78	005EH	SATA supported features
		15-7 (=0) Reserved
		6 (=1) Software setting preservation
		5 (=0) Reserved
		4 (=1) In-order data delivery
		3 (=1) Device initiated interface power management 2 (=1) DMA Setup Auto-Activate optimization
		1 (=1) Non-zero buffer offset in DMA Setup FIS
		0 (=0) Reserved
	I	5 (-0) 110001100

Table 90 Identify device information - Continued -

Word	Content	Description		
79	0040H	SATA enabled features		
		15-7 (=0)	Reserved	
		6 (=1)	Software setting preservation	
		5 (=0)	Reserved	
		4 (=0)	In-order data delivery	
		3 (=0)	Device initiated interface power management	
		2 (=0)	DMA Setup Auto-Activate optimization	
		1 (=0)	Non-zero buffer offset in DMA Setup FIS	
		0 (=0)	Reserved	
80	03FCH	Major version nu	mber	
		15-0(=3FCh)	ATA-2, ATA-3, ATA/ATAPI-4, ATA/ATAPI-5, ATA/ATAPI-6. ATA/ATAPI-7 and ATA8-ACS and ACS2	
81	0029H	Minor version nu	mber	
		15-0(=29h)	ATA8-ACS Revision 4	
82	746BH	Command set		
		15 (=0)	Reserved	
		14 (=1)	NOP command	
		13 (=1)		
		12 (=1)		
		11 (=0)		
		10 (=1)	Host Protected Area Feature Set	
		9 (=0)	DEVICE RESET command	
		8 (=0)	SERVICE interrupt	
		7 (=0)	Release interrupt	
		6 (=1)	LOOK AHEAD	
		5 (=1)		
		4 (=0)	PACKET Command feature set	
		3 (=1)	Power management feature set	
		2 (=0)	Removable feature set	
		1 (=1)	·	
		0 (=1)	SMART feature Set	

Table 91 Identify device information - Continued -

Word	Content	Description	
83	7D69H	Command se	t supported
			Word 83 is valid
		13 (=1)	FLUSH CACHE EXT command supported
		12 (=1)	FLUSH CACHE command supported
		11 (=1)	Device Configuration Overlay command supported
		10 (=1)	48-bit Address feature set supported
		` ,	Reserved
			SET Max Security extension
			Set Features Address Offset feature mode
		6 (=1)	
		5 (=1)	Power-Up In Standby feature set supported
		4 (=0)	Removable Media Status Notification feature
		3 (=1)	Advanced Power Management feature set
			CFA feature set
			READ/WRITE DMA QUEUED
			Download Microcode command
84	4163H		t/feature supported extension
	or		Word 84 is valid
	4773H	13(=0)	IDLE IMMEDIATE with UNLOAD FEATURE supported
		12-11(= 0)	Reserved
		, ,	URG bit supported for WRITE STREAM DMA Ext and WRITE STREAM
		10 (=x)	Ext
		9 (=x)	URG bit supported for READ STREAM DMA Ext and READ STREAM Ext
		8 (=1)	World wide name supported
		7 (=0)	WRITE DMA QUEUED FUA EXT command supported
			WRITE DMA FUA EXT and WRITE MULTIPLE FUA EXT commands
		6 (=1)	supported
		5 (=1)	General Purpose Logging feature set supported
		4 (=x)	Streaming feature set supported
		3 (=0)	Media Card Pass Through Command feature set supported
			Media serial number supported
		1 (=1)	SMART self-test supported
		0 (=1)	SMART error logging supported
85	xxxxH	Command se	t/feature enabled
		_	Reserved
			NOP command
			READ BUFFER command
		12	WRITE BUFFER command
		11	Reserved
			Host Protected Area feature set
			DEVICE RESET command
			SERVICE interrupt
			RELEASE interrupt
		6	LOOK AHEAD
		5	WRITE CACHE
		4	PACKET Command feature set
		3	Power management feature set
		2	Removable media feature set
		1	Security feature set
		0	SMART feature set

Table 92 Identify device information - Continued -

Word	Content	Description	
86	xxxxH	Command se	t/feature enabled
		15	Words 120:119 are valid.
		14	Reserved
		13	FLUSH CACHE EXT command supported
		12	FLUSH CACHE command supported
		11	Device Configuration Overlay command enabled
		10	48-bit Address features set supported
		9	Reserved
		8	Set Max Security extensions enabled
		7	Set Features Address Offset mode
		6	Set Features subcommand required to spin-up after power-up
		5	Power-Up In Standby feature set enabled
		4	Removable Media Status Notification feature
		3	Advanced Power Management Feature set
		2	CFA Feature set
		1	READ/WRITE DMA QUEUED
		0	Download Microcode command
87	4163H	Command se	t/feature default
	or	15-14 (=01)	Word 87 is valid
	4763H or	13 (=0)	IDLE IMMEDIATE with UNLOAD FEATURE supported
	4773H	12-11 (= 0)	Reserved
		10 (=x)	URG bit supported for WRITE STREAM DMA Ext and WRITE STREAM Ext
		9 (=x)	URG bit supported for READ STREAM DMA Ext and READ STREAM Ext
		8 (=1)	World wide name supported
		7 (=0)	WRITE DMA QUEUED FUA EXT command supported
		6 (=1)	WRITE DMA FUA EXT and WRITE MULTIPLE FUA EXT commands supported
		5 (=1)	General Purpose Logging feature set supported
		4 (=x)	Valid CONFIGURE STREAM command has been executed
		3 (=0)	Media Card Pass Through Command feature set enabled
		2 (=0)	Media serial number is valid
		1 (=1)	SMART self-test supported
		0 (=1)	SMART error logging supported

Table 93 Identify device information - Continued -

Word	Content	Description
88	xx7FH	Ultra DMA Transfer modes
		15-8 (=xx) Current active Ultra DMA transfer mode
		15 Reserved (=0)
		14 Mode 6 1 = Active 0 = Not Active
		13 Mode 5 1 = Active 0 = Not Active
		12 Mode 4 1 = Active 0 = Not Active
		11 Mode 3 1 = Active 0 = Not Active
		10 Mode 2 1 = Active 0 = Not Active
		9 Mode 1 1 = Active 0 = Not Active
		8 Mode 0 1 = Active 0 = Not Active
		7-0 (=7F) Ultra DMA Transfer mode supported
		7 Reserved (=0)
		6 Mode 6 1 = Support
		5 Mode 5 1 = Support
		4 Mode 4 1 = Support
		3 Mode 3 1 = Support
		2 Mode 2 1 = Support
		1 Mode 1 1 = Support
		0 Mode 0 1 = Support
89	xxxxH	Time required for security erase unit completion
09		Time= value(xxxxh)*2 [minutes]
90	xxxxH	Time required for Enhanced security erase completion
91	00FEH	Current Advanced power management value
92	FFFEH	Current Password Revision Code
93	0000H	COMRESET result
94	0000H	Reserved
		Stream Minimum Request Size
		Number of sectors that provides optimum performance in streaming environment. This
95	xxxxH	number shall be a power of two, with a minimum of eight sectors (4096 bytes). The
		starting LBA value for each streaming command should be evenly divisible by this request
		size.
		Streaming Transfer Time – DMA
		The worst-case sustainable transfer time per sector for the device is calculated as follows:
96	xxxxH	Streaming Transfer Time = (word 96) * (words(99:98) / 65536)
		If the Streaming Feature set is not supported by the device, the content of word 96 shall
		be zero.
		Streaming Access Latency – DMA and PIO
		The worst-case access latency of the device for a streaming command is calculated as
97	xxxxH	follows:
	******	Access Latency = (word 97) * (words(99:98) / 256)
		If the Streaming Feature set is not supported by the device, the content of word 97 shall
		be zero.
98	xxxxH	Streaming Performance Granularity
99	xxxxH	Streaming Performance Granularity

Table 94 Identify device information - Continued -

Word	Content	Description
100-103	xxxxH	Total Number of User Addressable Logical Sectors for 48-bit commands
104	xxxxH	Streaming Transfer Time – PIO The worst-case sustainable transfer time per sector for the device is calculated as follows: Streaming Transfer Time = (word 104) * (words(99:98) / 65536) If the Streaming Feature set is not supported by the device, the content of word 104 shall be zero.
105	0000H	Reserved
106	4000H	Physical sector size / logical sector size 15 Shall be cleared to zero 14 Shall be set to one. 13 0=Device does not have multiple logical sectors per physical sector 12 0=Device logical sector is 256 words 11-4 Reserved 3-0 0=2^0 logical sectors per physical sector
107	5A87H	Inter-seek delay for ISO-7779 acoustic testing in microseconds
108-111	xxxxH	World wide name the optional value of the world wide name for the device
112-118	0000H	Reserved
119	40DCh	Supported settings (Continued from word 84:82) 15 Shall be cleared to zero 14 Shall be set to one. 13-8 Reserved 7 1=Extended Power Conditions feature set is supported 6 1=Sense data is supported 5 0=Free-fall Control feature set is not supported 4 1=The segmented feature for Download Microcode is supported. 3 1=The READ/ WRITE LOG DMA EXT commands are supported. 2 1=Write Uncorrectable is supported. 1 0=Write-Read-Verify feature set is not supported 0 Reserved
120	409Cn	Command set/feature enabled/supported. (Continued from word 87:85) 15 Shall be cleared to zero 14 Shall be set to one. 13-8 Reserved 7 1=Extended Power Conditions feature set is enabled 6 0=Sense data is disabled 5 0=Free-fall Control feature set is disabled 4 1=The segmented feature for Download Microcode is supported. 3 1=The READ/ WRITE LOG DMA EXT commands are supported. 2 1=Write Uncorrectable is supported. 1 0=Write-Read-Verify feature set is not enabled 0 Reserved

Table 95 Identify device information - Continued -

Word	Content		Description
121-126	0000H		Reserved
127	0000H		Removable Media Status Notification feature set
			0000H=Not supported
128	xxxxH		Security status. Bit assignments
			15-9 Reserved
			8 Security Level 1= Maximum, 0= High
			7-6 Reserved
			5 Enhanced erase 1= Support
			4 Expired 1= Expired
			3 Freeze 1= Frozen
			2 Lock 1= Locked
			1 Enabled/Disable 1= Enable
400		*	0 Capability 1= Support
129	xxxxH		Current Set Feature Option. Bit assignments
			15-4 Reserved 3 Auto reassign enabled 1= Enable
			2 Reverting enabled 1= Enable 1 Read Look-ahead enabled 1= Enable
			0 Write Cache enabled 1= Enable
130-159	xxxxH	*	Reserved
160-167	0000H		Reserved
168	0002H		15-4 Reserved
			3-0 Device Nominal Form Factor 02H shows 3.5inch nominal form factor
169-175	0000H		Reserved
176-205	0000H		Current media serial number (0000H=Not supported)
206	003DH		SCT Command set support
			15-12 Vendor specific
			11-6 Reserved
			5 Action Code 5 (SCT Data Table) 1= Support
			4 Action Code 4 (Features Control) 1= Support
			3 Action Code 3 (Error Recovery Control)1= Support
			2 Action Code 2 (SCT Write Same) 1= Support
			1 Action Code 1 (Long Sector Access) 0= Not Support
			SCT Feature Set (includes SCT status) 1= Support

Table 96 Identify device information - Continued -

Note. The '*' mark in 'Content' field indicates the use of those parameters are vendor specific.

Word	Content	Description
207-208	0000H	Reserved
209	0000H	Alignment of logical blocks within a physical block (This word is valid if bit 13 of word 106 is set to one.) 15 Shall be cleared to zero 14 Shall be set to one Logical sector offset within the first physical sector where the first logical sector is placed
210-211	0000H	Write-Read-Verify Sector Count Mode 3 (Dword) 0000H=Not supported
212-213	0000H	Write-Read-Verify Sector Count Mode 2 (Dword) 0000H=Not supported
214	0000H	NV Cache Capabilities 0000H=Not supported
215-216	0000H	NV Cache Size in Logical Blocks (Dword)
217	1C20H	Nominal media rotation rate (=7200rpm)
218	0000H	Reserved
219	0000H	NV Cache Options 0000H=Not supported
220	0000H	15-8(=0) Reserved 7-0(=0) Write-Read-Verify feature set current mode(not supported)
221	0000H	Reserved
222	107FH	Transport major version number 15-12(=1) Transport Type (1= Serial) 11-6(=0) Reserved 6(=1) SATA Rev 3.1 5(=1) SATA Rev 3.0 4(=1) SATA Rev 2.6 3(=1) SATA Rev 2.5 2(=1) SATA II: Extensions 1(=1) SATA 1.0a 0(=1) ATA8-AST
223	0021H	Transport minor version number (ATA8-AST T13 Project D1697 Revision 0b)
224-229	0000H	Reserved
230-233	xxxxH	Extended Number of User Addressable Sectors
234	H8000	Minimum number of 512-byte data blocks per Download Microcode command for mode 3
235	0000H	Maximum number of 512-byte data blocks per Download Microcode command for mode 3
236-254	0000H	Reserved
255	xxA5H	15-8 Checksum. This value is the two's complement of the sum of all bytes in byte 0 through 5107-0 (A5) Signature

Table 97 Identify device information - Continued -

11.12 Idle (E3h/97h)

Command Bloc	Command Block Output Registers												
Register	7	6	5	4	3	2	1	0					
Data	-	-	-	-	-	-	-	-					
Feature	-	-	-	-	-	-	-	-					
Sector Count	٧	>	٧	٧	٧	>	٧	٧					
Sector Number	-	•	-	-	-	-	-						
Cylinder Low	-	-	-	-	-	-	-	-					
Cylinder High	-	•	-	-	-	-	-						
Device/Head	1	-	1	D	-	-	-	-					
Command	1	1	1	0	0	0	1	1					

Command Block	Inp	ut R	egi	stei	'S			
Register	7	6	5	4	ფ	2	1	0
Data	•	-	•	•	•	-		1
Error	See Below							
Sector Count								ı
Sector Number	-	-	-	-	-	-	-	-
Cylinder Low	•	•	ı	•	•	-	•	1
Cylinder High	1	-	•	•	-	-		1
Device/Head		-	-	-	-	-	-	
Status		·	S	ee E	3elo	w	·	

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	0	0	V	0	0					

	Status Register											
7	6	5	4	3	2	1	0					
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	V	-	0	-	V					

Table 98 Idle Command (E3h/97h)

The Idle command causes the device to enter Idle mode immediately, and set auto power down timeout parameter (standby timer). And then the timer starts counting down.

When the Idle mode is entered, the device is spun up to operating speed. If the device is already spinning, the spin up sequence is not executed.

During Idle mode the device is spinning and ready to respond to host commands immediately.

Output Parameters To The Device

Sector Count

Timeout Parameter. If zero, then the automatic power down sequence is disabled. If non-zero, then the automatic power down sequence is enabled, and the timeout interval is shown below:

Value	Description
0	Timer disabled
1-240	Value * 5
241-251	(Value-240) * 30 minutes
252	21 minutes
253	8 hours
254	Aborted
255	21 minutes 15 seconds

When the automatic power down sequence is enabled, the drive will enter Standby mode automatically if the timeout interval expires with no drive access from the host. The timeout interval will be reinitialized if there is a drive access before the timeout interval expires.

11.13 Idle Immediate (E1h/95h)

Command Block	Ou	tpu	t Re	gist	ers			
Register	7	6	5	4	3	2	1	0
Data	•	ı	-	-	•	-	•	ı
Feature	-	-	-	-	-	-	-	-
Sector Count	-	-	-	-	-	-	-	-
Sector Number	•	•	-	-	•	-	•	•
Cylinder Low	-	-	-	-	-	-	-	-
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	1	•	1	D	•	-	•	ı
Command	1	1	1	0	0	0	0	1

Command Bloc	k In	put	Re	gist	ers			
Register	7	6	5	4	3	2	1	0
Data	-	•	-	•	•	•	ı	ı
Error	See Below							
Sector Count								-
Sector Number	-	•	-	•	•	•	•	ı
Cylinder Low	-	-	-	-	-	-	-	-
Cylinder High	-	•	-	•	•	•	•	ı
Device/Head	-	-	-	-	-	-	-	-
Status			S	ee E	3elo	w		

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	0	0	V	0	0					

	Status Register												
7	6	5	4	3	2	1	0						
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR						
0	V	0	V	1	0	1	V						

Table 99 Idle Immediate Command (E1h/95h)

The Idle Immediate command causes the device to enter Idle mode.

The device is spun up to operating speed. If the device is already spinning, the spin up sequence is not executed.

During Idle mode the device is spinning and ready to respond to host commands immediately.

The Idle Immediate command will not affect to auto power down timeout parameter.

11.14 Initialize Device Parameters (91h)

Command Block	Out	put	Reg	iste	rs			
Register	7	6	5	4	3	2	1	0
Data	-	-	-	•	1	1	•	1
Feature	-	-	-	-	•	•	•	•
Sector Count	٧	٧	٧	V	٧	٧	٧	٧
Sector Number	-	-	-	-	•	•	-	
Cylinder Low	-	-	-	-	•	•		•
Cylinder High	-	-	-	-	•	•	-	
Device/Head	1	-	1	D	Η	Н	Η	Η
Command	1	0	0	1	0	0	0	1

Command Block In	Command Block Input Registers												
Register	7	6	5	4	3	2	1	0					
Data	-	-	-	-	-	-	•	-					
Error	-	-	-	-	-	-	-	-					
Sector Count	-	-	-	-	-	-	-	-					
Sector Number	-	-	-	-	-	-	•	-					
Cylinder Low	-	-	-	-	-	-	•	•					
Cylinder High	-	-	-	-	-	-	•	-					
Device/Head	-	-	-	-	-	-	-	-					
Status	See Below												

	Error Register											
7	6	5	4	3	2	1	0					
CRC	CRC UNC 0 IDN 0 ABT											
0	0	0	0	0	V	0	0					

	Status Register								
7	6	5	4	3	2	1	0		
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR		
0	V	0	1	ı	0	ı	V		

Table 100 Initialize Device Parameters Command (91h)

The Initialize Device Parameters command enables the host to set the number of sectors per track and the number of heads minus 1, per cylinder. Words 54-58 in Identify Device Information reflect these parameters.

The parameters remain in effect until following events:

- Another Initialize Device Parameters command is received.
- The device is powered off.
- Soft reset occurs and the Set Feature option of CCh is set instead of 66h.

Output Parameters To The Device

Sector Count The number of sectors per track. 0 does not mean there are 256 sectors per track, but there is no sector per track.

H The number of heads minus 1 per cylinder. The minimum is 0 and the maximum is 15.

Note:

The following conditions needs to be satisfied to avoid invalid number of cylinders beyond FFFFh.

(Total number of user addressable sectors)/((Sector Count)*(H+1)) = < FFFh

The total number of user addressable sectors is described in Identify Device command.

11.15 NCQ Queue Management (63h)

Command Block Output Registers									
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	-
Data High		-	-	-	-	-	-	-	-
Feature	Current	٧	٧	٧	٧	٧	٧	٧	٧
reature	Previous	ı	ı	ı	ı	ı	ı	-	ı
Cootor Count	Current	٧	٧	٧	٧	٧	-	-	1
Sector Count	Previous	٧	٧	-	-	-	-	-	-
Sector Number	Current	>	>	>	>	>	ı	-	ı
Sector Number	Previous	ı	•	ı	ı	ı	ı	-	ı
Cylinder Low	Current	•	•	•	1	•	•	-	1
Cylinder Low	Previous	-	-	-	-	-	-	-	-
Cylinder High	Current	·	·	ı	ı	ı	ı	-	ı
Cylinder High	Previous				•			-	ı
Device/Head			1		0			-	
Command		0	1	1	0	0	0	1	1

Command Block Input Registers									
Register	Register				4	3	2	1	0
Data Low		-	-	-	-	-	-	-	-
Data High		-	-	-	-	-	-	-	-
Error			See Below						
Contar Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
Sector Number	HOB=0	-	-	-	-	-	-	-	-
Sector Number	HOB=1	-	-	-	-	-	-	-	-
Cylinder Lew	HOB=0	-	-	-	-	-	-	-	-
Cylinder Low	HOB=1	-	-	-	-	-	-	-	-
Cylinder High	HOB=0	-	-	-	-	-	-	-	-
Cylinder High	HOB=1	-	-	-	-	-	-	-	-
Device/Head	-	-	-	-	-	-	-	-	
Status			See Below						

	Error Register								
7	6	5	4	3	2	1	0		
CRC	UNC	0	IDN	0	ABT	TON	AMN		
V	V	0	V	0	V	0	0		

	Status Register									
7	6	5	4	3	2	1	0			
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR			
0	V	0	V	-	0	-	V			

Table 101 NCQ Queue Management command (63h)

Table 39 defines the NCQ Queue Management subcommands. See the referenced sections for additional information in this table.

The output from the host to the device, the command acceptance outputs for this command, the normal outputs for this command and the error outputs for this command are subcommand specific. See 11.15.1, 11.15.2.

11.15.1 Abort NCQ Queue Subcommand (0h)

Command Block Output Registers									
Register	7	6	5	4	3	2	1	0	
Data Low		-	-	-	-	-	-	-	-
Data High		-	-	-	-	-	-	-	-
Feature	Current	٧	٧	٧	٧	0	0	0	0
l calule	Previous	-	-	-	-	-	-	-	-
Caatan Carret	Current	٧	٧	٧	٧	٧	•	•	•
Sector Count	Previous	-	-	-	-	-	-	-	1
0 1 11 1	Current	٧	٧	٧	٧	٧	-	ı	ı
Sector Number	Previous	-	-	-	-	-	-	-	-
0 11 1	Current	-	-	-	-	-	-	·	•
Cylinder Low	Previous	-	-	-	-	-	-	-	1
Cylinder High	Current	-	-	-	-	-	-	-	-
Cylinder High	Previous	-		-	-	-	-	-	-
Device/Head	Device/Head			-	0	-	-	-	-
Command	·	0	1	1	0	0	0	1	1

Command Block	Command Block Input Registers									
Register		7	6	5	4	3	2	1	0	
Data Low		-	-	-	-	-	-	-	-	
Data High		-	-	-	-	-	-	-	-	
Error			See Below							
Castar Caust	HOB=0	-	-	-	-	-	-	-	-	
Sector Count	HOB=1	-	-	-	-	-	-	-	-	
Castan Number	HOB=0	-	-	-	-	-	-	-	-	
Sector Number	HOB=1	-	-	-	-	-	-	-	-	
Ordinal and acco	HOB=0	-	-	-	•	•	•	•	•	
Cylinder Low	HOB=1	-	-	-	-	-	-	-	-	
Cylinder High	HOB=0	-	-	-	-	-	-	-	-	
Cylinder High	HOB=1	-	-	-	-	-	-	-	-	
Device/Head	-	-	-	-	-	-	-	-		
Status			See Below							

	Error Register									
7	6	5	4	3	2	1	0			
CRC	UNC	0	IDN	0	ABT	TON	AMN			
V	V	0	V	0	V	0	0			

Status Register									
7	6	5	4	3	2	1	0		
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR		
0	V	0	V	-	0		٧		

Table 102 Abort NCQ Queue Subcommand (0h)

Normal Outputs

If a supported Abort Type parameter is specified, then the device indicates success, even if the command results in no commands being aborted.

When an Abort NCQ Queue command completes successfully, a Set Device Bits FIS is sent to the host to complete the Abort subcommand and commands that were aborted as a consequence of the Abort subcommand by setting the ACT bits for those commands to one. This SDB FIS may also indicate other completed commands.

Error Outputs

The device returns command aborted if:

- a) NCQ is disabled and an Abort NCQ Queue command is issued to the device;
- b) the value of the TTAG field equals the value of the TAG field;
- c) the value of the TTAG field is an invalid TAG number; or
- d) an unsupported Abort type parameter is specified.

Output Parameters To The Device

Feature Current

Subcommand (bits 3-0)

Subcommand Specific

(bits 7-4)

When bits(3:0) is 0h, Abort NCQ Queue Abort Subcommand.

Abort Type, bit(7:4), describes the action requested. The NCQ Queue Management

Log (see 9.17.4.3) provides a list of abort types supported by the device. The value

of Abort type are defined in the below the table.

Feature Previous Sector Count Current

TAG (bits 7-3)

The TAG value is assigned to be different from all other queued commands. The value does not exceed the maximum queue depth specified by the Word 75 of the

Identify Device information.

Sector Count Previous Sector Number Current

TTAG (bits 7-3)

The TTAG field contains the value of the TAG of the outstanding command that is requested to be aborted. The TTAG value is only valid when the Abort Type field is set to 3h (Abort Selected). TTAG does not exceed the value specified in IDENTIFY

DEVICE word 75.

Cylinder Low Current
Cylinder Low Previous
Cylinder High Current
Cylinder High Previous

Device/Head

Input Parameters From The Device

Sector Number (HOB=0)

Sector Number (HOB=1)

Cylinder Low (HOB=0)

Cylinder Low (HOB=1)

Cylinder High (HOB=0)

Cylinder High (HOB=1)

Abort Type Parameters								
Abort Type	Abort Type	Description						
0h	Abort All	The device attempts to abort all outstanding NCQ commands.						
1h	Abort Streaming	The device attempts to abort all outstanding NCQ Streaming commands. All non-streaming NCQ commands are unaffected.						
2h	Abort Non-Streaming	The device attempts to abort all outstanding NCQ Non-Streaming commands. All NCQ Streaming commands are unaffected.						
3h	Abort Selected	The device attempts to abort the outstanding NCQ command associated with the tag represented in TTAG field.						

Table 103 Abort Type Field

11.15.2 Deadline handling Subcommand (1h)

Command Block	Output Regi	ster	s						
Register		7	6	5	4	3	2	1	0
Data Low	-	-	-	-	-	-	-	-	
Data High	-	-	-	-	-	-	-	-	
Feature		-	•	٧	٧	0	0	0	1
realure	Previous	-	-	-	-	ı	-	-	-
Contar Count	Current	٧	٧	٧	٧	٧	-	-	-
Sector Count	Previous	-	-	-	-	-	-	-	-
Cooter Number	Current	٧	٧	٧	٧	V	-	-	-
Sector Number	Previous	-	-	-	-	-	-	-	-
Cylinder Ley	Current	-	-	-	-	ı	-	-	-
Cylinder Low	Previous	-	-	-	-	1	-	-	-
Cylinder High	Current	-	-	-	-	-	-	-	-
Cylinder High Previous		-	-	-	-	-	-	-	-
Device/Head	Device/Head			-	0	-	-	-	-
Command			1	1	0	0	0	1	1

Command Block	Input Reg	iste	rs						
Register		7	6	5	4	3	2	1	0
Data Low								1	
Data High		-	-	-	-	-	-	-	-
Error				S	ee E	Belo	w		
Contain Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
Cooter Number	HOB=0	-	-	-	-	-	-	-	-
Sector Number	HOB=1	-	-	-	-	-	-	-	-
Cylinder Low	HOB=0	-	-	-	-	-	-	•	1
Cylinder Low	HOB=1	-	-	-	-	-	-	-	-
Cylinder High	HOB=0	-	-	-	-	-	-	-	-
Cylinder High	-	-	-	-	-	-	-	-	
Device/Head							-	-	
Status		See Below							

	Error Register										
7	6	5	4	3	2	1	0				
CRC	UNC	0	IDN	0	ABT	TON	AMN				
V	V	0	V	0	V	0	0				

			Status	Registe	er		
7	6	5	4	3	2	1	0
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR
0	V	0	V	-	0	-	V

Table 104 Deadline handling Subcommand (1h)

Normal Outputs

If this Deadline Handling Subcommand command is supported, the device returns the command completed with no error

When a Deadline Handling Subcommand completes successfully, a Set Device Bits FIS is sent to the host to complete the Deadline Handling subcommand. This SDB FIS may also indicate other completed commands.

Error Outputs

The device returns command aborted if:

- a) NCQ is disabled and a DEADLINE HANDLING command is issued to the device;
- b) The value of the TTAG field equals the value of the TAG field;
- c) The value of the TTAG field is an invalid TAG number; or
- d) An unsupported Abort type parameter is specified.

Output Parameters To The Device

Feature Current

Subcommand (bits 3-0)

WDNC(bits 4)

When bits(3:0) is 1h, Deadline Handling Subcommand.

If the WDNC (Write Data Not Continue) bit is cleared to zero, then the device allows WRITE FPDMA QUEUED command completion times to exceed what the ICC parameter specified. If the WDNC bit is set to one, then the all WRITE FPDMA QUEUED commands are completed by the time specified by the ICC timer value, otherwise the device returns command aborted for all outstanding commands. WDNC is only applicable to WRITE FPDMA QUEUED commands with PRIO is set to 01b (Isochronous – deadline dependent priority)

RDNC(bits 5)

If the RDNC (Read Data Not Continue) bit is cleared to zero, then the device allows READ FPDMA QUEUED command completion times to exceed what the ICC parameter specified. If the RDNC bit is set to one, then the all READ FPDMA QUEUED commands are completed by the time specified by the ICC timer value, otherwise the device returns command aborted for all outstanding commands. RDNC is only applicable to READ FPDMA QUEUED commands with PRIO is set to 01b (Isochronous – deadline dependent priority)

Feature Previous Sector Count Current TAG (bits 7-3)

The TAG value is assigned to be different from all other queued commands. The value does not exceed the maximum queue depth specified by the Word 75 of the Identify Device information.

Sector Count Previous Sector Number Current Cylinder Low Current Cylinder Low Previous Cylinder High Current Cylinder High Previous Device/Head

Input Parameters From The Device Sector Number (HOB=0) Sector Number (HOB=1)

Cylinder Low (HOB=0)

Cylinder Low (HOB=1)

Cylinder High (HOB=0)

Cylinder High (HOB=1)

11.16 Read Buffer (E4h)

Command Bloc	k O	utpı	ut R	egis	ster	s		
Register	7	6	5	4	3	2	1	0
Data	-	-	-	-	-	-	-	-
Feature	1	-	-	1	-	-	-	•
Sector Count	-	-	-	1	1	-	-	•
Sector Number	-	-	-	-	-	-	-	-
Cylinder Low	-	-	-	1	-	-	-	•
Cylinder High	-	-	-	-	-	-	-	•
Device/Head	1	-	1	D	-	-	-	•
Command	1	1	1	0	0	1	0	0

Command Bloc	k Ir	put	Re	gis	ters			
Register	7	6	5	4	3	2	1	0
Data	-	-	-	-	-	-	-	-
Error	See Below							
Sector Count	-	-	-	-	-	-	-	-
Sector Number	-	1	- 1	1	1	1	- 1	1
Cylinder Low	-	1	-	-	-	-	-	-
Cylinder High	-	1	-	-	-	-	-	-
Device/Head	-	-	-	-	-	-	-	-
Status		See Below						

	Error Register									
7	6	5	4	3	2	1	0			
CRC	UNC	0	IDN	0	ABT	TON	AMN			
0	0	0	0	0	V	0	0			

	Status Register										
7	6	5	4	3	2	1	0				
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR				
0	V	0	-	-	0	-	V				

Table 105 Read Buffer Command (E4h)

The Read Buffer command transfers a sector of data from the sector buffer of device to the host.

The sector is transferred through the Data Register 16 bits at a time.

The sector transferred will be from the same part of the buffer written to by the last Write Buffer command. The contents of the sector may be different if any reads or writes have occurred since the Write Buffer command was issued.

11.17 Read Buffer DMA (E9h)

Command Block	k Oı	ıtρι	ıt R	egis	ter	S		
Register	7	6	5	4	3	2	1	0
Data	-	-	-	•	-	-	1	ı
Feature	-	-	-	•	-	-	1	ı
Sector Count	-	-	-	•	-	-	1	ı
Sector Number	-	-	-	-	-	-	-	1
Cylinder Low	-	-	-	-	-	-	-	1
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	1	-	1	D	-	-	-	-
Command	1	1	1	0	1	0	0	1

Command Bloc	k In	put	Re	gist	ers			
Register	7	6	5	4	ფ	2	1	0
Data	ı	ı	-	1	1	1	1	-
Error	See Below							
Sector Count	ı	ı	-	1	1	1	1	-
Sector Number	ı	ı	-	1	1	1	1	-
Cylinder Low	1	1	-	•	-	-	-	1
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	-	-	-	-	-	-	-	
Status		•	S	ee E	3elo	w		

	Error Register										
7	6	5	4	3	2	1	0				
CRC	UNC	0	IDN	0	ABT	TON	AMN				
0	0	0	0	0	V	0	0				

	Status Register											
7	6	5	4	3	2	1	0					
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	-	-	0		V					

Table 106 Read Buffer DMA Command (E9h)

The Read Buffer DMA command transfers a sector of data from the sector buffer of device to the host.

The sector is transferred through the Data Register 16 bits at a time.

The sector transferred will be from the same part of the buffer written to by the last Write Buffer command. The contents of the sector may be different if any reads or writes have occurred since the Write Buffer command was issued.

11.18 Read DMA(C8h/C9h)

Command Bloc	Command Block Output Registers											
Register	7	6	5	4	3	2	1	0				
Data	-	-	1	-	•	1	1	•				
Feature	-	-		-	-	-						
Sector Count	٧	٧	٧	٧	٧	٧	٧	٧				
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧				
Cylinder Low	٧	٧	>	٧	٧	٧	٧	٧				
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧				
Device/Head	1	L	1	D	Н	Η	Н	Н				
Command	1	1	0	0	1	0	0	R				

Command Bloc	k In	put	Reg	giste	ers			
Register	7	6	5	4	3	2	1	0
Data	-	-	-	-	-	-	1	ı
Error	See Below							
Sector Count	V V V V V V V V							
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	٧	٧	٧	٧	٧	٧	٧	>
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head	-	-	-	-	Н	Н	Τ	Η
Status			S	See I	Belo	w		

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
V	V	0	V	0	V	0	0					

	Status Register											
7	6	5	4	3	2	1	0					
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	V	-	0	-	V					

Table 107 Read DMA Command (C8h/C9h)

The Read DMA command reads one or more sectors of data from disk media, then transfers the data from the device to the host.

The sectors are transferred through the Data Register 16 bits at a time.

The host initializes a slave-DMA channel prior to issuing the command. The data transfers are qualified by DMARQ and are performed by the slave-DMA channel. The device issues only one interrupt per command to indicate that data transfer has terminated and status is available.

If an uncorrectable error occurs, the read will be terminated at the failing sector.

Output Parameters To The Device

Sector Count The number of continuous sectors to be transferred. If zero is specified, then 256 sectors

will be transferred.

Sector Number The sector number of the first sector to be transferred. (L=0)

In LBA mode, this register specifies LBA address bits 0-7 to be transferred. (L=1)

Cylinder High/Low The cylinder number of the first sector to be transferred. (L=0)

In LBA mode, this register specifies LBA address bits 8-15 (Low) 16-23 (High) to be

transferred. (L=1)

H The head number of the first sector to be transferred. (L=0)

In LBA mode, this register specifies LBA bits 24-27 to be transferred. (L=1)

R The retry bit, but this bit is ignored.

Input Parameters From The Device

Sector Count The number of requested sectors not transferred. This will be zero, unless an unrecoverable

error occurs.

Sector Number The sector number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 0-7. (L=1)

Cylinder High/Low The cylinder number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 8-15 (Low), 16-23 (High). (L=1)

H The head number of the sector to be transferred. (L=0)

In LBA mode, this register contains current LBA bits 24-27. (L=1)

11.19 Read DMA Ext (25h)

Command Bloo	k Output F	Regi	ster	S					
Register		7	6	5	4	3	2	1	0
Data Low		•	1	1	-	1	1	-	1
Data High		-	-	-	-	-	-	-	1
Feature	Current	•	•	•	•	•	ı	•	•
reature	Previous	-	-	-	-	-	-	-	-
Sector Count	Current	V	>	>	V	>	>	V	٧
Sector Count	Previous	V	>	>	V	>	>	V	V
Sector Number	Current	V	>	>	V	>	>	V	V
Sector Number	Previous	V	V	V	V	V	V	V	٧
Cylinder Low	Current	V	>	>	V	>	>	V	٧
Cylinder Low	Previous	V	V	V	V	V	V	V	V
Cylinder High	Current	V	V	V	V	V	V	V	٧
Cylinder High	Previous	V	>	>	V	>	>	V	٧
Device/Head		1	1	1	D	-	-	-	-
Command		0	0	1	0	0	1	0	1

Command Bloc	k Input R	egis	sters	\$					
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	-
Data High		-	-	-	-	-	-	-	-
Error		See Below							
0	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
Caatar Nurshar	HOB=0	V	V	V	V	V	V	V	V
Sector Number	HOB=1	V	V	V	V	V	V	V	٧
Outlined and according	HOB=0	V	V	V	V	V	V	V	٧
Cylinder Low	HOB=1	V	V	V	V	V	V	V	٧
Cylinder High	HOB=0	V	V	V	V	V	V	V	٧
Cylinder High	HOB=1	V	V	V	٧	V	V	V	٧
Device/Head		- - - - - -							
Status		See Below							

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
V	Vs	0	V	0	V	0	0					

	Status Register											
7	6	5	4	3	2	1	0					
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	V	-	0		V					

Table 108 Read DMA Ext Command (25h)

The Read DMA command reads one or more sectors of data from disk media, and then transfers the data from the device to the host.

The sectors are transferred through the Data Register 16 bits at a time.

The host initializes a slave-DMA channel prior to issuing the command. The data transfers are qualified by DMARQ and are performed by the slave-DMA channel. The device issues only one interrupt per command to indicate that data transfer has terminated and status is available.

If an uncorrectable error occurs, the read will be terminated at the failing sector.

Output Parameters To The Device

Sector Count Current The number of sectors to be transferred low order, bits (7:0).

Sector Count Previous The number of sectors to be transferred high order, bits (15:8). If 0000h in the

Sector Count register is specified, then 65,536 sectors will be transferred.

Sector Number CurrentLBA (7:0)Sector Number PreviousLBA (31:24)Cylinder Low CurrentLBA (15:8)Cylinder Low PreviousLBA (39:32)Cylinder High CurrentLBA (23:16)Cylinder High PreviousLBA (47:40)

Input Parameters From The Device

Sector Number (HOB=0)

LBA (7:0) of the address of the first unrecoverable error.

LBA (31:24) of the address of the first unrecoverable error.

Cylinder Low (HOB=0)

LBA (15:8) of the address of the first unrecoverable error.

Cylinder Low (HOB=1)	LBA (39:32)of the address of the first unrecoverable error.
Cylinder High (HOB=0)	LBA (23:16)of the address of the first unrecoverable error.
Cylinder High (HOB=1)	LBA (47:40)of the address of the first unrecoverable error.

11.20 Read FPDMA Queued (60h)

Command Bloc	k Output F	Regi	sters	6					
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	-
Data High		-		-	ı	ı	-	-	·
Contura	Current	V	V	V	>	>	V	V	>
Feature	Previous	V	V	V	V	V	V	V	٧
Caatar Caust	Current	V	V	V	V	V	-	-	-
Sector Count	Previous	-	-	-	-	-	-	-	-
Caatar Niveshar	Current	V	V	V	V	V	V	V	٧
Sector Number	Previous	V	V	V	V	V	V	V	٧
Outlined and according	Current	V	V	V	٧	V	V	V	٧
Cylinder Low	Previous	V	V	V	V	V	V	V	٧
Ordinada a Uliada	Current	V	V	V	٧	V	V	V	٧
Cylinder High	Previous	V	V	V	V	V	V	V	٧
Device/Head		V	1	0	0	-	-	-	-
Command		0	1	1	0	0	0	0	0

Command Bloc	k Input R	egis	ters	3					
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	-
Data High		-	1	-	1	ı	-	-	ı
Error				8	See E	Belov	w		
Castar Caust	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
Caatan Numahan	HOB=0	V	V	V	V	V	V	V	V
Sector Number	HOB=1	V	٧	V	V	٧	V	V	٧
Culindon Laur	HOB=0	V	V	V	V	V	V	V	V
Cylinder Low	HOB=1	V	٧	V	V	٧	V	V	٧
Culinada a Lliada	HOB=0	V	V	V	V	V	V	V	V
Cylinder High	٧	٧	٧	٧	V	٧	V	٧	
Device/Head									
Status		See Below							

	Error Register										
7	6	5	4	3	2	1	0				
CRC	UNC	0	IDN	0	ABT	TON	AMN				
V	Vs	0	V	0	V	0	0				

	Status Register						
7	6	5	4	3	2	1	0
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR
0	V	0	V	-	0	•	V

Table 109 Read FPDMA Queued Command (60h)

The Read FPDMA command reads one or more sectors of data from disk media, and then transfers the data from the device to the host.

If an uncorrectable error occurs, the read will be terminated at the failing sector.

Output Parameters To The Device

Feature Current The number of sectors to be transferred low order, bits (7:0). **Feature Previous** The number of sectors to be transferred high order, bits (15:8).

Sector Count Current

TAG (bits 7-3)

The TAG value shall be assigned to be different from all other queued commands. The

value shall not exceed the maximum queue depth specified by the Word 75 of the

Identify Device information.

Sector Count Previous

PRIO (bits 7-6) The Priority (PRIO) value shall be assigned by the host based on the priority of the

command issued. The device makes a best effort to complete High priority requests in a more timely fashion than Normal and isochronous priority requests. The device tries to complete isochronous requests prior to its associated deadline. The Priority

values are defined as follows:

00b Normal priority01b Isochronous – deadline dependent priority

10b High priority

Sector Number CurrentLBA (7:0)Sector Number PreviousLBA (31:24)Cylinder Low CurrentLBA (15:8)Cylinder Low PreviousLBA (39:32)Cylinder High CurrentLBA (23:16)Cylinder High PreviousLBA (47:40)

ICC

The Isochronous Command Completion (ICC) field is valid when PRIO is set to a value of 01b. It is assigned by the host based on the intended deadline associated with the command issued. When a deadline has expired, the device continues to complete the command as soon as possible. The host can modify this behavior if the device supports the NCQ QUEUE MANAGEMENT command (see 11.15) and supports the Deadline Handling subcommand (see 11.15.2). This subcommand allows the host to set whether the device aborts commands that have exceeded the time set in ICC.

There are several parameters encoded in the ICC field: Fine or Coarse timing, Interval and the Max Time. The Interval indicates the time units of the Time Limit parameter.

If ICC Bit 7 cleared to zero, then the time interval is fine-grained.

Interval = 10msec

Time Limit = (ICC[6:0] + 1) * 10msec

If ICC Bit 7 is set to one (coarse encoding), then the time interval is coarse grained.

Interval = 0.5 sec

Time Limit = (ICC[6:0] + 1) * 0.5 sec

Device/Head

FUA (bit 7) When the FUA bit is set to 1, the requested data is always retrieved from the media

regardless of whether the data are held in the sector buffer or not.

When the FUA bit is set to 0, the data may be retrieved from the media or from the

cached data left by previously processed Read or Write commands.

Input Parameters From The Device

Cylinder High (HOB=1)

Sector Number (HOB=0)

LBA (7:0) of the address of the first unrecoverable error.

LBA (31:24) of the address of the first unrecoverable error.

Cylinder Low (HOB=0)

LBA (39:32) of the address of the first unrecoverable error.

LBA (39:32) of the address of the first unrecoverable error.

Cylinder High (HOB=0)

LBA (23:16) of the address of the first unrecoverable error.

LBA (47:40)of the address of the first unrecoverable error.

11.21 Read Log Ext (2Fh)

Command Block Output Registers									
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	-
Data High		-	-	-	-	-	-	-	•
Feature	Current	٧	V	V	V	V	V	V	V
reature	Previous	٧	٧	٧	٧	٧	٧	V	>
010	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Count	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Caatan Nivershan	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Previous	-	-	-	-	-	-	-	-
Culindor Lou	Current	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	Current	-	-	-	-	-	-	-	-
Cylinder High	Previous	-	-	-	-	-	-	-	-
Device/Head		1	-	1	D	-	-	-	-
Command		0	0	1	0	1	1	1	1

Command Block Input Registers									
Register		7	6	5	4	3	2	1	0
Data Low		1	-	-	-	-	-	-	-
Data High		ı	-	ı	ı	ı	ı	ı	ı
Error			See Below						
Sector Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
Sector Number	HOB=0	-	-	-	-	-	-	-	-
Sector Number	HOB=1	-	-	-	-	-	-	-	-
Culinder Lou	HOB=0	-	-	-	-	-	-	-	-
Cylinder Low	HOB=1	-	-	-	-	-	-	-	-
Cylinder High	HOB=0	-	-	-	-	-	-	-	-
Cylinder High	HOB=1	-	-	-	-	-	-	-	-
Device/Head		-	-	-	-	-	-	-	-
Status				S	ee E	3elc	w		

Error Register							
7	6	5	4	3	2	1	0
CRC	UNC	0	IDN	0	ABT	TON	AMN
0	V	0	V	0	V	0	0

	Status Register						
7	6	5	4	3	2	1	0
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR
0	٧	0	V	-	0	1	V

Table 110 Read Log Ext Command (2Fh)

This command returns the specified log to the host. The device shall interrupt for each DRQ block transferred.

Output Parameters To The Device

Feature Log Address Specific

Sector Count Current The number of sectors to be read from the specified log low order, bits (7:0).

The log transferred by the drive shall start at the sector in the specified log at the

specified offset, regardless of the sector count requested.

Sector Count Previous The number of sectors to be read from the specified log high orders, bits (15:8).

Sector Number Current The log to be returned as described in 0.

Cylinder Low Current The first sector of the log to be read low order, bits (7:0).

Cylinder Low Previous The first sector of the log to be read high order, bits (15:8).

Log address	Content	Feature set	Туре
00h	Log directory	N/A	Read Only
03h	Extended Comprehensive SMART error log	SMART error logging	Read Only
04h	Device Statistics	N/A	Read Only
06h	SMART self-test log	SMART self-test	See Note
07h	Extended SMART self-test log	SMART self-test	Read Only
08h	Power Conditions log	Extended Power Condition	Read Only
10h	Command Error	Native Command Queuing	Read Only
11h	Phy Event Counters	Serial ATA	Read Only
12h	NCQ Queue Management log	NCQ Queue Management	Read Only
21h	Write Stream Error log	Streaming	Read Only
22h	Read Stream Error log	Streaming	Read Only
30h	Identify Device Data log	N/A	Read Only
80h-9Fh	Host vendor specific	SMART	Read/Write

Note: If log address 06h is accessed using the Read Log Ext or Write Log Ext commands, command abort shall be returned.

Note: Please see 9.17.3 about Phy Event Counter.

Note: Please see 9.17.4 about NCQ Queue Management.

Table 111 Log Address Definition

The Extended SMART self-test log sector shall support 48-bit and 28-bit addressing. All 28-bit entries contained in the SMART self-test log sector shall also be included in the Comprehensive SMART self-test log sector with the 48-bit entries.

If the feature set associated with the log specified in the Sector Number register is not supported or enabled, or if the values in the Sector Count, Sector Number or Cylinder Low registers are invalid, the device shall return command aborted.

11.21.1 General Purpose Log Directory

Table 112 defines the 512 bytes that make up the General Purpose Log Directory.

Description	Bytes	Offset
General Purpose Logging Version	2	00h
Number of sectors in the log at log address 01h (7:0)	1	02h
Number of sectors in the log at log address 01h (15:8)	1	03h
Number of sectors in the log at log address 02h (7:0)	1	04h
Number of sectors in the log at log address 02h (15:8)	1	05h
Number of sectors in the log at log address 20h (7:0)	1	40h
Number of sectors in the log at log address 20h (15:8)	1	41h
Number of sectors in the log at log address 21h (7:0)	1	42h
Number of sectors in the log at log address 21h (15:8)	1	43h
Number of sectors in the log at log address 22h (7:0)	1	44h
Number of sectors in the log at log address 22h (15:8)	1	45h
Number of sectors in the log at log address 80h (7:0)	1	100h
Number of sectors in the log at log address 80h (15:8)	1	101h
Number of sectors in the log at log address FFh (7:0)	1	1FEh
Number of sectors in the log at log address FFh (15:8)	1	1FFh
	512	

Table 112 General Purpose Log Directory

The value of the General Purpose Logging Version word shall be 0001h. A value of 0000h indicates that there is no General Purpose Log Directory.

The logs at log addresses 80-9Fh shall each be defined as 16 sectors long.

11.21.2 Extended Comprehensive SMART Error log

Table 113 defines the format of each of the sectors that comprise the Extended Comprehensive SMART error log. Error log data structure shall not include errors attributed to the receipt of faulty commands such as command codes not implemented by the device or requests with invalid parameters or in valid addresses.

Description	Bytes	Offset
SMART error log version	1	00h
Reserved	1	01h
Error log index (7:0)	1	02h
Error log index (15:8)	1	03h
1st error log data structure	124	04h
2nd error log data structure	124	80h
3rd error log data structure	124	FCh
4th error log data structure	124	178h
Device error count	2	1F4h
Reserved	9	1F6h
Data structure checksum	1	1FFh
	512	

Table 113 Extended Comprehensive SMART Error Log

11.21.2.1 Error log version

The value of this version shall be 01h.

11.21.2.2 Error log index

This indicates the error log data structure representing the most recent error. If there have been no error log entries, it is cleared to 0. Valid values for the error log index are 0 to 4.

11.21.2.3 Extended Error log data structure

An error log data structure shall be presented for each of the last four errors reported by the device.

These error log data structure entries are viewed as a circular buffer. The fifth error shall create an error log structure that replaces the first error log data structure. The next error after that shall create an error log data structure that replaces the second error log structure, etc.

Unused error log data structures shall be filled with zeros.

Data format of each error log structure is shown below.

Description	Bytes	Offset
1st command data structure	18	00h
2nd command data structure	18	12h
3rd command data structure	18	24h
4th command data structure	18	36h
5th command data structure	18	48h
Error data structure	34	5Ah
	124	

Table 114 Extended Error log data structure

Command data structure: Data format of each command data structure is shown below.

Description	Bytes	Offset
Device Control register	1	00h
Features register (7:0) (see Note)	1	01h
Features register (15:8)	1	02h
Sector count register (7:0)	1	03h
Sector count register (15:8)	1	04h
Sector number register (7:0)	1	05h
Sector number register (15:8)	1	06h
Cylinder Low register (7:0)	1	07h
Cylinder Low register (15:8)	1	08h
Cylinder High register (7:0)	1	09h
Cylinder High register (15:8)	1	0Ah
Device/Head register	1	0Bh
Command register	1	0Ch
Reserved	1	0Dh
Timestamp (milliseconds from Power-on)	4	0Eh
	18	

Note: bits (7:0) refer to the most recently written contents of the register. Bits (15:8) refer to the contents of the register prior to the most recent write to the register.

Table 115 Command data structure

Error data structure: Data format of error data structure is shown below.

Description	Bytes	Offset
Reserved	1	00h
Error register	1	01h
Sector count register (7:0) (see Note)	1	02h
Sector count register (15:8) (see Note)	1	03h
Sector number register (7:0)	1	04h
Sector number register (15:8)	1	05h
Cylinder Low register (7:0)	1	06h
Cylinder Low register (15:8)	1	07h
Cylinder High register (7:0)	1	08h
Cylinder High register (15:8)	1	09h
Device/Head register	1	0Ah
Status register	1	0Bh
Extended error data (vendor specific)	19	0Ch
State	1	1Fh
Life timestamp (hours)	2	20h
	34	

Note: bits (7:0) refer to the contents if the register is read with bit 7 of the Device Control register cleared to zero. Bits (15:8) refer to the contents if the register is read with bit 7 of the Device Control register set to one.

Table 116 Error data structure

State shall contain a value indicating the state of the device when the command was issued to the device or the reset occurred as described below.

Value	State
x0h	Unknown
x1h	Sleep
x2h	Standby (If the EPC feature set is enabled, Standby is standby_y or standby_z)
x3h	Active/Idle
	(If the EPC feature set is enabled, Active/Idle is idle_a or idle_b or idle_c)
x4h	SMART Off-line or Self-test
x5h-xAh	Reserved
xBh-xFh	Vendor specific
	Note: The value of v is vender exception

Note: The value of x is vendor specific.

11.21.2.4 Device error count

This field shall contain the total number of errors attributable to the device that have been reported by the device during the life of the device. This count shall not include errors attributed to the receipt of faulty commands such as commands codes not implemented by the device or requests with invalid parameters or invalid addresses. If the maximum value for this field is reached the count shall remain at the maximum value when additional errors are encountered and logged.

11.21.3 Device Statistics log

The Device Statistics log contains selected statistics about the device.

The number of log pages may be greater than one.

See Table 117 for a list of defined log pages. Each supported log page consists of a header field that may be followed by defined statistics fields. If the Revision Number field in the log page header is 0000h, then that log page is not supported. All log page data following the last defined statistic for that log page is reserved.

If an unsupported log page is requested, then 512 bytes of all zeros are returned for that log page.

Description	Log page
List of supported log pages (Table 118)	00h
General Statistics (Table 119)	01h
Free Fall Statistics (Not Support)	02h
Rotating Media Statistics (Table 120)	03h
General Errors Statistics (Table 121)	04h
Temperature Statistics (Table 122)	05h
Transport Statistics (Table 124)	06h
Solid State Device Statistics (Not Support)	07h
Reserved	08hFFh

Table 117 Defined Device Statistics log pages

11.21.3.1 List of Supported Device Statistics log pages (log page 00h)

The List of Supported Device Statistics log pages contains a list of the supported device statistics log pages as described in Table 118. Entries are in order of ascending log page number. Every log page for which there is at least one supported statistic is listed.

Descri	ption	Bytes	Offset
Device	Statistics Information Header. This device statistics log page		
lists the	e number of the supported device statistics log pages.		
Bit	Description	8	00h
63:24	Reserved	0	0011
23:16	Log page number. (00h)		
15:0	Revision number. (0001h)		
Numbe	er of entries (n) in the following list	1	08h
Log pa	ge number of first supported device statistics log page (00h)	1	09h
Log pa	ge number of second supported device statistics log page	1	0Ah
Log pa	ge number of nth supported device statistics log page	1	n+08h
Reserv	ed		n+09h1FFh

Table 118 List of supported Device Statistics log pages

11.21.3.2 General Statistics (log page 01h)

The General Statistics log page contains general information about the device as described in Table 119.

Descrip	tion	Bytes	Offset
Device S	Statistics Information Header		
Bit	Description		
63:24	Reserved		00h
23:16	Log page number. (01h)		
15:0	Revision number. (0002h)		
Lifetime	Power-On Resets		
Bit	Description		
63:56	Device Statistics Flags	8	004
55:32	Reserved	0	08h
31:0	Number of times that the device has processed a Power-On Reset event (DWord)		
Power-c	on Hours		
Bit	Description	8	10h
63:32	Reserved	0	1011
31:0	Power-on Hours (DWord)		
Logical	Sectors Written		
Bit	Description		
63:56	Device Statistics Flags	8	18h
55:48	Reserved		
47:0	Logical Sectors Written		
Number	of Write Commands		
Bit	Description		
63:56	Device Statistics Flags	8	20h
55:48	Reserved		
47:0	Number of Write Commands		
Logical	Sectors Read		
Bit	Description		
63:56	Device Statistics Flags	8	28h
55:48	Reserved		
47:0	Logical Sectors Read		
Number	of Read Commands		
Bit	Description		
63:56	Device Statistics Flags	8 30h	
55:48	Reserved		
47:0	Number of Read Commands		
Reserve	ed	1	38h1FFh

Table 119 General Statistics

11.21.3.3 Rotating Media Statistics (log page 03h)

The Rotating Media Statics log page contains device rotating media information as described in Table 120.

Descri	ption	Bytes	Offset
Device	Statistics Information Header		
Bit	Description		
63:24	Reserved	8	00h
23:16	Log page number. (03h)		
15:0	Revision number. (0001h)		
Spindle	e Motor Power-on Hours		
Bit	Description		
63:56	Device Statistics Flags	8	08h
55:32	Reserved		
31:0	Spindle Motor Power-on Hours (DWord)		
Head F	lying Hours		
Bit	Description		
63:56	Device Statistics Flags	8	10h
55:32	Reserved		
31:0	Head Flying Hours (DWord)		
Head L	oad Events		
Bit	Description		
63:56	Device Statistics Flags	8	18h
55:32	Reserved		
31:0	Head Load Events (DWord)		
Numbe	er of Reallocated Logical Sectors		
Bit	Description		
63:56	Device Statistics Flags	8	20h
55:32	Reserved		
31:0	Number of Reallocated Logical Sectors (DWord)		
Read F	Recovery Attempts		
Bit	Description		
63:56	Device Statistics Flags	8	28h
55:32	Reserved		
31:0	Read Recovery Attempts (DWord)		
Numbe	er of Mechanical Start Failures		
Bit	Description		
63:56	Device Statistics Flags	8	30h
55:32	Reserved		
31:0	Number of Mechanical Start Failures (DWord)		
Reserv	red	1	38h1FFh

Table 120 Rotating Media Statistics

11.21.3.4 General Errors Statistics (log page 04h)

General Errors Statistics log page contains general error information about the device as described in Table 121.

Descri	ption	Bytes	Offset
Device	Statistics Information Header		
Bit	Description		
63:24	Reserved	8 00	
23:16	Log page number. (04h)		
15:0	Revision number. (0001h)		
Numbe	er of Reported Uncorrectable Errors		
Bit	Description		
63:56	Device Statistics Flags	8	08h
55:32	Reserved		
31:0	Number of Reported Uncorrectable Errors (DWord)		
Numbe	er of Resets Between Command Acceptance and Command Completion		
Bit	Description		
63:56	Device Statistics Flags		
55:32	Reserved		1011
31:0	Number of Resets Between Command Acceptance and Command		
	Completion (DWord)		
Reserv	red	1	18h1FFh

Table 121 General Error Statistics

11.21.3.5 Temperature Statistics (log page 05h)

The Temperature Statistics log page contains general information about the device as described in Table 122. The value in the temperature field is a two's complement integer in degrees Celsius.

Descri	scription Bytes O		Offset
Device	Statistics Information Header		
Bit	Description		
63:24	Reserved	8	00h
23:16	Log page number. (05h)		
15:0	Revision number. (0001h)		
Curren	t Temperature		
Bit	Description		
63:56	Device Statistics Flags	8	08h
55:8	Reserved		
7:0	Current Temperature (signed byte)		
Averag	ge Short Term Temperature		
Bit	Description		
63:56	Device Statistics Flags	8 10h	
55:8	Reserved		
7:0	Average Short Term Temperature (signed byte)		
Averag	ge Long Term Temperature		
Bit	Description		
63:56	Device Statistics Flags	8	18h
55:8	Reserved		
7:0	Average Long Term Temperature (signed byte)		

Table 122 Temperature Statistics (part 1 of 2)

Descri	Description		Offset
Highes	t Temperature		
Bit	Description		
63:56	Device Statistics Flags	8	20h
55:8	Reserved		
7:0	Highest Temperature (signed byte)		
Lowest	t Temperature		
Bit	Description		
63:56	Device Statistics Flags	8	28h
55:8	Reserved		
7:0	Lowest Temperature (signed byte)		
Highes	t Average Short Term Temperature		
Bit	Description		
63:56	Device Statistics Flags	8	30h
55:8	Reserved		
7:0	Highest Average Short Term Temperature (signed byte)		
	Average Short Term Temperature		
Bit	Description		
63:56	Device Statistics Flags	8	38h
55:8	Reserved		3011
7:0	Lowest Average Short Term Temperature (signed byte)		
	t Average Long Term Temperature		
Bit	Description		
63:56	Device Statistics Flags	8	40h
55:8	Reserved	<u> </u>	1011
7:0	Highest Average Long Term Temperature (signed byte)		
	Average Long Term Temperature		
Bit	Description Description		
63:56	Device Statistics Flags	8	48h
55:8	Reserved		4011
7:0	Lowest Average Long Term Temperature (signed byte)		
	n Over-Temperature		
Bit	Description		
63:56	Device Statistics Flags	8	50h
55:32	Reserved		0011
31:0	Time in Over-Temperature (DWord)		
	ed Maximum Operating Temperature		
Bit	Description		
63:56	Device Statistics Flags	8	58h
55:8	Reserved		3011
7:0	Specified Maximum Operating Temperature (signed byte)		
	n Under-Temperature		
Bit	Description		
63:56	Device Statistics Flags	8	60h
55:32	Reserved		0011
31:0			
	Time in Under-Temperature (DWord) ed Minimum Operating Temperature		
Bit	· · · ·		
	Description Device Statistics Flags		604
63:56	Device Statistics Flags	8	68h
55:8	Reserved Specified Minimum Operating Temperature (signed byte)		
7:0	Specified Minimum Operating Temperature (signed byte)		
Reserv	red	1	70h1FFh

Table 123 Temperature Statistics (part 2 of 2)

11.21.3.6 Transport Statistics (log page 06h)

The Transport Statistics log page contains interface transport information about the device as described in Table 124.

Descri	ption	Bytes	Offset
Device	Statistics Information Header		
Bit	Description		
63:24	Reserved	8	00h
23:16	Log page number. (06h)		
15:0	Revision number. (0001h)		
Numbe	or of hardware resets		
Bit	Description		
63:56	Device Statistics Flags	8	08h
55:32	Reserved		
31:0	Number of hardware resets (DWord)		
Numbe	er of ASR Events		
Bit	Description		
63:56	Device Statistics Flags	8	10h
55:32	Reserved		
31:0	Number of ASR Events (DWord)		
Head L	oad Events		
Bit	Description		
63:56	Device Statistics Flags	8	18h
55:32	Reserved		
31:0	Head Load Events (DWord)		
Numbe	er of Interface CRC Errors		
Bit	Description		
63:56	Device Statistics Flags	8	20h
55:32	Reserved		
31:0	Number of Interface CRC Errors (DWord)		
Reserv	ed	1	28h1FFh

Table 124 Transport Statistics

11.21.4 Extended Self-test log sector

Table 125 defines the format of each of the sectors that comprise the Extended SMART self-test log.

The Extended SMART self-test log sector shall support 48-bit and 28-bit addressing. All 28-bit entries contained in the SMART self-test log, defined in 7.42.6, "Self-test log data structure" on page 251 shall also be included in the Extended SMART self-test log with all 48-bit entries.

Description	Bytes	Offset
Self-test log data structure revision number	1	00h
Reserved	1	01h
Self-test descriptor index (7:0)	1	02h
Self-test descriptor index (15:8)	1	03h
Descriptor entry 1	26	04h
Descriptor entry 2	26	1Eh
Descriptor entry 18	26	1D8h
Vendor specific	2	1F2h
Reserved	11	1F4h
Data structure checksum	1	1FFh
	512	

Table 125 Extended Self-test log data structure

These descriptor entries are viewed as a circular buffer. The nineteenth self-test shall create a descriptor entry that replaces descriptor entry 1. The next self-test after that shall create a descriptor entry that replaces descriptor entry 2, etc. All unused self-test descriptors shall be filled with zeros.

11.21.4.1 Self-test log data structure revision number

The value of this revision number shall be 01h.

11.21.4.2 Self-test descriptor index

This indicates the most recent self-test descriptor. If there have been no self-tests, this is set to zero. Valid values for the Self-test descriptor index are 0 to 18.

11.21.4.3 Extended Self-test log descriptor entry

The content of the self-test descriptor entry is shown below.

Description	Bytes	Offset
Self-test number	1	00h
Self-test execution status	1	01h
Power-on life timestamp in hours	2	02h
Self-test failure check point	1	04h
Failing LBA (7:0)	1	05h
Failing LBA (15:8)	1	06h
Failing LBA (23:16)	1	07h
Failing LBA (31:24)	1	08h
Failing LBA (39:32)	1	09h
Failing LBA (47:40)	1	0Ah
Vendor specific	15	0Bh
	26	

Table 126 Extended Self-test log descriptor entry

11.21.5 Power Conditions log

Defines the Power Conditions log. If the Extended Power Conditions feature set is not supported, then the Power Conditions log not is supported. Each Power is composed of the following formats.

Idle power conditions (log page 00h)

Offset	Туре	Description
0-63	Byte	Idle_a power conditions descriptor. Power condition supported is set to one to indicate that the idle_a power condition is supported.
64-127	Byte	Idle_b power conditions descriptor. Power condition supported is set to one to indicate that the idle_b power condition is supported.
128-191	Byte	Idle_c power conditions descriptor. Power condition supported is set to one to indicate that the idle_c power condition is supported.
192-511	Byte	Reserved

Standby power conditions (log page 01h)

Offset	Туре	Description
0-383	Byte	Reserved
384-447	Byte	Standby_y power conditions descriptor. Power condition supported is set to one to indicate that the standby_y power condition is supported.
448-511	Byte	Standby_z power conditions descriptor. Power condition supported is set to one to indicate that the standby_z power condition is supported.

Offset	Type	og descriptor Description
0	Byte	Reserved
1	Byte	Power Condition Flags Bit Description
		7 Power Condition Supported The Power Condition Supported bit is valid if the EPC feature set is supported, regardless of whether EPC is enabled or disabled. If the Power Condition Supported bit is set to one, then the power condition is supported. If the Power Condition Supported bit is cleared to zero, then the power condition is not supported.
		6 Timer Savable The Timer Savable bit is valid if the Power Condition Supported bit is set to one, regardless of whether EPC is enabled or disabled. If the Timer Savable bit is set to one, then the power condition is savable if EPC is enabled. If the Timer Savable bit is cleared to zero, then the power condition is not savable.
		5 Timer Changeable The Timer Changeable bit is valid if the Power Condition Supported bit is set to one, regardless of whether EPC is enabled or disabled. If the Timer Changeable bit is set to one, then the power condition is changeable if EPC is enabled. If the Timer Changeable bit is cleared to zero, then the power condition is not changeable.
		4 Default Timer Enabled The Default Timer Enabled bit is valid if the Power Condition Supported bit is set to one, regardless of whether EPC is enabled or disabled.
		3 Saved Timer Enabled The Saved Timer Enabled bit is valid if the Power Condition Supported bit is set to one, regardless of whether EPC is enabled or disabled.
		2 Current Timer Enabled If EPC is disabled, then the Current Timer Enabled bit shall be cleared to zero. If EPC is enabled and the Current Timer Setting field is non-zero and the Current Timer Enabled bit is set to one, then the power condition timer is enabled. If EPC is enabled and the Current Timer Enabled bit is cleared to zero, then the power condition timer is disabled.
		1-0 Reserved
2-3	Byte	Reserved
4-7	DWord	Default Timer setting The Default Timer field is set at the time of manufacture. The Default Timer Setting field is valid if the Power Condition Supported bit is set to one, regardless of whether EPC is enabled or disabled. A value of FFFF_FFFh indicates that the time is greater than or equal to 429_496_729_500 milliseconds. Measurement Units: 100 milliseconds.
8-11	DWord	Saved Timer setting The Saved Timer Setting field is a value that has been saved by a SET FEATURES Set Power Condition Timer subcommand. The Saved Timer Setting field is valid if the Power Condition Supported bit is set to one, regardless of whether EPC is enabled or disabled. A value of zero indicates that this power condition is disabled if the EPC feature set is enabled. A value of FFFF_FFFFh indicates that the time is greater than or equal to 429_496_729_500 milliseconds. Measurement Units: 100 milliseconds.

12-15	DWord	Current Timer setting
		The Current Timer setting is the minimum time that the device shall wait after command
		completion before entering this power condition if the EPC feature set is enabled.
		The Current Timer Setting field shall be cleared to zero if:
		a) EPC is disabled;
		b) the Power Condition Supported bit is cleared to zero; or
		c) the Current Timer Enabled field is cleared to zero.
		A value of FFFF_FFFFh indicates that the time is greater than or equal to
		429_496_729_500 milliseconds.
		Measurement Units: 100 milliseconds
16-19	DWord	Nominal Recovery time from to PM0:Active power management state
		The Nominal Recovery time from power to PM0: Active is the nominal time required to
		transition from power to PM0: Active power management state. This time does not include
		processing time for the command that caused this transition to occur. A value of zero
		indicates that the nominal recovery time is not specified. A value of FFFF_FFFh indicates
		that the recovery time is greater than or equal to 429 496 729 500 milliseconds.
		Measurement Units: 100 milliseconds.
		This value is preserved over all resets.
20-23	DWord	Minimum timer setting
20 20	DVVOIG	The Minimum timer setting is the minimum timer value allowed by the Set Power
		Condition Timer subcommand for the timer. A value of zero indicates that the minimum
		timer value is not specified. A value of FFFF_FFFh indicates that the minimum timer value
		is greater than or equal to 429 496 729 500 milliseconds.
		Measurement Units: 100 milliseconds
		This value be preserved over all resets
24-27	DWord	Maximum timer setting
24-21	טיייטען	The Maximum timer setting is the maximum timer value allowed by the Set Power
		Condition Timer subcommand for the timer. A value of zero indicates that the maximum
		timer value is not specified. A value of FFFF_FFFFh indicates that the maximum timer value
		is greater than or equal to 429 496 729 500 milliseconds. Measurement Units: 100 milliseconds
20.02	DWord	This value be preserved over all resets
28-63	DWord	Reserved

11.21.6 Command Error

Table 127 defines the format of the Command Error data structure.

Byte	7	6	5	4	3	2	1	0
0	NQ Reserved TAG							
1				Rese	erved			
2				Sta	itus			
3				Er	ror			
4				Sector	Number			
5				Cylind	er Low			
6				Cylinde	er High			
7	Dev/Head							
8	Sector Number Previous							
9	Cylinder Low Previous							
10	Cylinder High Previous							
11	Reserved							
12	Sector Count							
13			Se	ctor Cou	nt Previo	ous		
14 - 255	Reserved							
256 – 510	Vendor Unique							
511	Data Structure Checksum							

Table 127 Command Error information

The TAG field (Byte 0 Bits 4-0) contains the tag number corresponding to a queued command if the NQ bit is cleared.

The NQ field (Byte 0 Bit 7) indicates whether the error condition was a result of a non-queued or not. If it is cleared the error information corresponds to a queued command specified by the tag number indicated in the TAG field. The bytes 1 to 13 correspond to the contents of Shadow Register Block when the error was reported.

The Data Structure Checksum (Byte 511) contains the 2's complement of the sum of the first 511 bytes in the data structure. The sum of all 512 bytes of the data structure will be zero when the checksum is correct.

11.21.7 Read Stream Error log

Table 128 defines the format of the Read Stream Error log. Entries are placed into the Read Stream Error log only when the SE bit is set to one in the Status Register. The 512 bytes returned shall contain a maximum of 31 error entries. The Read Stream Error Count shall contain the total number of Read Stream Errors detected since the last successful completion of the Read Log Ext command with LBA Low register set to 22h. This error count may be greater than 31, but only the most recent 31 errors are represented by entries in the log. If the Read Stream Error Count reaches the maximum value that can be represented after the next error is detected the Read Stream Error Count shall remain at the maximum value. After successful completion of a Read Log Ext command with the LBA Low Register set to 22h, the Read Stream Error Log shall be reset to a power-on or hardware reset condition, with the Error Log Index and Read Stream Error Count cleared to zero. The Read Stream Error Log is not preserved across power cycles and hardware reset.

Description	Bytes	Offset
Structure Version	1	00h
Error Log Index	1	01h
Read Stream Error Log Count	2	02h
Reserved	12	04h
Read Stream Error Log Entry #1	16	10h
Read Stream Error Log Entry #2	16	20h
Read Stream Error Log Entry #31	16	1F0h
	512	

Table 128 Read Stream Error Log

Figure 1. The Data Structure Version field shall contain a value of 02h indicating the second revision of the structure format.

The Read Stream Error Log Count field shall contain the number of uncorrected sector entries currently reportable to the host. This value may exceed 31.

The Error Log Index indicates the error log data structure representing the most recent error. Only values (31:1) are valid.

Table 128 defines the format of each entry in the Read Stream Error Log.

Description	Bytes	Offset
Feature Register Contents Value (current)	1	00h
Feature Register Contents Value (previous)	1	01h
Status Register Contents Value	1	02h
Error Register Contents Value	1	03h
LBA (7:0)	1	04h
LBA (15:8)	1	05h
LBA (23:16)	1	06h
LBA (31:24)	1	07h
LBA (39:32)	1	08h
LBA (47:40)	1	09h
Reserved	2	0A-0Bh
Sector Count (LSB)	1	0Ch
Sector Count (MSB)	1	0Dh
Reserved	2	0E-0Fh

Table 129 Stream Error Log entry

Byte (1:0) contains the contents of the Feature Register when the error occurred. This Value shall be set to 0FFFFh for s deferred write error.

Byte 2 contains the contents of the Status Register when the error occurred.

Byte 3 contains the contents of the Error Register when the error occurred.

Byte (9:4) indicates the starting LBA of the error.

Byte (13:12) indicate the length of the error. Therefore, each entry may describe a range of sectors at the given address and spanning the specified number of sectors.

11.21.8 Write Stream Error log

Table 130 defines the format of the Write Stream Error log. Entries are placed into the Write Stream Error log only when the SE bit is set to one in the Status Register. The 512 bytes returned shall contain a maximum of 31 error entries. The Write Stream Error Count shall contain the total number of Write Stream Errors detected since the last successful completion of the Read Log Ext command with LBA Low register set to 21h. This error count may be greater than 31, but only the most 31 errors are represented by entries in the log. If the Write Stream Error Count reaches the maximum value that can be represented after the next error is detected the Write Stream Error Count shall remain at the maximum value. After successful completion of a Read Log Ext command with the LBA Low Register set to 21h, the Write Stream Error Log shall be reset to a power-on or hardware reset condition, with the Error Log Index and Write Stream Error Count cleared to zero. The Write Stream Error Log is not reserved across power cycles and hardware reset.

Description	Bytes	Offset
Structure Version	1	00h
Error Log Index	1	01h
Write Stream Error Log Count	2	02h
Reserved	12	04h
Write Stream Error Log Entry #1	16	10h
Write Stream Error Log Entry #2	16	20h
Write Stream Error Log Entry #31	16	1F0h
	512	

Table 130 Write Stream Error Log

The Data Structure Version field shall contain a value of 02h indicating the second revision of the structure format.

The Write Stream Error Log Count field shall contain the number of Write Stream command entries since the last power on, since this log was last read, or since hardware reset was executed.

The Error Log Index indicates the error log data structure representing the most recent error. Only values (31:0) are valid.

Table 128 defines the format of each entry in the Error Log.

11.21.9 Identify Device Data log

IDENTIFY DEVICE data log reports device configuration information. This log is read-only. See table 99 for a list of defined pages. Each page consists of a header field that is followed by defined statistics fields. If the Revision Number field in the page header is 0000h, then that page is not supported. All page data following the last defined statistic for that page is reserved.

Description	Page
List of supported pages	00h
Copy of IDENTIFY DEVICE data	01h
Capacity	02h
Supported Capabilities	03h
Current Settings	04h
ATA Strings	05h
Security	06h
Reserved for Parallel ATA	07h
Serial ATA	08h
Reserved	09hFFh

Table 131 Identify Device Data Log

11.21.9.1 List of Supported IDENTIFY DEVICE data log pages (Page 00h)

IDENTIFY DEVICE data log page 00h contains a list of the supported pages. Entries are in order of ascending page number (e.g., 00h, 01h, 07h).

Offset	Туре	Content
07	QWord	IDENTIFY DEVICE data log Information Header. This log page lists the numbers of the supported log pages
		Bit Meaning 63:24 Reserved 23:16 Page Number. Set to 00h. 15:0 Revision number. Set to 0001h
8	Byte	Number of entries (n) in the following list
9	Byte	Set to zero to indicate that page 00h is supported
10	Byte	Set to one to indicate that page 01h is supported
n+8	Byte	Page number of nth supported IDENTIFY DEVICE data log page
n+9511		Reserved

Table 132 List of supported IDENTIFY DEVICE data pages

11.21.9.2 Copy of IDENTIFY DEVICE data (page 01h)

This page is a copy of IDENTIFY DEVICE data words 0..255.

11.21.9.3 Capacity (page 02h)

The Capacity log page provides information about the capacity of the device.

Offset	Туре	Content
07	QWord	Capacity page information header
		Bit Meaning
		63 Set to one.
		62:24 Reserved
		23:16 Page Number. Shall be set to 02h.
		15:0 Revision number. Shall be set to 0001h
815	QWord	Device Capacity
		Bit Meaning
		63 Set to one.
		62:48 Reserved
		47:0 ACCESSIBLE CAPACITY field
1623	QWord	Physical/Logical Sector Size
		Bit Meaning
		63 Contents of the QWord are valid
		62 LOGICAL TO PHYSICAL SECTOR RELATIONSHIP SUPPORTED bit
		61 LOGICAL SECTOR SIZE SUPPORTED bit
		60:22 Reserved
		21:20 ALIGNMENT ERROR REPORTING field
		19:16 LOGICAL TO PHYSICAL SECTOR RELATIONSHIP field
		15:0 LOGICAL SECTOR OFFSET field
2431	QWord	Logical Sector Size
		Bit Meaning
		63 Contents of the QWord are valid
		6232 Reserved
		310 LOGICAL SECTOR SIZE field
3239	QWord	Nominal Buffer Size
		Bit Meaning
		63 Contents of the QWord are valid
		62:0 BUFFER SIZE field
40511		Reserved

Table 133 Capacity log page

11.21.9.4 Supported Capabilities (page 03h)

The Supported Capabilities log page provides a mechanism for the device to report support for feature sets, features,

commands and other device capabilities.

Offset	Туре	Content
07	QWord	Supported Capabilities page information header.
		Bit Meaning
		63 Set to one.
		62:24 Reserved
		23:16 Page Number. Set to 03h.
		15:0 Revision number. Set to 0001h
815	QWord	Supported Capabilities
		Bit Meaning
		63 Set to one.
		62:46 Reserved
		45 REQUEST SENSE DEVICE FAULT SUPPORTED bit
		44 DSN SUPPORTED bit
		43 LOW POWER STANDBY SUPPORTED bit
		42 SET EPC POWER SOURCE SUPPORTED bit
		41 AMAX ADDR SUPPORTED bit
		40 Reserved for CFA
		39 DRAT SUPPORTED bit
		38 LPS MISALIGNMENT REPORTING SUPPORTED bit
		37 Reserved
		36 READ BUFFER DMA SUPPORTED bit
		35 WRITE BUFFER DMA SUPPORTED bit
		34 Reserved
		33 Download Microcode DMA SUPPORTED bit
		32 28-BIT SUPPORTED bit
		31 RZAT SUPPORTED bit
		30 Reserved
		29 NOP SUPPORTED bit
		28 READ BUFFER SUPPORTED bit
		27 WRITE BUFFER SUPPORTED bit
		26 Reserved
		25 READ LOOK-AHEAD SUPPORTED bit
		24 VOLATILE WRITE CACHE SUPPORTED bit
		23 SMART bit
		22 FLUSH CACHE EXT SUPPORTED bit
		21 Reserved
		20 48-BIT SUPPORTED bit
		19 Reserved
		18 SPIN-UP SUPPORTED bit
		17 PUIS SUPPORTED bit
		16 APM SUPPORTED bit
		15 CFA SUPPORTED bit
		14 Download Microcode SUPPORTED bit
		13 UNLOAD SUPPORTED bit
		12 The WRITE DMA FUA EXT and WRITE MULTIPLE FUA EXT commands are
		supported
		11 GPL SUPPORTED bit
		10 STREAMING SUPPORTED bit
		9 Reserved
		8 SMART SELF-TEST SUPPORTED bit
		7 SMART ERROR LOGGING SUPPORTED bit
		6 EPC SUPPORTED bit
		5 SENSE DATA SUPPORTED bit
		4 FREE-FALL SUPPORTED bit
		3 DM MODE 3 SUPPORTED bit
		2 GPL DMA SUPPORTED bit
		1 WRITE UNCORRECTABLE SUPPORTED bit
		0 WRV SUPPORTED bit

Table 134 Supported Capabilities log page

Offset	Туре	Content
1623	QWord	Download Microcode Capabilities
		Bit Meaning
		63 Contents of the QWord are valid
		62:35 Reserved
		34DM OFFSETS DEFERRED SUPPORTED bit
		33 DM IMMEDIATE SUPPORTED bit
		32 DM OFFSETS IMMEDIATE SUPPORTED bit
		31:16 DM MAXIMUM TRANSFER SIZE field
		15:0 DM MINIMUM TRANSFER SIZE field
2431	QWord	Nominal Media Rotation Rate
		Bit Meaning
		63 Set to one
		62:16 Reserved
		15:0 NOMINAL MEDIA ROTATION RATE field
3239	QWord	Nominal Form Factor [was word 168]
		Bit Meaning
		63 Contents of the QWord are valid
		62:4 Reserved
		3:0 Nominal Form Factor
4047	QWord	Write-Read-Verify Sector Count Mode 3
		Bit Meaning
		63 Contents of the QWord are valid
		62:32 Reserved
		31:0 WRV MODE 3 COUNT field
4855	QWord	Write-Read-Verify Sector Count Mode 2
		Bit Meaning
		63 Contents of the QWord are valid
		62:32 Reserved
	5014/	31:0 WRV MODE 2 COUNT field
5671	DQWord	World wide name [was word 108]
		Bit Meaning
		127 Set to one
		126:64 Reserved
70. 70	O)A/ 1	63:0 World wide name
7279	QWord	DATA SET MANAGEMENT
		Bit Meaning
		63 Set to one
		62:1 Reserved
00.514		0 TRIM SUPPORTED bit
80511		Reserved

Table 135 Supported Capabilities log page – Continued -

11.21.9.5 Current Settings (page 04h)

The Current Settings log page provides a mechanism for the device to report the current settings for feature sets, features, and other device capabilities.

Offset	Type	Content
07	QWord	Supported Capabilities page information header.
		Bit Meaning
		63 Set to one.
		62:24 Reserved
		23:16 Page Number. Set to 04h.
		15:0 Revision number. Set to 0001h
815	QWord	Current Settings
		Bit Meaning
		63 Set to one.
		62:17 Reserved
		16 DSN ENABLED bit
		15 EPC ENABLED bit
		14 8-BIT PIO ENABLED bit
		13 VOLATILE WRITE CACHE ENABLED bit
		12 Reserved for CFA
		11 REVERTING TO DEFAULTS ENABLED bit
		10 SENSE DATA ENABLED bit
		9 Reserved
		8 NON-VOLATILE WRITE CACHE bit
		7 READ LOOK-AHEAD ENABLED bit
		6 SMART ENABLED bit
		5 Reserved
		4 Reserved
		3 PUIS ENABLED bit
		2 APM ENABLED bit
		1 FREE-FALL ENABLED bit
		0 WRV ENABLED bit
1623	QWord	Feature Settings
		Bit Meaning
		63 Contents of the QWord are valid
		62:16 reserved
		17:16 POWER SOURCE field
		15:8 APM LEVEL field
		7:0 WRV MODE field
2431	QWord	DMA Host Interface Sector Times
		Bit Meaning
		63 Contents of the QWord are valid
		62:16 Reserved
		15:0 DMA SECTOR TIME field
3239	QWord	PIO Host Interface Sector Times
		Bit Meaning
		63 Contents of the QWord are valid
		62:16 Reserved
		15:0 PIO SECTOR TIME field
4047	QWord	Streaming minimum request size
		Bit Meaning
		63 Contents of the QWord are valid
		62:16 Reserved
		15:0 STREAM MIN REQUEST SIZE field

Table 136 Current Settings log page

Offset	Туре	Content
4855	QWord	Streaming access latency
		Bit Meaning
		63 Contents of the QWord are valid
		62:16 Reserved
		15:0 STREAM ACCESS LATENCY field
5663	QWord	Streaming Performance Granularity
		Bit Meaning
		63 Contents of the QWord are valid
		62:32 Reserved
		31:0 STREAM GRANULARITY field
6471	QWord	Free-fall Control Sensitivity
		Bit Meaning
		63 Contents of the QWord are valid
		62:16 Reserved
		7:0 FREE-FALL SENSITIVITY field
7279	QWord	Device Maintenance Schedule
		Bit Meaning
		63 Contents of the QWord are valid
		62:48 Reserved
		47:32 Time scheduled for device maintenance
		31:16 Time to performance degradation
00.544		15:0 Minimum inactive time
80511		Reserved

Table 137 Current Settings log page -Continued -

11.21.9.6 Strings (page 05h)

The Strings log page provides a mechanism for the device to report ATA String based information.

Offset	Туре	Content
07	QWord	Strings page information header.
		Bit Meaning
		63 Set to one.
		62:24 Reserved
		23:16 Page Number. Set to 05h.
		15:0 Revision number. Set to 0001h
827	ATA String	Serial number
2831		Reserved
3239	ATA String	Firmware revision
4047		Reserved
4887	ATA String	Model number
8895		Reserved
96103	ATA String	Additional Product Identifier
104511		Reserved

Table 138 Strings log page

11.21.9.7 Security (page 06h)

The Security log page provides a mechanism for the device to report Security based information.

Offset	Туре	Content
07	QWord	Security page information header.
		Bit Meaning
		63 Set to one.
		62:24 Reserved
		23:16 Page Number. Set to 06h.
		15:0 Revision number. Set to 0001h
815	QWord	Master Password Identifier [was word 92]
00	Q	Bit Meaning
		63 Contents of the QWord are valid.
		62:16 Reserved
		15:0 Master Password Identifier
1623	QWord	Security Status
1020	QVVOIG	Bit Meaning
		63 Contents of the QWord are valid
		62:7 Reserved
		6 SECURITY SUPPORTED bit
		5 MASTER PASSWORD CAPABILITY bit
		4 ENHANCED SECURITY ERASE SUPPORTED bit
		3 SECURITY COUNT EXPIRED bit
		2 SECURITY FROZEN bit
		1 SECURITY LOCKED bit
		0 SECURITY ENABLED bit
2431	QWord	Time required for an Enhanced Erase mode SECURITY ERASE UNIT command
2431	Qvvoiu	[was word 90]
		Bit Meaning
		63 Contents of the QWord are valid
		63:15 Reserved
3239	QWord	14:0 ENHANCED SECURITY ERASE TIME field Time required for a Normal Erase mode SECURITY ERASE UNIT command
3239	Qvvoid	
		[was word 89]
		Bit Meaning 63 Contents of the QWord are valid
		63:15 Reserved
		92.79.799
4047	O\\\\ a = d	14:0 NORMAL SECURITY ERASE TIME field
4047	QWord	Trusted Computing feature set
		Bit Meaning
		63 Contents of the QWord are valid
		62:1 Reserved
40 55	014/	0 TRUSTED COMPUTING SUPPORTED bit
4855	QWord	Security Capabilities
		Bit Meaning
		63 Contents of the QWord are valid
		62:5 Reserved
		4 BLOCK ERASE SUPPORTED bit
		3 OVERWRITE SUPPORTED bit
		2 CRYPTO SCRAMBLE SUPPORTED bit
		1 SANITIZE SUPPORTED bit
		0 ENCRYPT ALL SUPPORTED bit
56511		Reserved

Table 139 Security log page

11.21.9.8 Parallel ATA (page 07h)

The Parallel ATA log page provides information about the Parallel ATA Transport. This page is not supported.

11.21.9.9 Serial ATA (page 08h)

The Serial ATA log page provides information about the Serial ATA Transport.

Offset	Type	ge provides information about the Serial ATA Transport. Content
07	QWord	Serial ATA page information header.
07	Qvvoid	
		Bit Meaning
		63 Set to one.
		62:24 Reserved
		23:16 Page Number. Set to 08h.
0.45	014/ 1	15:0 Revision number. Set to 0001h
815	QWord	SATA Capabilities
		Bit Meaning
		63 Set to one
		62:26 Reserved for Serial ATA
		24 NCQ AUTOSENSE SUPPORTED bit
		23 SOFTWARE SETTINGS PRESERVATION SUPPORTED bit
		22 HARDWARE FEATURE CONTROL SUPPORTED bit
		21 IN-ORDER DATA DELIVERY SUPPORTED bit
		20 DEVICE INITIATED POWER MANAGEMENT SUPPORTED bit
		19 DMA SETUP AUTO-ACTIVATION SUPPORTED bit
		18 NON-ZERO BUFFER OFFSETS SUPPORTED bit
		17 SEND AND RECEIVE QUEUED COMMANDS SUPPORTED bit
		16 NCQ QUEUE MANAGEMENT COMMAND SUPPORTED bit
		15 NCQ STREAMING SUPPORTED bit
		14 READ LOG DMA EXT AS EQUIVALENT TO READ LOG EXT SUPPORTED bit
		13 DEVICE AUTOMATIC PARTIAL TO SLUMBER TRANSITIONS SUPPORTED bit
		12 HOST AUTOMATIC PARTIAL TO SLUMBER TRANSITIONS SUPPORTED bit
		11 NCQ PRIORITY INFORMATION SUPPORTED bit
		10 UNLOAD WHILE NCQ COMMANDS ARE OUTSTANDING SUPPORTED bit
		9 SATA PHY EVENT COUNTERS LOG SUPPORTED bit
		8 RECEIPT OF HOST INITIATED POWER MANAGEMENT REQUESTS
		SUPPORTED bit
		7 NCQ FEATURE SET SUPPORTED bit
		6:3 Reserved for Serial ATA
		2 SATA GEN3 SIGNALING SPEED SUPPORTED bit
		1 SATA GEN2 SIGNALING SPEED SUPPORTED bit
40.00	0111	0 SATA GEN1 SIGNALING SPEED SUPPORTED bit
1623	QWord	Current SATA Settings
		Bit Meaning
		63 Set to one
		62:10 Reserved
		9 AUTOMATIC PARTIAL TO SLUMBER TRANSITIONS ENABLED bit
		8 SOFTWARE SETTINGS PRESERVATION ENABLED bit
		7 HARDWARE FEATURE CONTROL IS ENABLED bit
		6 IN-ORDER DATA DELIVERY ENABLED bit
		5 DEVICE INITIATED POWER MANAGEMENT ENABLED bit)
		4 DMA SETUP AUTO-ACTIVATION ENABLED bit
		3 NON-ZERO BUFFER OFFSETS ENABLED bit
04.00		2:0 CURRENT SERIAL ATA SIGNAL SPEED field
2439	100	Reserved for Serial ATA
4041	Word	CURRENT HARDWARE FEATURE CONTROL IDENTIFIER field
4243	Word	SUPPORTED HARDWARE FEATURE CONTROL IDENTIFIER field
44511	1	Reserved for SATA

Table 140 Serial ATA log page

11.22 Read Log DMA Ext(47h)

Command Block Output Registers												
Register	7	6	5	4	3	2	1	0				
Data Low	-	•	•	•	•	•	•	1				
Data High	-	-	-	-	-	-	-					
Feature	Current	-	-	•			-		R-			
reature	Previous	-	-	•			-					
Sector Count	Current	٧	٧	٧	٧	٧	٧	٧	٧			
Sector Count	Previous	٧	٧	٧	٧	٧	٧	٧	٧			
LBA Low	Current	٧	٧	٧	٧	٧	٧	٧	٧			
LDA LOW	Previous	-	-	-	-	-	-	VV				
LDA M:-I	Current	٧	٧	٧	٧	٧	٧	٧	٧			
LBA Mid	Previous	٧	٧	٧	٧	٧	٧	٧	٧			
I DA I II ala	Current	-	-	-	-	-	-	-	-			
LBA High	Previous	-	-	-	-	-	-	-	-			
Device		-	-	-	-	-	-	-	-			
Command		0	1	0	0	0	1	1	1			

Command Bloc	k Input Re	gist	ers						
Register			6	5	4	3	2	1	0
Data Low		-	•	•	•	•	ı	•	•
Data High		-	•	ı	ı	ı	ı	ı	-
Error		See Below							
Contar Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
LBA Low	HOB=0	-	•	•	•	•	ı	•	•
LDA LOW	HOB=1	-	•	•	•	•	ı	•	•
LBA Mid	HOB=0	-	•	•	•	•	ı	•	•
LDA IVIIU	HOB=1	-	-	•	•	•	•	•	-
LDA High	HOB=0	-	-	-	-	-	-	-	-
LBA High	HOB=1	-	-	-	-	-	-	-	-
Device	-	-	-	-	-	-	-	-	
Status				S	ee E	3elo	W		

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
V	V	0	V	0	V	0	0					

			Status	Registe	er		
7	6	5	4	3	2	1	0
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR
0	V	0	V	-	0	0	V

Table 141 Read Log DMA Ext Command (47h)

The content of this command is the same as Read Log Ext. See 11.21

11.23 Read Multiple (C4h)

Command Block Output Registers												
Register	7	6	5	4	3	2	1	0				
Data	-	•	•	•	•	•	•	•				
Feature	-	•	-	-			-	-				
Sector Count	٧	>	٧	٧	٧	٧	٧	٧				
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧				
Cylinder Low	٧	٧	٧	٧	٧	٧	٧	٧				
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧				
Device/Head	1	L	1	D	Н	Н	Н	Н				
Command	1	1	0	0	0	1	0	0				

Command Bloc	k In	put	Reg	giste	ers					
Register	7	6	5	4	3	2	1	0		
Data	-	-	•	-	•	•		•		
Error		See Below								
Sector Count	V V V V V V V V V									
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧		
Cylinder Low	٧	٧	٧	٧	٧	٧	٧	٧		
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧		
Device/Head	-	-	-	-	Η	Η	Τ	Η		
Status		•	S	ee l	3elo	W		•		

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	V	0	V	0	V	0	0					

	Status Register											
7	6	5	4	3	2	1	0					
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	V	-	0	-	٧					

Table 142 Read Multiple Commands (C4h)

The Read Multiple command reads one or more sectors of data from disk media, and then transfers the data from the device to the host.

The sectors are transferred through the Data Register 16 bits at a time. Command execution is identical to the Read Sector(s) command except that an interrupt is generated for each block (as defined by the Set Multiple command) instead of for each sector.

11.24 Read Multiple Ext (29h)

Command Block Output Registers										
Register	7	6	5	4	3	2	1	0		
Data Low			-	-	-	-	-	-	-	
Data High		-	-	-	-	-	-	-	-	
Footure	Current	-	-	-	-	-	-	-	-	
Feature	Previous	-	-	-	-	-	-	-	-	
Sector Count	Current	٧	٧	٧	٧	٧	٧	٧	٧	
Sector Count	Previous	V	V	V	V	V	V	V	V	
Sector Number	Current	V	V	V	V	V	V	V	V	
Sector Number	Previous	V	V	V	V	V	V	V	V	
Cylinder Lew	Current	V	V	V	V	V	>	>	>	
Cylinder Low	Previous	V	V	V	V	٧	V	V	V	
Cylindar High	Current	V	V	V	V	V	V	V	V	
Cylinder High	Previous	V	V V V V V		>	>	>			
Device/Head		-	1	-	D	-	-	1	-	
Command		0	0	1	0	1	0	0	1	

Command Block Input Registers									
Register		7	6	5	4	3	2	1	0
Data Low			-	-	-	-	-	-	-
Data High		-	-	-	-	-	-	-	-
Error		See Below							
Sector Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	•	•	-	•	ı
Sector Number	HOB=0	V	V	V	>	>	V	>	>
Sector Number	HOB=1		>						
Cylinder Low	HOB=0	V	V	V	>	>	V	>	>
Cylinder Low	HOB=1	V	V	V	>	>	V	>	>
Cylindar High	HOB=0	V	V	V	V	V	V	V	V
Cylinder High	HOB=1	HOB=1 V V V V V V V					>	>	
Device/Head	vevice/Head						ı		
Status				S	See E	3elo	w		

	Error Register										
7	6	5	4	3	2	1	0				
CRC	UNC	0	IDN	0	ABT	TON	AMN				
0	V	0	V	0	V	0	0				

		5	Status F	Registe	r		
7	6	5	4	3	2	1	0
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR
0	V	0	V	•	0	•	V

Table 143 Read Multiple Ext Command (29h)

The Read Multiple Ext command reads one or more sectors of data from disk media, and then transfers the data from the device to the host.

The sectors are transferred through the Data Register 16 bits at a time. Command execution is identical to the Read Sector(s) command except that an interrupt is generated for each block (as defined by the Set Multiple command) instead of for each sector.

Output Parameters To The Device

Sector Count Current The number of continuous sectors to be transferred low order, bits (7:0).

Sector Count Previous The number of continuous sectors to be transferred high order, bits (15:8). If 0000h is

specified in the Sector Count register, then 65,536 sectors will be transferred.

Sector Number Current LBA (7:0).

Sector Number Previous LBA (31:24).

Cylinder Low Current LBA (15:8).

Cylinder Low Previous LBA (39:32).

Cylinder High Current LBA (23:16).

Cylinder High Previous LBA (47:40).

Input Parameters From The Device

Sector Number (HOB=0)

LBA (7:0) of the address of the first unrecoverable error.

LBA (31:24) of the address of the first unrecoverable error.

Cylinder Low (HOB=0)

LBA (31:24) of the address of the first unrecoverable error.

LBA (31:24) of the address of the first unrecoverable error.

LBA (31:24) of the address of the first unrecoverable error.

LBA (31:24) of the address of the first unrecoverable error.

LBA (23:16) of the address of the first unrecoverable error.

LBA (47:40) of the address of the first unrecoverable error.

11.25 Read Native Max Address (F8h)

Block Output Reg	giste	ers	Cor	nma	ınd			
Register	7	6	5	4	3	2	1	0
Data	-	ı	1	1	1	-	1	1
Feature	-	•	-	•	•	-	•	
Sector Count	-	-	-	-	-	-	-	-
Sector Number	-	-	-	-	-	-	-	-
Cylinder Low	-	ı	•	•	•	-	•	•
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	1	L	1	ם	-	-	-	-
Command	1	1	1	1	1	0	0	0

Command Bloc	k In	put	Reg	giste	ers			
Register	7	6	5	4	3	2	1	0
Data	•	-	-	-	-		•	•
Error	See Below							
Sector Count	•	-	•	-	-	•	•	•
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	>	٧	>	٧	٧	٧	٧	>
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head	1	-	•	-	Н	Τ	Η	Η
Status	See Below							

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	0	0	V	0	0					

	Status Register											
7	6	5	4	3	2	1	0					
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	-	-	0	-	V					

Table 144 Read Native Max ADDRESS (F8h)

This command returns the native max LBA/CYL of HDD which is not affected by Set Max Address command.

The 48-bit native max address is greater than 268,435,455; the Read Native Max Address command shall return a value of 268,435,455.

Input Parameters From The Device

Sector Number In LBA mode, this register contains native max LBA bits 0-7. (L=1)

In CHS mode, this register contains native max sector number. (L=0)

Cylinder High/Low In LBA mode, this register contains native max LBA bits 8-15 (Low), 16-23 (High). (L=1)

In CHS mode, this register contains native max cylinder number. (L=0)

H In LBA mode, this register contains native max LBA bits 24-27. (L=1)

In CHS mode, this register contains native max head number.(L=0)

11.26 Read Native Max Address Ext (27h)

Command Block O	utput Regist	ers							
Register		7	6	5	4	3	2	1	0
Data Low		-	ı	-	ı	ı	ı	ı	ı
Data High	-	ı	-	ı	ı	ı	ı	ı	
Feature	Current	-	•	-	ı	•	•	ı	•
reature	Previous	-	•	-	ı	•	•	ı	•
Sector Count	Current	-	•	-	ı	•	•	ı	•
Sector Count	Previous	-	•	-	ı	•	•		•
Sector Number	Current	-	1	-	-	-	1	-	1
Sector Number	Previous	-	1	-	1	-	1	-	1
Cylinder Low	Current	-	-	-	-	-	-	-	-
Cylinder Low	Previous	-	•	-	•	•	•	•	•
Cylinder High	Current	-	1	-	-	-	1	-	1
Cylinder High	Previous	-	-	-	-	-	-	- -	-
Device/Head		1	1	1	D	-	-	-	-
Command		0	0	1	0	0	1	1	1

Command Bloc	k Input R	egis	ters	,					
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	-
Data High		-	-	-	-	-	-	-	-
Error		See Below							
Coator Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
Sector Number	HOB=0	٧	٧	٧	٧	V	٧	٧	V
Sector Number	HOB=1	٧	٧	٧	٧	V	٧	· · · · · · · · · · · · · · · · ·	V
Cylinder Low	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	HOB=1	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	HOB=1	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head		-	-	-	-	-	-	-	-
Status				8	See E	3elo	W		

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	0	0	V	0	0					

	Status Register										
7	6	5	4	3	2	1	0				
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR				
0	V	0	-	-	0	•	V				

Table 145 Read Native Max Address Ext (27h)

This command returns the native max LBA of HDD which is not affected by Set Max Address Ext command.

Input Parameters From The Device

Sector Number (HOB=0) LBA (7:0) of the address of the Native max address.

Sector Number (HOB=1) LBA (31:24) of the address of the Native max address.

Cylinder Low (HOB=0) LBA (15:8) of the address of the Native max address.

Cylinder Low (HOB=1) LBA (39:32) of the address of the Native max address.

Cylinder High (HOB=0) LBA (23:16) of the address of the Native max address.

Cylinder High (HOB=1) LBA (47:40) of the address of the Native max address.

11.27 Read Sector(s) (20h/21h)

Command Block (Outp	out F	Regi	ster	S			
Register	7	6	5	4	3	2	1	0
Data	-	-	-	-	-	-	-	-
Feature	-	-		-	•	-	-	-
Sector Count	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	٧	٧	٧	٧	٧	V	٧	V
Cylinder Low	٧	٧	٧	٧	٧	>	٧	٧
Cylinder High	٧	٧	>	٧	>	>	>	٧
Device/Head	1	L	1	D	Η	Τ	Ι	Н
Command	0	0	1	0	0	0	0	R

Command Bloc	k In	put	Reg	jiste	rs			
Register	7	6	5	4	3	2	1	0
Data	-	-	-	-	•	-	-	ı
Error	See Below							
Sector Count	٧	٧	٧	٧	٧	٧	٧	>
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	٧	٧	٧	٧	٧	٧	٧	>
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head	-	-	-	-	Н	Н	Н	Ι
Status		See Below						

	Error Register										
7	7 6 5 4 3 2 1 0										
CRC	UNC	0	IDN	0	ABT	TON	AMN				
0	V	0	V	0	V	0	0				

	Status Register											
7 6 5 4 3 2 1 0												
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	V	-	0	-	V					

Table 146 Read Sector(s) Command (20h/21h)

The Read Sector(s) command reads one or more sectors of data from disk media, and then transfers the data from the device to the host.

The sectors are transferred through the Data Register 16 bits at a time.

If an uncorrectable error occurs, the read will be terminated at the failing sector.

Output Parameters To The Device

Sector Count The number of continuous sectors to be transferred. If zero is specified, then 256 sectors

will be transferred.

Sector Number The sector number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 8 – 15 (Low), 16 – 23 (High). (L=1)

H The head number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 24 – 27. (L=1)

R The retry bit, but this bit is ignored.

Input Parameters From The Device

Sector Count The number of requested sectors not transferred. This will be zero, unless an

unrecoverable error occurs.

Sector Number The sector number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 8 – 15 (Low), 16 – 23 (High). (L=1)

H The head number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 24 - 27. (L=1)

11.28 Read Sector(s) Ext (24h)

Command Block	Output Regi	ister	s							
Register		7	6	5	4	3	2	1	0	
Data Low		-	-	-	•	ı	-	-	•	
Data High		-	-	-	•	•	-	-	-	
Feature	Current	-	1	-	ı	ı	-	-	1	
i eature	Previous	-	-	-	-	-	-	-	1	
Soctor Count	Current	٧	٧	٧	>	>	٧	٧	>	
Sector Count	Previous	٧	٧	٧	>	>	٧	٧	>	
Sector Number	Current	٧	٧	٧	٧	٧	٧	٧	<	
Sector Number	Previous	٧	٧	٧	٧	٧	٧	٧	٧	
Cylinder Low	Current	٧	٧	٧	>	>	٧	٧	٧	
Cylinder Low	Previous	٧	٧	٧	٧	٧	٧	٧	<	
Cylinder High	Current	٧	٧	٧	٧	V	٧	٧	٧	
Cylinder High	Previous	٧	٧	٧	٧	٧	٧	٧	٧	
Device/Head		1	1	1	D	-	-	- -		
Command		0	0	1	0	0	1	1 0		

Command Bloc	k Input R	egis	sters	•					
Register		7	6	5	4	3	2	1	0
Data Low		•	•	-	•	•	•	ı	ı
Data High		ı	•	-	ı	ı	ı	ı	•
Error				8	See E	Belov	N		
Soctor Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	•	-	-	·	•	·	·	·
Sector Number	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	HOB=1	٧	٧	٧	٧	٧	٧	V	٧
Cylinder Low	HOB=0	٧	V	V	٧	٧	٧	٧	٧
Cylinder Low	HOB=1	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	HOB=1	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head		-	-	-	-	-	-	-	-
Status		See Below							

	Error Register										
7 6 5 4 3 2 1 0											
CRC	UNC	0	IDN	0	ABT	TON	AMN				
0	V	0	V	0	V	0	0				

Status Register											
7 6 5 4 3 2 1 0											
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR				
0	V	0	V	-	0	ı	V				

Table 147 Read Sector(s) Ext Command (24h)

The Read Sector(s) Ext command reads from 1 to 65,536 sectors of data from disk media, and then transfers the data from the device to the host.

The sectors are transferred through the Data Register 16 bits at a time.

If an uncorrectable error occurs, the read will be terminated at the failing sector.

Output Parameters To The Device

Sector Count Current The number of continuous sectors to be transferred low order, bits (7:0)

Sector Count Previous The number of continuous sectors to be transferred high order, bits (15:8). If zero is

specified in the Sector Count register, then 65,536 sectors will be transferred.

Sector Number CurrentLBA (7:0).Sector Number PreviousLBA (31:24).Cylinder Low CurrentLBA (15:8).Cylinder Low PreviousLBA (39:32).Cylinder High CurrentLBA (23:16).Cylinder High PreviousLBA (47:40).

Input Parameters From The Device

Sector Number (HOB=0)

LBA (7:0) of the address of the first unrecoverable error.

LBA (31:24) of the address of the first unrecoverable error.

LBA (15:8) of the address of the first unrecoverable error.

LBA (39:32) of the address of the first unrecoverable error.

LBA (23:16) of the address of the first unrecoverable error.

LBA (23:16) of the address of the first unrecoverable error.

LBA (47:40) of the address of the first unrecoverable error.

11.29 Read Stream DMA Ext(2Ah)

Command Block	Output Reg	giste	ers						
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	1
Data High		-	-	-	-	-	-	-	
Factions	Current	٧	٧	٧	٧	-	٧	٧	٧
Feature	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Contar Count	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Count	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Culindan Laur	Current	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Culin de a Lliede	Current	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head	•	1	1	1	D	-	-	-	-
Command		0	0	1	0	1	0 1 0		

Command Bloo	k Input R	egis	ters	;					
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	-
Data High		-	-	-	-	-	-	-	-
ErrorSee Below									
Sactor Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
Sector Number	HOB=0	٧	٧	٧	٧	٧	٧	٧	V
Sector Number	HOB=1	٧	٧	٧	٧	٧	٧	٧	V
Coding down Love	HOB=0	٧	٧	٧	٧	٧	٧	٧	V
Cylinder Low	HOB=1	٧	٧	٧	٧	٧	٧	٧	V
Cylinder High	HOB=0	٧	٧	٧	٧	٧	٧	٧	V
Cylinder High	HOB=1	٧	٧	٧	٧	٧	٧	٧	V
Device/Head		-	-	-	-	-	-	-	-
Status		See Below							

Error Register										
7 6 5 4 3 2 1 0										
CRC	UNC	0	IDN	0	ABT	TON	ССТО			
V	V	0	V	0	V	0	V			

	Status Register											
7	7 6 5 4 3 2 1 0											
BSY	RDY	SE	DWE	DRQ	COR	IDX	ERR					
0	V	V	0	-	0	-	V					

Table 148 Read Stream DMA Ext Command (2Ah)

The Read Stream DMA Ext command reads one to 65536 sectors as specified in the Sector Count register. A value of 0000h in the Sector Count register requests 65536 sectors.

The RC bit indicates that the drive operate in a continuous read mode for the Read Stream command. When RC is cleared to zero the drive shall operate in normal Streaming read mode.

When the Read Continuous mode is enabled, the device shall transfer data of the requested length without setting the ERR bit to one. The SE bit shall be set to one if the data transferred includes errors. The data may be erroneous in this case.

If the Read Continuous bit is set to one, the device shall not stop execution of the command due to errors. If the RC bit is set to one and errors occur in reading or transfer of the data, the device shall continue to transfer the amount of data requested and then provide ending status with the BSY bit cleared to zero, the SE bit set to one, the ERR bit cleared to zero, and the type of error, ICRC,UNC, IDNF or ABRT, reported in the error log. If the RC bit is set to one and the Command Completion Time Limit expires, the device shall stop execution of the command and provide ending status with BSY bit cleared to zero, the SE bit set to one, the ERR bit cleared to zero, and report the fact that the Command Completion Time Limit expired by setting the CCTO bit in the error log to one, In all cases, the device shall attempt to transfer the amount of data requested within the Command Completion Time Limit event if some data transferred is in error.

Output Parameters To The Device

Feature Current

URG (bit7) URG specifies an urgent transfer request. The Urgent bit specifies that the command should be completed in the minimum possible time by the device and shall

be completed within the specified Command Completion Time Limit.

RC (bit6)

one, the device shall not stop execution of the command due to errors.

If the RC bit is set to one and errors occur in reading or transfer of the data, the device shall continue to transfer the amount of data requested and then provide ending status with BSY bit cleared to zero, the SE bit set to one, the ERR bit cleared to zero,

and the type of error, ICRC, UNC, IDNF or ABRT reported in the error log.

If the RC bit is set to one and the CCTL expires, the device shall stop execution of the command and provide ending status with the BSY bit cleared to zero, the SE bit set to one, the ERR bit cleared to zero, and report the fact that the CCTL expired by

setting the CCTO bit in the error log to one.

In all cases, the device shall attempt to transfer the amount of data requested within

the CCTL even if some data transferred is in error.

NS (bit5) NS (Not Sequential) may be set to one if the next read stream command with the

same Stream ID may not be sequential in LBA space.

HSE (bit4) HSE (Handle Stream Error) specifies that this command starts at the LBA of the last

reported error for this stream, so the device may attempt to continue its corresponding

error recovery sequence where it left off earlier.

Stream ID (bit 0..2) Stream ID specifies the stream to be read. The device shall operate according to

the Stream ID set by the Read Stream command.

Feature Previous The time allowed for the current command's completion is calculated as follows: CCTL (7:0)

Command Completion Time Limit = (content of the Feature register

Previous) * (Identify Device words (99:98)) microseconds

If the value is zero, the device shall use the Default CCTL supplied with a previous Configure Stream command for this Stream ID. If the Default CCTL is zero, or no previous Configure Stream command was defined for this Stream ID, the drive will ignore the CCTL. The time is measured from the write of the command register to the final INTRQ for command completion. The device has minimum CCTL value. When the specified value is shorter than the minimum value. CCTL is set to the minimum value. Actual minimum CCTL value is described in the "Deviations from Standard" section.

Sector Count Current

The number of continuous sectors to be transferred low order, bits (7:0)

Sector Count Previous The number of continuous sectors to be transferred high order, bits (15:8). If zero is specified in the Sector Count register, then 65,536 sectors will be transferred.

Sector Number Current LBA (7:0). **Sector Number Previous** LBA (31:24).

Cylinder Low Current LBA (15:8). **Cylinder Low Previous** LBA (39:32). **Cylinder High Current** LBA (23:16).

Cylinder High Previous LBA (47:40).

Input Parameters From The Device

Sector Number (HOB=0)

Sector Number (HOB=1)

Cylinder Low (HOB=0)

Cylinder Low (HOB=1)

Cylinder High (HOB=0)

Cylinder High (HOB=1)

LBA (7:0) of the address of the first unrecoverable error.

LBA (31:24) of the address of the first unrecoverable error.

LBA (39:32) of the address of the first unrecoverable error.

LBA (23:16) of the address of the first unrecoverable error.

LBA (47:40) of the address of the first unrecoverable error.

CCTO (Error, bit 0)CCTO bit shall be set to one if a Command Completion Time Limit Out error has occurred.

SE (Status, bit 5) Occurred
SE (Status, bit 5)

SE (Stream Error) shall be set to one if an error has occurred during the execution of the command and the RC bit is set to one, In this case the LBA returned in the Sector Number registers shall be the address of the first sector in error, and the Sector Count registers shall contain the number of consecutive sectors that may contain errors. If the RC bit is set to one when the command is issued and ICRC, UNC, IDNF, ABRT, or CCTO error occurs, the SE bit shall be set to one, the ERR bit shall be cleared to zero, and the bits that would normally be set in the Error register shall be set in the error log.

11.30 Read Stream Ext (2Bh)

Command Block	Output Re	giste	ers						
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	
Data High		-	-	-	-	-	-	-	
Footure	Current	٧	٧	٧	٧	-	٧	٧	٧
Feature	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Contar Count	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Count	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Culindar Laur	Current	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Cultinate at Litate	Current	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head		1	1	1	D	-	-	-	-
Command		0	0	1	0	1	0	1	1

Command Bloo	ck Input R	egis	sters	5					
Register		7	6	5	4	3	2	1	0
Data Low		-	1	-	-	-	1	-	1
Data High		-	•	-	-	•	•	-	•
Error				8	See E	3elo	N		
Sactor Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
Cootor Number	HOB=0	٧	V	٧	٧	٧	٧	٧	V
Sector Number	HOB=1	٧	V	٧	٧	٧	٧	٧	V
Cylinder Low	HOB=0	٧	V	٧	٧	٧	٧	٧	V
Cylinder Low	HOB=1	٧	V	٧	٧	V	٧	٧	٧
Cylinder High	HOB=0	٧	V	٧	٧	V	٧	٧	V
Cylinder High	HOB=1	٧	٧	٧	٧	V	٧	٧	٧
Device/Head	•	-	-	-	-	-	-	-	-
Status		See Below				•			

	Error Register										
7	6	5	4	3	2	1	0				
CRC	UNC	0	IDN	0	ABT	TON	ССТО				
V	V	0	V	0	V	0	V				

		5	Status F	Registe	r		
7	6	5	4	3	2	1	0
BSY	RDY	SE	DWE	DRQ	COR	IDX	ERR
0	V	V	0	-	0	-	V

Table 149 Read Stream Ext Command (2Bh)

The Read Stream DMA Ext command reads one to 65536 sectors as specified in the Sector Count register. A value of 0000h in the Sector Count register requests 65536 sectors.

The RC bit indicates that the drive operate in a continuous read mode for the Read Stream command. When RC is cleared to zero the drive shall operate in normal Streaming read mode.

When the Read Continuous mode is enabled, the device shall transfer data of the requested length without setting the ERR bit. The SE bit shall be set to one if the data transferred includes errors. The data may be erroneous in this case.

If the Read Continuous bit is set to one, the device shall not stop execution of the command due to errors. If the RC bit is set to one and errors occur in reading or transfer of the data, the device shall continue to transfer the amount of data requested and then provide ending status with the BSY bit cleared to zero, the SE bit set to one, the ERR bit cleared to zero, and the type of error, ICRC,UNC,IDNF, or ABRT, reported in the error log. If the RC bit is set to one and the Command Completion Time Limit expires, the device shall stop execution of the command and provide ending status with BSY bit cleared to zero, the SE bit set to one, the ERR bit cleared to zero, and report the fact that the Command Completion Time Limit expired by setting the CCTO bit in the error log to one, In all cases, the device shall attempt to transfer the amount of data requested within the Command Completion Time Limit event if some data transferred is in error.

Output Parameters To The Device

Feature Current

URG (bit7)URG specifies an urgent transfer request. The Urgent bit specifies that the command

should be completed in the minimum possible time by the device and shall be

completed within the specified Command Completion Time Limit.

RC (bit6) RC specifies Read Continuous mode enabled. If the Read Continuous bit is set to

one, the device shall not stop execution of the command due to errors.

If the RC bit is set to one and errors occur in reading or transfer of the data, the device shall continue to transfer the amount of data requested and then provide ending status with BSY bit cleared to zero, the SE bit set to one, the ERR bit cleared to zero, and the

type of error, UNC, IDNF or ABRT reported in the error log.

If the RC bit is set to one and the CCTL expires, the device shall stop execution of the command and provide ending status with the BSY bit cleared to zero, the SE bit set to one, the ERR bit cleared to zero, and report the fact that the CCTL expired by setting

the CCTO bit in the error log to one.

In all cases, the device shall attempt to transfer the amount of data requested within

the CCTL even if some data transferred is in error.

NS (bit5) NS (Not Sequential) may be set to one if the next read stream command with the same

Stream ID may not be sequential in LBA space.

HSE (bit4)HSE (Handle Stream Error) specifies that this command starts at the LBA of the last

reported error for this stream, so the device may attempt to continue its corresponding

error recovery sequence where it left off earlier.

Stream ID (bit 0..2) Stream ID specifies the stream to be read. The device shall operate according to the

Stream ID set by the Read Stream command.

Feature Previous CCTL (7:0)

The time allowed for the current command's completion is calculated as follows:

Command Completion Time Limit = (content of the Feature register

Previous) * (Identify Device words (99:98)) microseconds

If the value is zero, the device shall use the Default CCTL supplied with a previous Configure Stream command for this Stream ID. If the Default CCTL is zero, or no previous Configure Stream command was defined for this Stream ID, the device will ignore the CCTL. The time is measured from the write of the command register to command completion. The device has minimum CCTL value. When the specified value is shorter than the minimum value, CCTL is set to the minimum value. Actual minimum

CCTL value is described in the "Deviations from Standard" section.

Sector Count Current

The number of continuous sectors to be transferred low order, bits (7:0)

Sector Count PreviousThe number of continuous sectors to be transferred high order, bits (15:8). If zero is specified in the Sector Count register, then 65,536 sectors will be transferred.

Sector Number Current LBA (7:0).

Sector Number Previous LBA (31:24).

Cylinder Low Current LBA (15:8).

Cylinder Low Previous LBA (39:32).

Cylinder High Current LBA (23:16).

Cylinder High Previous LBA (47:40).

Input Parameters From The Device

Sector Number (HOB=0)

Sector Number (HOB=1)

Cylinder Low (HOB=0)

Cylinder Low (HOB=1)

Cylinder High (HOB=0)

Cylinder High (HOB=1)

LBA (7:0) of the address of the first unrecoverable error.

LBA (31:24) of the address of the first unrecoverable error.

LBA (39:32) of the address of the first unrecoverable error.

LBA (23:16) of the address of the first unrecoverable error.

LBA (47:40) of the address of the first unrecoverable error.

CCTO (Error, bit 0) CCTO bit shall be set to one if a Command Completion Time Limit Out error has

occurred.

SE (Status, bit 5)

SE (Stream Error) shall be set to one if an error has occurred during the execution of the command and the RC bit is set to one. In this case the LBA returned in the Sector Number registers shall be the address of the first sector in error, and the Sector Count

registers shall contain the number of consecutive sectors that may contain errors. If the RC bit is set to one when the command is issued and a UNC, IDNF, ABRT, or CCTO error occurs, the SE bit shall be set to one, the ERR bit shall be cleared to zero, and the bits that would normally be set in the Error register shall be set in the error log.

11.31 Read Verify Sector(s) (40h/41h)

Command Block	Ou	tput	Re	giste	ers			
Register	7	6	5	4	3	2	1	0
Data	-	-	-	-	-	-	-	-
Feature	-	-	-	-	-	-	-	-
Sector Count	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	٧	٧	V	V	V	V	٧	V
Cylinder Low	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head	1	L	1	ם	Τ	Τ	Н	Τ
Command	0	0	1	0	0	0	0	R

Command Blo	ck I	npu	t Re	gis	ters			
Register	7	6	5	4	3	2	1	0
Data	-	-	-	-	•	•	•	•
Error			8	See E	3elo	W		
Sector Count	٧	٧	٧	٧	٧	٧	٧	>
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head	-	-	-	-	Н	Н	Н	Н
Status			8	See I	3elo	w		

		Er	ror Re	giste	r		
7	6	5	4	3	2	1	0
CRC	UNC	0	IDN	0	ABT	TON	AMN
0	V	0	V	0	V	0	0

		Status Register										
7	6	5	4	3	2	1	0					
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	V	-	0	-	V					

Table 150 Read Verify Sector(s) Command (40h/41h)

The Read Verify Sector(s) verifies one or more sectors on the device. No data is transferred to the host.

The difference between Read Sector(s) command and Read Verify Sector(s) command is whether the data is transferred to the host or not.

If an uncorrectable error occurs, the read verify will be terminated at the failing sector.

Output Parameters To The Device

Sector Count The number of continuous sectors to be verified. If zero is specified, then 256 sectors will

be verified.

Sector Number The sector number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 8 – 15 (Low), 16 – 23 (High). (L=1)

H The head number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 24 - 27. (L=1)

R The retry bit, but this bit is ignored.

Input Parameters From The Device

Sector Count The number of requested sectors not verified. This will be zero, unless an unrecoverable

error occurs.

Sector Number The sector number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 8 – 15 (Low), 16 – 23 (High). (L=1)

H The head number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 24 – 27. (L=1)

11.32 Read Verify Sector(s) Ext (42h)

Command Block	Output Reg	giste	ers							
Register		7	6	5	4	3	2	1	0	
Data Low		-	•	-	-	-	-	-	-	
Data High		-	-	-	-	-	-	-	-	
Feature Current		-	-	-	-	-	-	-	-	
reature	Previous	-	ı	-	-	-	-	-	-	
Contar Count	Current	٧	٧	٧	٧	٧	٧	٧	٧	
Sector Count	Previous	٧	٧	٧	٧	٧	٧	٧	٧	
Sector Number	Current	٧	٧	٧	٧	٧	٧	٧	٧	
Sector Number	Previous	٧	٧	٧	٧	٧	٧	٧	٧	
Cylinder Low	Current	٧	>	٧	٧	٧	٧	٧	V	
Cylinder Low	Previous	٧	٧	٧	٧	٧	٧	٧	V	
Cylinder High	Current	٧	٧	٧	٧	٧	٧	٧	٧	
Cylinder High	Previous	٧	٧	٧	٧	٧	٧	٧	٧	
Device/Head		1	1	1	D	-	-			
Command		0	0	1	0	0	0	1	0	

Command Bloc	k Input R	egis	ters	;					
Register		7	6	5	4	3	2	1	0
Data Low		-	•	•	•	•	•	•	-
Data High		-	•	-	•	•	•	•	•
Error				8	See E	Belov	N		
Costor Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-		-
Sector Number	HOB=0	٧	٧	٧	٧	٧	V	٧	٧
Sector Number	HOB=1	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Lew	HOB=0	٧	٧	٧	٧	٧	V	٧	٧
Cylinder Low	HOB=1	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	HOB=1 V V V V V V V V V							٧	
Device/Head		-	-	-	-	-	-	-	-
Status				8	See E	3elo\	N		

			Error R	egister			
7	6	5	4	3	2	1	0
CRC	UNC	0	IDN	0	ABT	TON	AMN
0	V	0	V	0	V	0	0

		S	tatus F	Registe	r		
7	6	5	4	3	2	1	0
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR
0	V	0	V	•	0	ı	V

Table 151 Read Verify Sector(s) Ext Command (42h)

The Read Verify Sector(s) Ext verifies one or more sectors on the device. No data is transferred to the host.

The difference between the Read Sector(s) Ext command and the Read Verify Sector(s) Ext command is whether the data is transferred to the host or not.

If an uncorrectable error occurs, the Read Verify Sector(s) Ext will be terminated at the failing sector.

Output Parameters To The Device

Sector Count Current The number of continuous sectors to be verified low order, bits (7:0).

Sector Count Previous The number of continuous sectors to be verified high order, bits (15:8). If zero is

specified in the Sector Count register, then 65,536 sectors will be verified.

Sector Number CurrentLBA (7:0).Sector Number PreviousLBA (31:24)Cylinder Low CurrentLBA (15:8).Cylinder Low PreviousLBA (39:32).Cylinder High CurrentLBA (23:16).Cylinder High PreviousLBA (47:40).

Input Parameters From The Device

Sector Number (HOB=0)

LBA (7:0) of the address of the first unrecoverable error.

LBA (31:24) of the address of the first unrecoverable error.

LBA (31:24) of the address of the first unrecoverable error.

LBA (15:8) of the address of the first unrecoverable error.

LBA (39:32) of the address of the first unrecoverable error.

LBA (23:16) of the address of the first unrecoverable error.

LBA (47:40) of the address of the first unrecoverable error.

LBA (47:40) of the address of the first unrecoverable error.

11.33 Recalibrate (1xh)

Command Block C	utp	ut R	egi	ster	s			
Register	7	6	5	4	3	2	1	0
Data	-	-		-		-	-	-
Feature	-	-	-	-	-	-	-	-
Sector Count	-	-	-	-	-	-	-	-
Sector Number	-	-	-	-	-	-	-	-
Cylinder Low	-	-	-	-	-	-	-	-
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	1	-	1	D	-	-	-	-
Command	0	0	0	1	-	-	-	-

Command Bloc	k In	put	Reg	gist	ers			
Register	7	6	5	4	ფ	2	1	0
Data	ı	ı	•	1	•	-	•	•
Error	See Below							
Sector Count	-	-	-	-	-	-	-	-
Sector Number	-	1	•	-	•	-	•	-
Cylinder Low	•	•	•	•	•	-	•	•
Cylinder High	-	1	•	-	•	-	•	-
Device/Head	-	-	-	-	-	-	-	-
Status		•	S	ee E	3elo	w	•	

	Error Register									
7	7 6 5 4 3 2 1 0									
CRC	UNC	0	IDN	0	ABT	TON	AMN			
0	0	0	0	0	V	V	0			

		St	atus F	Regist	er			
7 6 5 4 3 2 1 0								
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR	
0	V	0	V	-	0	-	V	

Table 152 Recalibrate Command (1xh)

The Recalibrate command moves the read/write heads from anywhere on the disk to cylinder 0. If the device cannot reach cylinder 0, ToN (Track 0 Not Found) will be set in the Error Register.

11.34 Request Sense Data Ext (0Bh)

Command Block Output Registers									
Register	7	6	5	4	3	2	1	0	
Data Low		-	-	-	-	-	-	-	
Data High		-	-	-	-	-	-	-	
Feature	Current	-	-	-	-	-	-	-	-
reature	Previous	-	-	•	•	·	•	•	-
Sector Count	Current	-	-	-	1	1	1	ı	-
Sector Count	Previous	-	-	-	-	1	-	•	
Sector Number	Current	-	-	-	-	1	-	•	
Sector Number	Previous	-	-	-	-	ı	ı	ı	1
Cylinder Low	Current	-	-	-	-	1	-	•	
Cylinder Low	Previous	-	-	-	1	ı	•	ı	-
Cylinder High	Current	-	-	-	-	1	-	•	
Cylinder High	Previous	-	-	-	-	-	-	-	
Device/Head		1	1	1	D	-	-	-	-
Command		0	0	0	0	1	0	1	1

Command Block	(Input Re	giste	ers						
Register		7 6 5 4 3 2 1						0	
Data Low		-	-	-	-	-	-	-	-
Data High		-	-	-	-	-	-	-	-
Error				S	ee I	Belo	w		
Sactor Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
Sector Number	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	HOB=1	-	-	-	-	-	-	-	1
Cylinder Low	HOB=0	٧	V	V	٧	V	V	V	٧
Cylinder Low	HOB=1	1	ı	ı	1	ı	ı	ı	ı
Cylinder High	HOB=0	-	-	-	-	٧	٧	٧	٧
Cylinder High	HOB=1	-	-	-	-	-	-	-	-
Device/Head		-	-	-	-	-	-	-	•
Status				S	ee I	Belo	w		

			Error R	egister			
7	7 6 5 4 3 2 1 6					0	
CRC	UNC	0	IDN	0	ABT	TON	AMN
0	0	0	0	0	V	0	0

		S	Status F	Registe	r			
7 6 5 4 3 2 1 0								
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR	
0	V	0	-	-	0	V	V	

Table 153 Request Sense Data Ext command (0Bh)

The Request Sense Data Ext command allows the reporting of the most recent sense data from the device.

When sense data is available, the sense key (K), additional sense code (C), and additional sense code qualifier (Q) fields are set to values that are defined in the SPC-4 standard.

Otherwise, the sense key, additional sense code, and additional sense code qualifier are cleared to zero.

The default reporting for the Sense Data Reporting feature set is invalid

The Request Sense Data Ext command returns the KCQ of the last command execution result and the KCQ information is deleted after command execution.

If another command is executed before the Request Sense Data Ext command, the KCQ information will be overwritten by the command.

Sense data reporting feature and NCQ Autosense feature are independent features.

The KCQ are cleared after:

- a) Receiving any reset;
- Acceptance of a command other than Request Sense Data Ext command that does not read the NCQ Command Error log; or
- c) Completion of a Request Sense Data Ext command.

If the Request Sense Data Ext command is executed before the Read Log Ext, page 10h command, the Sense Data will be invalid and the contents of Read Log Ext, page 10h is not guaranteed

About Status Register bit 1(Sense Data Available)

The Sense Data Available bit shall be set to one if:

- a) IDENTIFY DEVICE data word 119 bit 6 is set to one:
- b) IDENTIFY DEVICE data word 120 bit 6 is set to one; and
- c) Device has sense data to report after processing any command.

The Error bit and the Sense Data Available may both be set to one. Bit 1 of the Status Register is obsolete if:

- a) IDENTIFY DEVICE data word 119 bit 6 is cleared to zero; or b) IDENTIFY DEVICE data word 120 bit 6 is cleared to zero.

Input Parameters From The	Input Parameters From The Device							
Sector Number (HOB=0) Additional Sense Code Qualifier (Bit 7:0)								
Cylinder Low (HOB=0)	Additional Sense Code (Bit 15:8)							
Cylinder High (HOB=0)	Sense Key (Bit 19:16)							

11.35 Sanitize Device Feature Set (B4h)

11.35.1 Crypto Scramble Ext Command (feature: 0011h) (data encryption model only)

Command Block Output Registers									
Register		7 6 5 4 3 2 1							0
Data Low		-	-	-	-	-	-	-	-
Data High		-	-	-	-	-	-	-	-
Facture	Current	0	0	0	1	0	0	0	1
Feature	Previous	0	0	0	0	0	0	0	0
Sector Count	Current	-	-	-	٧	-	-	-	-
Sector Count	Previous	-	-	-	-	•	•	•	•
Sector Number	Current	0	1	1	1	0	0	0	0
Sector Number	Previous	0	1	0	0	0	0	1	1
Cylinder Lew	Current	0	1	1	1	1	0	0	1
Cylinder Low	Previous	-	-	-	-	-	-	-	-
Culin don Himb	Current	0	1	1	1	0	0	1	0
Cylinder High	Previous	-	-	-	-	-	-	-	-
Device/Head		1	1	1	D	-	-	-	-
Command		1	0	1	1	0	1	0	1

Command Bloc	k Input Re	gist	ers						
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	-
Data High		-	-	-	-	-	-	-	
Error		See Below							
Contar Count	HOB=0	-	-	-	-	-	-	-	
Sector Count	HOB=1	V	V	V	-	-	-	-	-
Sector Number	HOB=0	٧	٧	٧	٧	٧	٧	٧	<
Sector Number	HOB=1	-	ı	-	-	-	-	-	-
Cylinder Low	HOB=0	٧	٧	٧	٧	٧	٧	٧	<
Cylinder Low	HOB=1	-	-	-	-	-	-	-	-
Cylinder High	HOB=0	-	-	-	-	-	-	-	-
Cylinder High	HOB=1	-	-	-	-	-	-	-	-
Device/Head		-	-	-	-	-	-	-	
Status				Se	е В	elov	٧		

	Error Register									
7	6	5	4	3	2	1	0			
CRC	UNC	0	IDN	0	ABT	TON	AMN			
V	Vs	0	V	0	V	0	0			

	Status Register										
7 6 5 4 3 2 1							0				
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR				
0	V	0	V	-	0	-	V				

Table 154 Crypto Scramble Ext Command (B4h/0011h) (data encryption model only)

The CRYPTO SCRAMBLE EXT command is only supported by data encryption model.

The CRYPTO SCRAMBLE EXT command starts a crypto scramble operation (i.e., a sanitize operation that changes the internal encryption keys that are used for user data) causing the user data to become irretrievable.

After a successful crypto scramble operation, the contents of the user data area may be indeterminate.

The CRYPTO SCRAMBLE EXT command only is processed if:

- a) the Sanitize Device feature set is supported
- b) the device is in the SD0: Sanitize Idle state, the SD3: Sanitize Operation Failed state, or the SD4: Sanitize Operation Succeeded state.

Output Parameters To The Device

Sector Count Current bit 4

The FAILURE MODE

- 1: the device may exit the SD3: Sanitize Operation Failed state with successful processing of a SANITIZE STATUS EXT command.
- 0: the SD3: Sanitize Operation Failed state returns command aborted for sanitize operations with the FAILURE MODE bit set to one until the device returns to the SD1: Sanitize Idle state.

Input Parameters From The Device

Sector Count Current bit 15

Sanitize Operation Completed Without Error.

- 1: the Sanitize Device state machine enters SD4: Sanitize Operation Succeeded.
- 0: the Sanitize Device state machine enters SD2: Sanitize Operation. The value of this bit is maintained across power-on resets.

Sector Count Current bit 14 Sanitize operation in progress

Sector Count Current bit 13 Device is in the SD1: Sanitize Frozen state Cylinder Low (HOB=0) The Sanitize Progress Indication (15:8).

Progress indicator for the current sanitizes operation when the Sanitize Device state machine is in the SD2: Sanitize Operation state. This value is FFFFh if the

Sanitize Device state machine is not in the

SD2: Sanitize Operation state (i.e., a sanitize operation is not in process). The returned value is a numerator that has 65536 (10000h) as its denominator.

Sector Number (HOB=0) The Sanitize Progress Indication (7:0). Ditto.

Error Output

The ABORT bit is set to one if a SANITIZE DEVICE FREEZE LOCK EXT command has successfully completed since the last power-on reset.

The device returns command aborted if:

a) the device is in the SD3:Sanitize Operation Failed state

b) the completed sanitize command (i.e., CRYPTO SCRAMBLE EXT, or OVERWRITE EXT) specified the FAILURE MODE bit cleared to zero; and

c) a CRYPTO SCRAMPLE EXT command with the FAILURE MODE bit set to one is received.

Sector Number (HOB=0) Sanitize Device Error (7:0)

00h Reason not reported

01h Sanitize Command Unsuccessful. The sanitize operation completed with physical sectors that are available to be allocated for user data that were not successfully sanitized.

02h Invalid or unsupported Sanitize Device Feature Field Value

03h Device is in the Sanitize Frozen state

04h..FFh Reserved

11.35.2 Overwrite Ext Command (feature: 0014h)

Command Bloo	k Output R	egis	ters	1					
Register	7	6	5	4	3	2	1	0	
Data Low		-	-	-	-	-	-	-	-
Data High		-	-	-	-	-	-	-	-
Feature	Current	0	0	0	1	0	1	0	0
reature	Previous	0	0	0	0	0	0	0	0
Sector Count	Current	٧	-	-	٧	٧	٧	٧	٧
Sector Count	Previous	-	-	-	-	-	-	-	-
Sector Number	Current	٧	٧	٧	٧	V	V	٧	٧
Sector Number	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	Current	٧	٧	٧	٧	>	>	٧	>
Cyllinder Low	Previous	0	1	0	1	0	1	1	1
Cylinder High	Current	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	Previous	0	1	0	0	1	1	1	1
Device/Head		1	1	1	D	-	-	-	-
Command		1	0	1	1	0	1	0	1

Command Bloc	k Input R	egis	ters						
Register		7	6	5	4	3	2	1	0
Data Low	-	-	-	-	-	-	-	-	
Data High		-	-	-	-	-	-	-	-
Error				Se	е В	elov	v		
Coator Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	V	V	V	-	-	-	-	-
Sector Number	HOB=0	٧	٧	V	٧	٧	٧	٧	٧
Sector Number	HOB=1	-	•	•	•	•	•	•	-
Cylinder Low	HOB=0	٧	>	>	>	>	>	>	٧
Cylinder Low	HOB=1	-	ı	ı	•	•	•	•	-
Cylinder High	HOB=0	-	-	-	•	-	•	-	-
Cylinder High	HOB=1	-	-	-	-	-	-	-	-
Device/Head		-	-	-	-	-	-	-	-
Status	statusSee Below								

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
V	Vs	0	V	0	V	0	0					

	Status Register											
7	6	5	4	3	2	1	0					
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	V	-	0	-	V					

Table 155 Overwrite Ext Command (B4h/0014h)

The OVERWRITE EXT command starts an overwrite operation (i.e., a sanitize operation on the internal media that stores user data) which fills the user data area with a four byte pattern specified in the LBA field of the command. Parameters for the OVERWRITE EXT command include a count for multiple overwrites and the option to invert the four byte pattern between consecutive overwrite passes.

After the overwrite operation has been successfully applied, affected data blocks are readable without error.

- The OVERWRITE EXT command only is processed if:
 - a) the Sanitize Device feature set is supported
 b) the device is in the SD0: Sanitize Idle state, the SD3: Sanitize Operation Failed state, or the SD4: Sanitize Operation Succeeded state.

Output Parameters To The Device

Sector Count Current bit 7 Invert pattern between overwrite operations

Sector Count Current bit 4 The FAILURE MODE

- 1: the device may exit the SD3: Sanitize Operation Failed state with successful processing of a SANITIZE STATUS EXT command.
- 0: the SD3: Sanitize Operation Failed state returns command aborted for sanitize operations with the FAILURE MODE bit set to one until the device returns to the SD1: Sanitize Idle state.

Sector Count Current bit 3:0 OVERWRITE OPERATION COUNT

This specifies how many write operations occur in the overwrite operation. A

count of zero requests sixteen write operations.

Sector Number Previous

OVERWRITE PATTERN (31:24)

The OVERWRITE PATTERN specifies a DWord pattern to be written across

each physical sector affected by this command.

Cylinder High Current OVERWRITE PATTERN (23:16). Ditto.

Cylinder Low Current OVERWRITE PATTERN (15:8). Ditto.

Sector Number Current OVERWRITE PATTERN (7:0). Ditto.

Input Parameters From The Device

Sector Count Current bit 15 Sanitize Operation Completed Without Error.

1: the Sanitize Device state machine enters SD4: Sanitize Operation

Succeeded.

0: the Sanitize Device state machine enters SD2: Sanitize Operation. The value

of this bit is maintained across power-on resets.

Sector Count Current bit 14 Sanitize operation in progress

Sector Count Current bit 13 Device is in the SD1: Sanitize Frozen state Cylinder Low (HOB=0) The Sanitize Progress Indication (15:8).

Progress indicator for the current sanitizes operation when the Sanitize Device state machine is in the SD2: Sanitize Operation state. This value is FFFFh if

the Sanitize Device state machine is not in the

SD2: Sanitize Operation state (i.e., a sanitize operation is not in process). The returned value is a numerator that has 65536 (10000h) as its denominator.

Sector Number (HOB=0) The Sanitize Progress Indication (7:0). Ditto.

Error Output

The ABORT bit is set to one if a SANITIZE DEVICE FREEZE LOCK EXT command has successfully completed since the last power-on reset.

The device returns command aborted if:

a) the device is in the SD3:Sanitize Operation Failed state

b) the completed sanitize command (i.e., CRYPTO SCRAMBLE EXT (data encryption model only), or OVERWRITE EXT) contained the FAILURE MODE bit cleared to zero

c) an OVERWRITE EXT command with the FAILURE MODE bit set to one is received.

Sector Number (HOB=0) Sanitize Device Error (7:0)

00h Reason not reported

01h Sanitize Command Unsuccessful. The sanitize operation completed with physical sectors that are available to be allocated for user data that were not successfully sanitized.

02h Invalid or unsupported Sanitize Device Feature Field Value

03h Device is in the Sanitize Frozen state

04h.. FFh Reserved

11.35.3 Sanitize Freeze Lock Ext Command (feature: 0020h)

Command Bloc	k Output Re	gist	ers						
Register		7	6	5	4	3	2	1	0
Data Low			-	-	1	-	-	1	-
Data High		-	-	-	-	-	-	-	-
Feature	Current	0	0	1	0	0	0	0	0
reature	Previous	0	0	0	0	0	0	0	0
Sector Count	Current	-	-	•	ı	•	•	ı	-
Sector Count	Previous	-	-	ı	ı	ı	ı	ı	-
Sector Number	Current	0	1	1	0	1	0	1	1
Sector Number	Previous	0	1	0	0	0	1	1	0
Cylinder Low	Current	0	1	0	0	1	1	0	0
Cylinder Low	Previous	-	-	-	-	-	-	-	-
Cylinder High	Current	0	1	1	1	0	0	1	0
Cylinder High	Previous	-	-	-	-	-	-	-	-
Device/Head	Device/Head		1	1	D	-	-	-	-
Command		1	0	1	1	0	1	0	1

Command Bloc	k Input Re	giste	ers						
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	-
Data High	-	-	-	-	-	-	-	-	
Error		See Below							
Coator Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	V	V	V	-	-	-	-	-
Sector Number	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	HOB=1	-	-	-	-	-	-	-	-
Cylinder Lew	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	HOB=1	-	-	-	-	-	-	-	-
Cylinder High	HOB=0	-	-	-	-	-	-	-	-
Cylinder High	HOB=1	-	-	-	-	-	-	-	-
Device/Head	Device/Head				-	-	-	-	-
Status		See Below							

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
V	Vs	0	V	0	V	0	0					

Status Register											
7	6	5	4	3	2	1	0				
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR				
0	V	0	V	-	0	-	V				

Table 156 Sanitize Freeze Lock Ext Command (B4h/0020h)

The SANITIZE FREEZE LOCK EXT command sets the Sanitize Device state machine to the SD1: Sanitize Frozen state. After command completion all sanitize commands other than SANITIZE STATUS EXT command returns command aborted. The Sanitize Device state machine transitions from the SD1: Sanitize Frozen state to the SD0: Sanitize Idle state after a power-on reset or hardware reset.

Input Parameters From The Device

Sector Count Current bit 15 Sanitize Operation Completed Without Error.

- 1: the Sanitize Device state machine enters SD4: Sanitize Operation Succeeded.
- 0: the Sanitize Device state machine enters SD2: Sanitize Operation. The value of this bit is maintained across power-on resets.

Sector Count Current bit 14 Sanitize operation in progress

Sector Count Current bit 13 Device is in the SD1: Sanitize Frozen state

Cylinder Low (HOB=0) The Sanitize Progress Indication (15:8).

Progress indicator for the current sanitizes operation when the Sanitize Device state machine is in the SD2: Sanitize Operation state. This value is FFFFh if the

Sanitize Device state machine is not in the

SD2: Sanitize Operation state (i.e., a sanitize operation is not in process). The returned value is a numerator that has 65536 (10000h) as its denominator.

Sector Number (HOB=0) The Sanitize Progress Indication (7:0). Ditto.

Error Output Sector Number (HOB=0)

Sanitize Device Error (7:0)

00h Reason not reported

01h Sanitize Command Unsuccessful. The sanitize operation completed with physical sectors that are available to be allocated for user data that were not successfully sanitized.

02h Invalid or unsupported Sanitize Device Feature Field Value

03h Device is in the Sanitize Frozen state

04h..FFh Reserved

11.35.4 Sanitize Status Ext Command (feature: 0000h)

Command Bloo	k Output F	Regi	ste	rs					
Register		7	6	5	4	3	2	1	0
Data Low			-	-	-	-	-	-	
Data High			-	-	-	-	-	-	-
Feature	Current	0	0	0	0	0	0	0	0
realule	Previous	0	0	0	0	0	0	0	0
Contar Count	Current	-	-	-	-	-	-	-	٧
Sector Count	Previous	•	-	-	-	-	-	-	
Sector Number	Current	-	-	-	-	-	-	-	-
Sector Number	Previous		-	-	-	-	-	-	
Cylinder Low	Current	-	•	•	ı	•	•	•	-
Cylinder Low	Previous	•	•	1	ı	•	•	1	•
Cylinder High	Current	•	-	-	-	-	-	-	
Cylinder High	Previous	-	•	•	ı	•			-
Device/Head	·	1	1	1	D	-	. - -		-
Command		1 0 1 1 0 1 0			0	1			

Command Bloc	k Input R	egis	ster	S					
Register	r 7					3	2	1	0
Data Low		-	-	-	-	-	-	-	-
Data High		-	-	-	-	-	-	-	-
Error				.Se	e B	elov	N		
Contain Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	٧	٧	٧	-	-	-	-	-
Sector Number	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	HOB=1	-	-		-	-	-	-	-
Cylinder Lew	HOB=0	٧	٧	٧	٧	٧	٧	>	٧
Cylinder Low	HOB=1	•	•	•	-	-	-	-	-
Cylinder High	HOB=0	•	•	•	-	-	-	-	-
Cylinder High	HOB=1	1	1	•	-	-	-	ı	-
Device/Head							-		
Status		See Below							

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
V	Vs	0	V	0	V	0	0					

		St	tatus F	Regist	er		
7	6	5	4	3	2	1	0
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR
0	V	0	V	-	0	-	V

Table 157 Sanitize Status Ext Command (B4h/0000h)

The SANITIZE STATUS EXT command returns information about current or previously completed sanitizes operations. This includes:

- a) progress indication on a current sanitize operation
- b) whether a previous sanitize operation completed successfully or unsuccessfully
- c) if an unsupported sanitize device command was received.

The SANITIZE STATUS EXT command is valid in every state of the Sanitize Device state machine.

Output Parameters To The Device

Sector Count Current bit 0

CLEAR SANITIZE OPERATION FAILED

- If Sanitize Device state machine is in the SD3: Sanitize Failed state:
- a) the FAILURE MODE bit was set to one in the Sanitize Device command that caused the sanitize operation
- b) the sanitize operation failed
- c) the CLEAR SANITIZE OPERATION FAILED bit is set to one in the SANITIZE STATUS EXT command then the Sanitize Device state machine transitions to the SD0: Sanitize Idle state.

If the CLEAR SANITIZE OPERATION FAILED bit is set to one in the SANITIZE STATUS EXT command, and the FAILURE MODE bit was set to zero in the Sanitize Device command that caused the sanitize operation, the SANITIZE STATUS EXT command returns command aborted.

Input Parameters From The Device

Sector Count Current bit 15 Sanitize Operation Completed Without Error.

1: the Sanitize Device state machine enters SD4: Sanitize Operation Succeeded.

0: the Sanitize Device state machine enters SD2: Sanitize Operation. The value $\,$

of this bit is maintained across power-on resets.

Sector Count Current bit 14 Sanitize operation in progress

Sector Count Current bit 13 Device is in the SD1: Sanitize Frozen state Cylinder Low (HOB=0) The Sanitize Progress Indication (15:8).

Progress indicator for the current sanitizes operation when the Sanitize Device state machine is in the SD2: Sanitize Operation state. This value is FFFFh if

the Sanitize Device state machine is not in the

SD2: Sanitize Operation state (i.e., a sanitize operation is not in process). The returned value is a numerator that has 65536 (10000h) as its denominator.

Sector Number (HOB=0) The Sanitize Progress Indication (7:0). Ditto.

Error Output

After the sanitize operation has completed, if any physical sector that is available to be allocated for user data was not successfully sanitized, then this command returns the ABORT bit set to one.

Sector Number (HOB=0) Sanitize Device Error (7:0)

00h Reason not reported

01h Sanitize Command Unsuccessful. The sanitize operation completed with physical sectors that are available to be allocated for user data that were not successfully sanitized.

02h Invalid or unsupported Sanitize Device Feature Field Value

03h Device is in the Sanitize Frozen state

04h..FFh Reserved

11.36 Security Disable Password (F6h)

Command Block	Out	put	Re	giste	ers			
Register	7	6	5	4	3	2	1	0
Data	•	-	-	•	•	1	-	•
Feature	-	-	-	-	-		-	-
Sector Count	ı	-	-	•	•	-	•	ı
Sector Number	ı	-	-	1	1	1	•	ı
Cylinder Low	-	-	-	-	-	-	-	-
Cylinder High	-	-	-	-	-	1	-	-
Device/Head	1	-	1	D	-	-	-	-
Command	1	1	1	1	0	1	1	0

Command Bloc	Command Block Input Registers										
Register	7	6	5	4	3	2	1	0			
Data	1	ı	-	-	-	ı	1	ı			
Error	See Below										
Sector Count	-	-	-	-	-	-	-	•			
Sector Number	-	•	-	-	-	-	-	-			
Cylinder Low	•	•	-	-	-	•	•	ı			
Cylinder High	-	-	-	-	-	-	-	-			
Device/Head	-	-	-	-	-	-	-	-			
Status		See Below									

	Error Register												
7	7 6 5 4 3 2 1 0												
CRC	UNC	0	IDN	0	ABT	TON	AMN						
0	0	0	0	0	V	0	0						

	Status Register												
7	7 6 5 4 3 2 1 0												
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR						
0	0 V 0 V - 0 - V												

Table 158 Security Disable Password Command (F6h)

The Security Disable Password command disables the security mode feature (device lock function).

The Security Disable Password command requests a transfer of a single sector of data from the host including information specified in Table 152 on the page 198. Then the device checks the transferred password. If the User Password or Master Password matches the given password, the device disables the security mode feature (device lock function). This command does not change the Master Password which may be re-activated later by setting User Password. This command should be executed in device unlock mode.

When security is disabled and the Identifier bit is set to User, then the device shall return command aborted.

Word	Description	า						
00	Control wor	Control word						
	bit 0	: Identifier (1-Master, 0-User)						
	bit 1-15	: Reserved						
01-16	Password	(32 bytes)						
17-255	Reserved							

Table 159 Password Information for Security Disable Password command

The device will compare the password sent from this host with that specified in the control word.

Identifier

Zero indicates that the device should check the supplied password against the user password stored internally. One indicates that the device should check the given password against the master password stored internally.

11.37 Security Erase Prepare (F3h)

Command Block Output Registers											
Register	7	6	5	4	3	2	1	0			
Data	-	-	-		•	•	•	•			
Feature	-	-	-	-	-	-	-	-			
Sector Count	-	-	-	•	•	•	•	•			
Sector Number	-	-	-	-	•	-	•	•			
Cylinder Low	-	-	-	•	•	•	•	•			
Cylinder High	-	-	-	-	•	-	•	•			
Device/Head	1	-	1	D	-	-	-	-			
Command	1	1	1	1	0	0	1	1			

Command Block Input Registers													
Register	7	6	5	4	3	2	1	0					
Data	•	•	•	•	•	•	•	•					
Error		See Below											
Sector Count	•	•	•	•	•	•	•	ı					
Sector Number	-	•	•	-	-	-	-	1					
Cylinder Low	•	•	•	•	•	•	•	ı					
Cylinder High	-	-	-	-	-	-	-	-					
Device/Head	-	-	-	-	-	-	-	-					
Status			S	ee E	3elo	W	See Below						

	Error Register											
7	7 6 5 4 3 2 1 0											
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	0	0	V	0	0					

	Status Register												
7 6 5 4 3 2 1 0													
BSY RDY DF DSC DRQ COR IDX ERF													
0	0 V 0 V - 0 - V												

Table 160 Security Erase Prepare Command (F3h)

The Security Erase Prepare Command must be issued immediately before the Security Erase Unit Command to enable device erasing and unlocking.

The Security Erase Prepare Command must be issued immediately before the Format Unit Command. This command is to prevent accidental erasure of the device.

This command does not request to transfer data.

11.38 Security Erase Unit (F4h)

Command Block O	Command Block Output Registers										
Register	7	6	5	4	3	2	1	0			
Data	-	-	•	-	•	•	•	1			
Feature	-	-	-	-	-	-	-				
Sector Count	-	-	•	•	•	•	•	•			
Sector Number	-	-	-	-	-		-	-			
Cylinder Low	•	-	•	•	•	-	•	•			
Cylinder High	-	-	•	-	-		•	-			
Device/Head	1	-	1	D	-	-	-	-			
Command	1	1	1	1	0	1	0	0			

Command Bloc	Command Block Input Registers											
Register	7	6	5	4	ფ	2	1	0				
Data	•	•	•	•	•	•	•	•				
Error	See Below											
Sector Count	•	ı	•	•	•	•	•	•				
Sector Number	-	-	-	-	-	-	-	-				
Cylinder Low	-	-	-	-	-	-	-	-				
Cylinder High	-	1	•	-	-	-	-	-				
Device/Head	-	-	-	-	-	-	-	-				
Status	See Below											

Error Register												
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	V	0	V	0	0					

	Status Register												
7	6	5	4	3	2	1	0						
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR						
0	V	0	V	-	0	1	V						

Table 161 Security Erase Unit Command (F4h)

The Security Erase Unit command initializes all user data sectors, and then disables the device lock function.

Note that the Security Erase Unit command initializes from LBA 0 to Native MAX LBA. Host MAX LBA set by Initialize Drive Parameter, Device Configuration Overlay, or Set MAX Address command is ignored. So the protected area by Set MAX Address command is also initialized.

This command requests to transfer a single sector data from the host including information specified in Table 161 on the page 211.

When security is disabled and the Identifier bit is set to User, then the device shall return command aborted.

If the password does not match, then the device rejects the command with an Aborted error.

Word	Description	1
00	Control word	d
	bit 0	: Identifier (1-Master, 0-User)
	bit 1	: Erase mode (1- Enhanced, 0- Normal)
		Enhanced mode is not supported
	bit 2-15	: Reserved
01-16	Password	(32 bytes)
17-255	Reserved	

Table 162 Erase Unit Information

Identifier

Zero indicates that the device should check the supplied password against the user password stored internally. One indicates that the device should check the given password against the master password stored internally.

The Security Erase Unit command erases all user data and disables the security mode feature (device lock function). So after completing this command, all user data will be initialized to zero with write operation. At this time, it is not verified with read operation whether the sector of data is initialized correctly. Also, the defective sector information and the reassigned sector information for the device are not updated. The security erase prepare command should be completed immediately prior to the Security Erase Unit command. If the device receives a Security Erase Unit command without a prior Security Erase Prepare command, the device aborts the security erase unit command.

This command disables the security mode feature (device lock function), however the master password is still stored internally within the device and may be re-activated later when a new user password is set. If you execute this command on disabling the security mode feature (device lock function), the password sent by the host is NOT

compared with the	e password	stored in	the dev	ice fo	r both	the	Master	Password	and th	ne Use	r Password,	and then
the device only er	ases all use	r data.										

The execution time of this command is set in word 89 of Identify device information.

11.39 Security Freeze Lock (F5h)

Command Block Output Registers										
Register										
Data	ı	-	ı	•	·	ı	ı	ı		
Feature	•	-		-	-	-	-	1		
Sector Count	•	-	•	•	•	•	•	•		
Sector Number	1	-	•	•	•	1	1	ı		
Cylinder Low	1	-	•	•	1	1	1	ı		
Cylinder High	-	-	-	-	-	-	-	-		
Device/Head	1	-	1	D	-	-	-	-		
Command	1	1	1	1	0	1	0	1		

Command Block Input Registers										
Register	7 6 5 4 3 2 1 0									
Data	•	•	-	•	•	-	•	•		
Error	See Below									
Sector Count										
Sector Number	-	1	-	-	-	-	-	-		
Cylinder Low	•	ı	-	•	•	-	•	•		
Cylinder High	-	-	-	-	-	-	-	-		
Device/Head										
Status			S	ee E	3elo	W				

Error Register										
7	6	5	4	3	2	1	0			
CRC	UNC	0	IDN	0	ABT	TON	AMN			
0	0	0	0	0	V	0	0			

	Status Register											
7	7 6 5 4 3 2 1 0											
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	-	-	0	-	V					

Table 163 Security Freeze Lock Command (F5h)

The Security Freeze Lock Command allows the device to enter frozen mode immediately.

After this command is completed, the command which updates Security Mode Feature (Device Lock Function) is rejected.

Frozen mode is quit only by Power off.

The following commands are rejected when the device is in frozen mode. For detail, refer to Table 33 and Table 34 on the page 60-61.

- Security Set Password
- Security Unlock
- Security Disable Password
- Security Erase Unit

11.40 Security Set Password (F1h)

Command Block Output Registers											
Register	7	6	5	4	3	2	1	0			
Data	-	-	•	•	•	•	•	1			
Feature	-	-	-	-	-	-	-				
Sector Count	-	-	-	-	-	-	•	-			
Sector Number	-	-	-	-	•	•	-				
Cylinder Low	-	-	-	-	-	-	-	-			
Cylinder High	-	-	-	-	•	•	-	•			
Device/Head	1	-	1	D	-	-	-	-			
Command	1	1	1	1	0	0	0	1			

Command Block Input Registers									
Register	7 6 5 4 3 2 1 0								
Data	•								
Error		See Below							
Sector Count	-								
Sector Number	-	-	-	-	-	-	-	-	
Cylinder Low	•	ı	•	•	-	•	•	ı	
Cylinder High	-	•	-	1	-	-	•	ı	
Device/Head									
Status			S	ee E	3elo	w			

	Error Register										
7	7 6 5 4 3 2 1 0										
CRC	UNC	0	IDN	0	ABT	TON	AMN				
0	0	0	0	0	V	0	0				

	Status Register											
7	7 6 5 4 3 2 1 0											
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	-	-	0	ı	V					

Table 164 Security Set Password Command (F1h)

The Security Set Password command enables security mode feature (device lock function), and sets the master password or the user password.

The security mode feature (device lock function) is enabled by this command, and the device is not locked immediately. The device is locked after next power on reset. When the MASTER password is set by this command, the master password is registered internally, but the device is NOT locked after next power on reset or hard reset.

This command requests a transfer of a single sector of data from the host including the information specified in Table 164 on the page 214.

The data transferred controls the function of this command.

Word	Description	on
00	Control wo	ord
	bit 0	: Identifier (1-Master, 0-User)
	bit 1-7	: Reserved
	bit 8	: Security level (1-Maximum, 0-High)
	bit 9-15	: Reserved
01-16	Password	(32 byte)
17	Master Pa	ssword Revision Code (valid if Word 0 bit 0 = 1)
18-255	Reserved	

Table 165 Security Set Password Information

Identifier Zero indicates that the device regards Password as User Password. One indicates

that device regards Password as Master Password.

Security Level Zero indicates High level, one indicates Maximum level. If the host sets High level and the

password is forgotten, then the Master Password can be used to unlock the device. If the host sets Maximum level and the user password is forgotten, only a Security Erase Prepare/Security

Unit command can unlock the device and all data will be lost.

Password The text of the password – all 32 bytes are always significant.

Master Password The revision code field is returned in the IDENTIFY DEVICE word 92.

Revision Code The valid revision codes are 0001h through FFFEh. The device accepts the command with a

value of 0000h or FFFFh in this field, but does not change Master Password Revision code.

The setting of the Identifier and Security level bits interact as follows.

Identifier=User / Security level = High

The password supplied with the command will be saved as the new user password. The security mode feature (lock function) will be enabled from the next power on. The file may then be unlocked by either the user password or the previously set master password.

Identifier=Master / Security level = High

This combination will set a master password but will NOT enable the security mode feature (lock function).

Identifier=User / Security level = Maximum

The password supplied with the command will be saved as the new user password. The security mode feature (lock function) will be enabled from the next power on. The file may then be unlocked by only the user password. The master password previously set is still stored in the file but may NOT be used to unlock the device.

Identifier=Master / Security level = Maximum

This combination will set a master password but will NOT enable the security mode feature (lock function).

11.41 Security Unlock (F2h)

Command Block Output Registers										
Register	7	6	5	4	3	2	1	0		
Data	-	-	-	-	-	-	1	-		
Feature	-	-	-	-	-	-	-	-		
Sector Count	-	-	-	-	-	-	•	-		
Sector Number	•	-	-	•	-	-	ı	-		
Cylinder Low	ı	-	-	ı	-	-	ı	ı		
Cylinder High	-	-	-	•	-	-	ı	-		
Device/Head	1	-	1	D	-	-	-	-		
Command	1	1	1	1	0	0	1	0		

Command Block Input Registers								
Register	7	6	5	4	3	2	1	0
Data	1	1	•	•	•	•	•	1
Error			S	ee E	3elo	w		
Sector Count	•	•	•	•	•	•	•	1
Sector Number	•	•	·	·	·	·	·	ı
Cylinder Low	1	1	•	•	•	•	•	ı
Cylinder High	1	1	•	•	•	•	•	1
Device/Head	-	-	-	-	-	-	-	-
Status			S	ee E	Belo	W		

Error Register							
7	6	5	4	3	2	1	0
CRC	UNC	0	IDN	0	ABT	TON	AMN
0	V	0	0	0	V	0	0

Status Register							
7	6	5	4	3	2	1	0
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR
0	V	0	-	-	0	-	V

Table 166 Security Unlock Command (F2h)

This command unlocks the password and causes the device to enter device unlock mode. If power on reset or hard reset is done without executing the Security Disable Password command after this command is completed, the device will be in device lock mode. The password has not been changed yet.

The Security Unlock command requests to transfer a single sector of data from the host including information specified in Table 166 on the page 216.

If the Identifier bit is set to master and the file is in high security mode then the password supplied will be compared with the stored master password. If the file is in maximum security mode then the security unlock will be rejected.

If the Identifier bit is set to user, then the file compares the supplied password with the stored user password.

If the password compare fails, then the device returns an abort error to the host and decrements the unlock attempt counter. This counter is initially set to 5 and is decremented for each password mismatch.

When security is disabled and the Identifier bit is set to User, then the device shall return command aborted.

When this counter reaches zero then all password protected commands are rejected until a hard reset or a power off.

Word	Description	1
00	Control wor	d
	bit 0	: Identifier (1-Master, 0-User)
	bit 1-15	: Reserved
01-16	Password	(32 bytes)
17-255	Reserved	

Table 167 Security Unlock Information

Identifier Zero indicates that device regards Password as User Password. One indicates that device regards Password as Master Password.

The user can detect if the attempt to unlock the device has failed due to a mismatched password as this is the only reason that an abort error will be returned by the file AFTER the password information has been sent to the device. If an abort error is returned by the device BEFORE the password data has been sent to the file then another problem exists.

11.42 Seek (7xh)

Command Block	Command Block Output Registers											
Register	7	6	5	4	3	2	1	0				
Data	-	-	-	•	1	•	•	•				
Feature	-	-	-	-	-							
Sector Count	-	-	-	-	-	-	-	-				
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧				
Cylinder Low	٧	٧	٧	٧	٧	>	>	>				
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧				
Device/Head	1	Ĺ	1	D	Τ	Η	Η	Η				
Command	0	1	1	1	-	-	-	-				

Command Bloc	k In	put	Reg	jiste	rs			
Register	egister 7 6 5 4 3						1	0
Data	-	-	-	-	-	-	-	-
ErrorSee Below								
Sector Count	-	-	-	-	-	-	-	-
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	٧	٧	٧	٧	V	٧	٧	٧
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head	-	-	-	-	Н	Н	Н	Н
Status	See Below							

		Е	rror R	egiste	∍r		
7	6	5	4	3	2	1	0
CRC	UNC	0	IDN	0	ABT	TON	AMN
0	0	0	V	0	V	0	0

	Status Register											
7	6	5	4	3	2	1	0					
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0 V 0 V - 0 - V												

Table 168 Seek Command (7xh)

The Seek command initiates a seek to the designated track and selects the designated head. The device need not be formatted for a seek to execute properly.

Output Parameters To The Device

Sector Number In LBA mode, this register specifies LBA address bits 0 – 7 for seek. (L=1)

Cylinder High/Low The cylinder number of the seek.

In LBA mode, this register specifies LBA address bits 8 – 15 (Low), 16 – 23 (High) for seek.

(L=1)

H The head number of the seek.

In LBA mode, this register specifies LBA address bits 24 – 27 for seek. (L=1)

Input Parameters From The Device

Sector Number In LBA mode, this register contains current LBA bits 0 – 7. (L=1)

Cylinder High/Low In LBA mode, this register contains current LBA bits 8 – 15 (Low), 16 – 23 (High). (L=1)

H In LBA mode, this register contains current LBA bits 24 – 27. (L=1)

11.43 Sense Condition (F0h: Vendor specific)

Command Block	Command Block Output Registers										
Register	7	6	5	4	3	2	1	0			
Data	-	-	1	1	1	•	1	1			
Feature	0	0	0	0	0	0	0	1			
Sector Count	-	-	•	•	-	-	-	•			
Sector Number	-	-	-	•	•	•	•	•			
Cylinder Low	-	-	•	•	•	•	•	ı			
Cylinder High	-	-	-	-	-	-	-	-			
Device/Head	-	-	-	-	-	-	-	-			
Command	1	1	1	1	0	0	0	0			

Command Bloc	k In	put	Reg	jiste	ers				
Register	7	6	5	4	3	2	1	0	
Data	-	-	•		-	-	-	-	
Error			S	ee E	3elo	W			
Sector Count	٧	٧	٧	٧	٧	V	٧	٧	
Sector Number	-	-		•	-	-	-	-	
Cylinder Low	-	-	•	•	-	-	-	-	
Cylinder High	-	-	•		-	-	-	-	
Device/Head	-	-	-	-	-	-	-	-	
Status		See Below							

	Error Register										
7	6	5	4	3	2	1	0				
CRC	UNC	0	IDN	0	ABT	TON	AMN				
0	0	0	0	0	V	0	0				

	Status Register											
7	6	5	4	3	2	1	0					
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
V	V	V	-	V	-	0	V					

Table 169 Sense Condition command(F0h)

The Sense Condition command is used to sense temperature in a device.

This command is executable even if a device is in Power up in standby mode.

Output Parameters To The Device

Feature

The Feature register must be set to 01h. All other value is rejected with setting ABORT bit in status register.

Input Parameters From The Device

Sector Count

The Sector Count register contains result value.

Value Description

00h Temperature is equal to or lower than -20 deg C

01h-FEh Temperature is (Value / 2 - 20) deg C

FFh Temperature is higher than 107 deg C

11.44 Set Features (EFh)

Command Bloc	k Oı	utpu	ıt Re	egis	ters	1		
Register	7	6	5	4	3	2	1	0
Data	-	•	-	-		-	•	1
Feature	٧	٧	٧	٧	٧	٧	٧	٧
Sector Count	Note							
Sector Number	-	-	-	-	-	-	-	•
Cylinder Low	-	-	-	-	-	-	-	•
Cylinder High	-	•	-	-		-	•	1
Device/Head	1	-	1	D	-	-	-	-
Command	1	1	1	0	1	1	1	1

Command Blo	ck I	npu	ıt Re	egis	ters	5		
Register	7	6	5	4	3	2	1	0
Data	-	-	-	1	-		•	1
Error	See Below							
Sector Count								
Sector			_	_		_	_	
Number								
Cylinder Low	-	-	-	•	•		•	•
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	-	-	-	-	-	-	-	-
Status	See Below							

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	0	0	V	0	0					

	Status Register											
7	6	5	4	3	2	1	0					
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	-	-	0	-	V					

Table 170 Set Features Command (EFh)

The Set Feature command is to establish the following parameters which affect the execution of certain features as shown in below table.

ABT will be set to 1 in the Error Register if the Feature register contains any undefined values.

Output Parameters To The Device

Featur	e Destination code for this command
02H	Enable write cache
03H	Set transfer mode based on value in sector count register
05H	Enable Advanced Power Management
06H	Enable Power-up in Standby feature set
07H	Power-Up In Standby feature set device spin-up
10H	Enable use of Serial ATA feature
43H	Set Maximum Host Interface Sector Time
4Ah	Extended Power Conditions
55H	Disable read look-ahead feature
66H	Disable reverting to power on defaults
82H	Disable write cache
85H	Disable Advanced Power Management
86H	Disable Power-up in Standby mode
90H	Disable use of Serial ATA feature
AAH	Enable read look-ahead feature
CCH	Enable reverting to power on defaults
Note	After power on reset or hard reset, the device is set to the following

Note. After power on reset or hard reset, the device is set to the following features as default.

Write cache : Enable
Read look-ahead : Enable
Reverting to power on defaults : Disable
Release interrupt : Disable

11.44.1 Set Transfer Mode

When Feature register is 03h (=Set Transfer Mode), the Sector Count Register specifies the transfer mechanism. The upper 5 bits define the type of transfer and the low order 3 bits encode the mode value.

PIO Default Transfer Mode	00000	000	
PIO Default Transfer Mode	00000	001	
Disable IORDY			
PIO Flow Control Transfer Mode x	00001	nnn	(nnn=000,001,010,011,100)
Multiword DMA mode x	00100	nnn	(nnn=000,001,010)
Ultra DMA mode x	01000	nnn	(nnn=000,001,010,011,100,101,110)

11.44.2 Write Cache

If the number of auto reassigned sector reaches the device's reassignment capacity, the write cache function will be automatically disabled. Although the device still accepts the Set Features command with Feature register = 02h without error, but the write cache function will remains disabled. For current write cache function status, please refer to Identify Device Information (word 85 or 129) by Identify Device command.

11.44.3 Serial ATA Feature

When the Feature register is set to 10h or 90h, the value set to the Sector Count register specifies the specific Serial ATA feature to enable or disable.

Sector Count Value	Description
01h	Non-zero buffer offset in DMA Setup FIS
02h	DMA Setup FIS Auto-Activate optimization
03h	Device-initiated interface power state transitions
04h	Guaranteed In-Order Data Delivery
06h	Software Settings Preservation

11.44.4 Advanced Power Management

When the value in the Feature register is 05h (=Enable Advanced Power Management), the Sector Count Register specifies the Advanced Power Management level.

FFh --- Aborted

C0 – FEh --- The deepest power saving mode is Idle mode

(the same as Disable Advanced Power Management)

80 – BFh --- The deepest power saving mode is Low power Idle mode

01 – 7Fh --- The deepest power saving mode is Low RPM Idle mode

00h --- Aborted

The idle time to Low power idle mode and Low RPM idle mode vary according to the value in Sector Count register as follows:

When Low power idle mode is the deepest power saving mode,

```
Y_1=(x-80h) * 5+120 [sec] (120<= Y_1<=435)
```

 $Y_2=N/A$ (the device does not go to Low RPM idle mode)

When Low RPM idle mode is the deepest power saving mode and the value in Sector Count register is between 40h and 7Fh.

```
120<=Y_1<=435 [sec] (default: 120 [sec])

Y_2=(x-40h) * 60 + 600[sec] (600<=Y_2<=4380)
```

When Low RPM idle mode is the deepest power saving mode and the value in Sector Count register is between 01h and 3Fh.

```
120<=Y_1<=435 [sec] (default: 120 [sec])
Y_2=600 [sec]
```

Where x is the value in Sector Count register, y_1 is the idle time to Low Power Idle mode, and y_2 is the idle time to Low RPM idle mode.

If Low power idle mode has already been enabled (i.e., y_1 has been set) before Low RPM idle mode is enabled, y_1 is preserved. If Low power idle mode is disabled (i.e., y_1 has not been set yet), y_1 becomes 120[sec] when Low RPM idle mode is enabled.

Enabled power saving mode and idle time (y_1 and y_2) are preserved until Advanced Power Management is disabled, the deepest power saving mode becomes Idle mode, or new time is set. They are initialized with a hard/soft reset unless Reverting to power on defaults is disabled and the device receives a soft reset.

11.44.5 Set Maximum Host Interface Sector Time

Sector Count Typical PIO Mode Host Interface Sector Time (7:0)

LBA Low Typical PIO Mode Host Interface Sector Time (15:8)

LBA Mid Typical DMA Mode Host Interface Sector Time (7:0)

LBA High Typical DMA Mode Host Interface Sector Time (15:8)

Subcommand code 43h allows the host to inform the device of a host interface rate limitation. The typical Host Interface Sector Times have the same units as Identify Device word 96 for DMA and word 104 for PIO. A value of zero indicates that the host interface shall be capable of transferring data at the maximum rate allowed by the selected transfer mode. The Typical PIO Mode Host Interface Sector Time includes the host's interrupt service time.

11.44.6 Extended Power Conditions (EPC) feature

11.44.6.1 Restore Power Condition Settings subcommand

Command Block	Command Block Output Registers											
Register	7	6	5	4	3	2	1	0				
Data	-	-	-	-	-	-	-					
Feature	0	1	0	0	1	0	1	0				
Sector Count	٧	٧	٧	٧	٧	٧	٧	>				
Sector Number	-	٧	-	٧	0	0	0	0				
Cylinder Low	-	-	-	-	-	-	-	1				
Cylinder High	-	-	-	-	-	•	-	•				
Device/Head	1	-	1	D	-	-	-	-				
Command	1	1	1	0	1	1	1	1				

Command Block Input Registers											
Register	7	6	5	4	3	2	1	0			
Data	-	-	-	-	-	-	-	-			
Error	See Below										
Sector Count	-	-	-	-	-	-	-	-			
Sector Number	-	-	-	-	1	-	-	-			
Cylinder Low	-	-	-	-	-	•	•	-			
Cylinder High	-	-	-	-	-	-	-	-			
Device/Head	-	-	-	-		-	-	-			
Status			S	ee E	3elo	w		·			

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	0	0	V	0	0					

	Status Register												
7 6 5 4 3 2 1 0													
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR						
0	V	0	-	-	0	-	V						

Table 171 Restore Power Condition Settings subcommand

On successful completion of this EPC subcommand, the device updates the Power Conditions log for the selected Power Condition ID as follows:

- 1) if Default is set to one, then:
 - A) copy the Default Timer Settings field to the Current Timer Settings field; and
 - B) copy the Default Timer Enabled field to the Current Timer Enabled field;
- 2) if Default is cleared to zero, then:
 - A) copy the Saved Timer Settings field to the Current Timer Settings field; and
 - B) copy the Saved Timer Enabled field to the Current Timer Enabled field;

and

- 3) if Save is set to one and the power condition is savable, then:
 - A) copy the Current Timer Settings field to the Saved Timer Settings field;

Output Parameters To The Device

Sector Count Power Condition ID (See Table 69)

Sector Number

- bit Description
- 7 Reserved
- **6** Default
 - 1 Restore from Default settings
 - 0 Restore from Saved settings
- 5 Reserved
- 4 Save
 - 1 Save settings on completion
 - 0 Do not save settings on completion
- 3-0 Oh Restore Power Condition subcommand (See Table 68)

Error Output

If any selected Power Condition is not supported, or is not changeable, or if Extended Power Condition feature set is disable, or if Save is set to one and any selected power condition is not savable, then the device returns command aborted .

11.44.6.2 Go To Power Condition subcommand

Command Block	(Ou	tpu	t Re	gist	ers			
Register	7	6	5	4	3	2	1	0
Data	-	-	-	-	-	-	•	
Feature	0	1	0	0	1	0	1	0
Sector Count	٧	٧	٧	٧	٧	٧	>	>
Sector Number	-	-	-	-	0	0	0	1
Cylinder Low	-	-	-	-	-	-	-	1
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	1	-	1	D	-	-		ı
Command	1	1	1	0	1	1	1	1

Command Block Input Registers										
Register	7	6	5	4	3	2	1	0		
Data							-			
Error	See Below									
Sector Count	•	•	•	•	•	•	-	1		
Sector Number	-	-				-	•	1		
Cylinder Low	•	•	•	•	•	•	-	1		
Cylinder High	-	-				-	•	1		
Device/Head	-	-	-	-	-	-	-	-		
Status			S	ee E	3elo	w				

	Error Register											
7	6 5 4 3 2 1 0											
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	0	0	V	0	0					

	Status Register												
7	6	5	4	3	2	1	0						
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR						
0	V	0	-	-	0	-	V						

Table 172 Go To Power Condition subcommand

On successful completion of this EPC subcommand, the device:

- 1) stops all enabled EPC timers;
- 2) enters the selected EPC power condition after command completion of the SET FEATURES command without having to wait for any timers to expire; and
- 3) the device remains in the selected power condition until the device processes the next command or reset.

Output Parameters To The Device

Sector Count Power Condition ID (See Table 69)

Sector Number bit Description

7-4 Reserved

3-0 1h Go To Power Condition subcommand (See Table 68)

Error Output

If the Power condition ID is FFh, a reserved value, or is not supported, or if Extended Power Condition feature set is disable, then the device returns command aborted .

11.44.6.3 Set Power Condition Timer subcommand

Command Block	Command Block Output Registers											
Register	7	6	5	4	3	2	1	0				
Data	•	-	1	1	-	-	-	-				
Feature	0	1	0	0	1	0	1	0				
Sector Count	٧	٧	>	٧	٧	٧	٧	٧				
Sector Number	٧	-	٧	٧	0	0	1	0				
Cylinder Low	٧	٧	>	٧	٧	٧	٧	٧				
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧				
Device/Head	1	-	1	ם	-	-	-	-				
Command	1	1	1	0	1	1	1	1				

Command Bloc	k In	put	Re	gist	ers				
Register	7	6	5	4	ფ	2	1	0	
Data	-	-	-	-	-	-	-	-	
Error	See Below								
Sector Count									
Sector Number	-	1	-	-	-	-	-	1	
Cylinder Low	•	1	-	-	-	-	-	ı	
Cylinder High	-	-	-	-	-	-	-	-	
Device/Head	-		-	-	-	-	-		
Status		See Below							

	Error Register											
7	7 6 5 4 3 2 1 0											
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	0	0	V	0	0					

	Status Register												
7	7 6 5 4 3 2 1 0												
BS	Υ	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0		V	0	-	-	0	-	V					

Table 173 Set Power Condition Timer subcommand

On successful completion of this EPC subcommand, the device updates the Power Conditions log for the selected and supported Power Condition as follows:

- 1) copy the Timer field to the Current Timer Settings field;
- 2) if Enable is set to one and the Timer field is non-zero, then enable the Current Timer;
- 3) if Enable is set to one and the Timer field is zero, then disable the Current Timer;
- 4) if Enable is cleared to zero, then disable the Current Timer; and
- 5) if Save is set to one and the Power Condition settings are savable, then:
 - A) copy the Current Timer Settings field to the Saved Timer Settings field; and
 - B) copy the Current Timer Enabled field to the Saved Timer Enabled field.

Output Parameters To The Device

Sector Count Power Condition ID (See Table 69)

Sector Number bit Description

7 Timer Units

If the Timer Units bit is cleared to zero, then the Timer (Cylinder High and Cylinder Low bit 15-0) are specified in units of 100 milliseconds. If the Timer Units bit is set to one, then the Timer (Cylinder High and Cylinder Low bit 15-0) are specified in units of 1 minute.

- 6 Reserved
- 5 Enable
 - 1 Enable the selected power condition
 - **0** Disable the selected power condition
- 4 Save
 - 1 Save settings on completion
 - **0** Do not save settings on completion
- 3-0 2h Set Power Condition Timer subcommand (See Table 68)

Cylinder Low Cylinder High

15-0 If the new timer value is greater than the maximum value setting, then the device set the value to the maximum setting. If the new timer value is less than the minimum setting, then the device set the value to the minimum setting. (Cylinder High and Cylinder Low bit 15-0)

Error Output

The device returns command aborted If:

- a) the new timer value is:
 - A) less than the maximum setting.
 - B) greater than the minimum setting.
 - C) not supported by the device.
- b) the Extended Power Condition feature set is disabling.
- c) the power condition is not changeable or not supported.
- d) the Save bit is set to one and the selected power condition is not savable.
- e) the new time value is greater than the maximum setting and the device did not set the timer to the maximum setting.
- f) the new time value is less than the minimum setting and the device did not set the timer to the minimum setting.

If command aborted is returned, then the device makes no modifications to the power condition settings.

Maximum Setting is 3BFFC4h (100ms unit). Minimum Setting is zero.

11.44.6.4 Set Power Condition State subcommand

Command Block (Outp	ut R	egis	sters	;			
Register	7	6	5	4	3	2	1	0
Data	-	-	-	-	-	-	-	-
Feature	0	1	0	0	1	0	1	0
Sector Count	٧	٧	٧	٧	>	٧	٧	>
Sector Number	-	-	٧	٧	0	0	1	1
Cylinder Low	-	-	-	-		-	-	-
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	1	-	1	D	-	-	-	-
Command	1	1	1	0	1	1	1	1

Command Bloc	k In	put	Reg	giste	ers					
Register	7 6 5 4 3 2 1 0									
Data	-	-	-	-	-	-	-	1		
Error	See Below									
Sector Count										
Sector Number	•	1	-	-	-	-	-	1		
Cylinder Low	-	1	-	-	-	-	-	-		
Cylinder High	1	ı	-	1	ı	-	1	1		
Device/Head								1		
Status			S	ee E	3elo	w				

	Error Register											
7	7 6 5 4 3 2 1 0											
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	0	0	V	0	0					

	Status Register												
7 6 5 4 3 2 1 0													
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR						
0	V	0	-	-	0	-	V						

Table 174 Set Power Condition State subcommand

On successful completion of this EPC subcommand, the device updates the Power Conditions log for the Power Condition as follows:

- 1) If the Enable bit is set to one, then enable the Current Timer; otherwise disable the Current Timer; and
- 2) If the Save bit is set to one, then copy the Current Timer Enabled field to the Saved Timer Enabled field.

Output Parameters To The Device

Sector Count Power Condition ID (See Table 69)

Sector Number bit Description

7-6 Reserved

- 5 Enable
 - 1 Enable the selected power condition
 - **0** Disable the selected power condition
- 4 Save
 - 1 Save settings on completion
 - **0** Do not save settings on completion
- 3-0 3h Set Power Condition State subcommand (See Table 68)

Error Output

If the Power Condition is not changeable, or not supported, or if Extended Power Conditions feature set is disabling, then the device returns command aborted. If the Save bit is set to one and the selected power condition is not savable, then the device returns command aborted. If command aborted is returned, then the device makes no modifications to the power condition settings.

11.44.6.5 Enable the EPC feature subcommand

Command Block	Ou	tpu	t Re	gist	ers			
Register	7	6	5	4	3	2	1	0
Data	-	-	-	-	-	-	-	-
Feature	0	1	0	0	1	0	1	0
Sector Count	-	•	•	-	•	•	•	•
Sector Number	-	1	•	•	0	1	0	0
Cylinder Low	-	ı	1	•	1	1	1	1
Cylinder High	-	1	•	•	1	•	1	•
Device/Head	1	•	1	D	-	•	-	•
Command	1	1	1	0	1	1	1	1

Command Bloc	Command Block Input Registers										
Register	7 6 5 4 3 2 1 0										
Data	-	-	-	-	-	-	-				
Error			S	ee E	3elo	W					
Sector Count											
Sector Number	•	1	-	•	-	-	-				
Cylinder Low	-	1	-	•	-	-	•	-			
Cylinder High	•	1	-	•	-	-	-				
Device/Head											
Status	See Below										

	Error Register											
7	7 6 5 4 3 2 1 0											
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	0	0	V	0	0					

	Status Register												
7 6 5 4 3 2 1 0													
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR						
0	V	0	-	-	0	-	V						

Table 175 Enable the EPC feature subcommand

On successful completion of this EPC subcommand, the device:

- a) enables the EPC feature set;
- b) sets IDENITFY DEVICE data word 120 bit 7 to one; and
- c) disables the APM feature set.
- d) if the Saved Timer Setting field is cleared to zero, then: copy the value of the Default Timer Setting to the Current Timer Setting; and
- e) if the Saved Timer Setting field is non-zero, then: copy the value of the Saved Timer Setting to the Current Timer Setting; and
- f) if the Current Timer Setting field is non-zero and the Current Timer Enabled is set to one, then initialize and start the timer.

If the EPC feature set is enabled, then the EPC feature set remains enabled across all resets (i.e., power-on reset, hardware reset, and software reset).

Output Parameters To The Device

Sector Number bit Description

7-4 Reserved

3-0 4h Enable the EPC feature subcommand (See Table 68)

Error Output

If the Extended Power Condition feature set is not supported then the device returns command aborted.

11.44.6.6 Disable the EPC feature subcommand

Command Block	Ou	tpu	Re	gist	ers			
Register	7	6	5	4	3	2	1	0
Data	-	-	-	-	-	-	-	-
Feature	0	1	0	0	1	0	1	0
Sector Count	-	-	•	-	-	•	•	1
Sector Number	-	-	•	1	0	1	0	1
Cylinder Low	-	•	1	1	1	1	1	ı
Cylinder High	-	-	•	-	-	•	•	1
Device/Head	1	-	1	D	-	-	-	
Command	1	1	1	0	1	1	1	1

Command Block Input Registers								
Register	7	6	5	4	3	2	1	0
Data	-	-	-	-	-	-	-	-
Error	See Below							
Sector Count	-	-	-	•	-	-	-	-
Sector Number	-	1	-	-	-	-	•	•
Cylinder Low	-	-	-	•	-	-	-	-
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	-	-	-	-	-	-	-	-
Status			S	ee E	3elo	w		

	Error Register									
7	6	5	4	3	2	1	0			
CRC	UNC	0	IDN	0	ABT	TON	AMN			
0	0	0	0	0	V	0	0			

	Status Register								
7	6	5	4	3	2	1	0		
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR		
0	V	0	-	-	0	-	V		

Table 176 Disable the EPC feature subcommand

On successful completion of this EPC subcommand, the device:

- a) stop all EPC timers
- b) disables the EPC feature set; and
- c) clears IDENITFY DEVICE data word 120 bit 7 to zero.

If the EPC feature set is disabled, then the EPC feature set remains disabled across all resets (i.e., power-on reset, hardware reset, and software reset).

Output Parameters To The Device

Sector Number bit Description

7-4 Reserved

3-0 5h Disable the EPC feature subcommand (See Table 68)

Error Output

If the Extended Power Condition feature set is disabling, not supported then the device returns command aborted.

11.45 Set Max Address (F9h)

Command Block Output Registers								
Register	7	6	5	4	3	2	1	0
Data	-	1	•	•	•	1	•	•
Feature	٧	٧	٧	٧	٧	٧	٧	٧
Sector Count	-	-	-	-	-	-	-	В
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	٧	>	٧	٧	٧	٧	>	٧
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head	1	L	1	D	Н	Н	Н	Н
Command	1	1	1	1	1	0	0	1

Command Block Input Registers								
Register	7	6	5	4	3	2	1	0
Data	1	-	1	-	1	1	1	ı
Error		See Below						
Sector Count	•	-	•	-	•	•	•	•
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	>	٧	>	٧	>	٧	٧	>
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head	-	-	-	-	Н	Н	Н	Н
Status		•	8	See I	3elo	w	•	

	Error Register									
7	6	5	4	3	2	1	0			
CRC	UNC	0	IDN	0	ABT	TON	AMN			
0	0	0	0	0	V	0	0			

	Status Register								
7	6	5	4	3	2	1	0		
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR		
0	V	0	-	-	0	1	V		

Table 177 Set Max ADDRESS (F9h)

The device regards as Set Max Address command, if this command is immediately preceded by a Read Native Max Address command. The device receives this command without a prior Read Native Max Address command, the device regards as Set Max security extensions command according to feature register value. Valid features values are as follows:

- 1. 01h indicates Set Max Set Password command
- 2. 02h indicates Set Max Lock command
- 3. 03h indicates Set Max Unlock command
- 4. 04h indicates Set Max Freeze LOCK command

This command overwrites the maximum number of Address of HDD in a range of actual device capacity. Once device receives this command, all accesses beyond that Address are rejected with setting ABORT bit in status register. Identify device command returns the Address which is set via this command as a default value.

Device returns command aborted for a second non-volatile Set Max Address command until next power on or hardware reset.

Device returns command aborted during Set Max Locked mode or Set Max Frozen mode.

After a successful command completion, Identify Device response words (61:60) shall reflect the maximum address set with this command.

If the 48-bit Address feature set is supported, the value placed in Identify Device response words (103:100) shall be the same as the value placed in words (61:60). However, if the device contains greater than 268,435,455 sectors, the capacity addressable with 28-bit commands, and the address requested is 268,435,455, the max address shall be changed to the native maximum address, the value placed in words (61:60) shall be 268,435,455 and the value placed in words (103:100) shall be the native maximum address.

If a host protected area has been established by a Set Max Address Ext command, the device shall return command aborted.

Output Parameters To The Device

B Option bit for selection whether nonvolatile or volatile. B=0 is volatile condition. When B=1,

MAX Address which is set by Set Max Address command is preserved by POR. When B=0, MAX Address which is set by Set Max Address command will be lost by POR. B=1 is not

valid when the device is in Address Offset mode.

Sector Number In LBA mode, this register contains LBA bits 0 – 7 which is to be input.(L=1)

In CHS mode, this register is ignored. (L=0)

Cylinder High/Low In LBA mode, this register contains LBA bits 8 – 15 (Low), 16 – 23 (High) which is to be set.

(L=1)

In CHS mode, this register contains cylinder number which is to be set.(L=0)

In LBA mode, this register contains LBA bits 24 – 27 which is to be set.(L=1)

In CHS mode, this register is ignored. (L=0)

Input Parameters From The Device

Н

Sector Number In LBA mode, this register contains max LBA bits 0 – 7 which is set.(L=1)

In CHS mode, this register contains max sector number (= 63). (L=0)

Cylinder High/Low In LBA mode, this register contains max LBA bits 8 – 15 (Low), 16 – 23 (High) which is set.

(L=1)

In CHS mode, this register contains max cylinder number which is set. (L=0)

H In LBA mode, this register contains max LBA bits 24 – 27 which is set. (L=1)

In CHS mode, this register contains max head number.(L=0)

11.45.1 Set Max Set Password (Feature = 01h)

Command Block Output Registers								
Register	7	6	5	4	ფ	2	1	0
Data	-	-	-	•	•	•	•	•
Feature	0	0	0	0	0	0	0	1
Sector Count	-	-	-	-	-	-	-	-
Sector Number	-	-	-	-	•	-	-	•
Cylinder Low	-	-	-	•	•	•	•	•
Cylinder High	-	-	-	-	•	-	-	1
Device/Head	1	-	1	D	-	-	-	
Command	1	1	1	1	1	0	0	1

Command Block Input Registers								
Register	7	6	5	4	3	2	1	0
Data	-	-	-	•	-	-	-	ı
Error			S	ee E	3elo	W		
Sector Count	-	-	-	-	-	-	-	-
Sector Number	-	-	-	-	-	-	-	•
Cylinder Low	-	-	-	•	-	-	-	•
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	1	-	1	D	-	-	-	
Status		•	S	ee E	Belo	w		

	Error Register									
7	6	5	4	3	2	1	0			
CRC	UNC	0	IDN	0	ABT	TON	AMN			
0	0	0	0	0	V	0	0			

	Status Register									
7	6	5	4	3	2	1	0			
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR			
0	V	0	-	-	0	1	V			

Table 178 Set Max set Password

The device regards as Set Max Address command, if this command is immediately preceded by a Read Native Max Address command.

This command requests a transfer of a single sector of data from the host including the information specified in Table 178.

The password is retained by the device until the next power cycle. When the device accepts this command the device is in Set_Max_Unlocked state.

Word	Description
0	Reserved
01-16	Password (32 byte)
17-255	Reserved

Table 179 Set Max Set Password data contents

11.45.2 Set Max Lock (Feature = 02h)

Command Block Output Registers										
Register	7	6	5	4	3	2	1	0		
Data	-	-	-	-	-	-	-	-		
Feature	0	0	0	0	0	0	1	0		
Sector Count	-	-	-	-	•	-	-	-		
Sector Number	-	-	-	-	-	-	-	-		
Cylinder Low	-	-	-	-	-	-	-	-		
Cylinder High	-	-	-	-	-	-	-	-		
Device/Head	1	-	1	D	-	-	-	-		
Command	1	1	1	1	1	0	0	1		

Command Bloc	k In	put	Reg	giste	ers			
Register	7	6	5	4	ფ	2	1	0
Data	-	-	-	-	-	-	-	-
Error		See Below						
Sector Count	•	ı	•		•	1	•	1
Sector Number	-	-	-	-	-	-	-	-
Cylinder Low	-	-	-	-	-	-	-	-
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	1	-	1	D	-	-	-	-
Status			S	ee E	3elo	W		

	Error Register													
7 6 5 4 3 2 1 0														
CRC	UNC	0	IDN	0	ABT	TON	AMN							
0	0	0	0	0	V	0	0							

	Status Register												
7 6 5 4 3 2 1 0													
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR						
0 V 0 0 - V													

Table 180 Set Max Lock

The device regards as Set Max Address command, if this command is immediately preceded by a Read Native Max Address command.

This command sets the device into Set_Max_Locked state. After this command is completed any other Set Max commands except Set Max Unlock and Set Max Freeze Lock are rejected. The device remains in this state until a power cycle or the acceptance of a Set Max Unlock or Set Max Freeze Lock command.

11.45.3 Set Max Unlock (Feature = 03h)

Command Block	Out	tput	Re	giste	ers			
Register	7	6	5	4	3	2	1	0
Data	-	-	-	-	1	-	-	-
Feature	0	0	0	0	0	0	1	1
Sector Count	-	-	-	-	1	-	-	1
Sector Number	-	-	-	-	-	-	-	-
Cylinder Low	-	-	-	-	-	-	-	-
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	1	-	1	Δ	•	-	•	•
Command	1	1	1	1	1	0	0	1

Command Bloc	k In	put	Re	giste	ers			
Register	7	6	5	4	ფ	2	1	0
Data	-	-	-	-	-	-	-	-
Error	See Below							
Sector Count	•	-	-	-	-	•	•	-
Sector Number	-	-	-	-	-	-	-	-
Cylinder Low	•	-	-	-	-	•	•	1
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	1	•	1	D	•	•	-	-
Status		See Below						

	Error Register													
7	7 6 5 4 3 2 1 0													
CRC	UNC	0	IDN	0	ABT	TON	AMN							
0	0	0	0	0	V	0	0							

	Status Register													
7 6 5 4 3 2 1 0														
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR							
0	V	0	-	-	0	-	V							

Table 181 Set Max Unlock (F9h)

The device regards as Set Max Address command, if this command is immediately preceded by a Read Native Max Address command.

This command requests a transfer of a single sector of data from the host including the information specified in Table 178 on the page 231 with the stored SET MAX password.

If the password compare fails then the device returns an abort error to the host and decrements the unlock attempt counter. This counter is initially set to 5 and is decremented for each password mismatch. When this counter reaches zero then all Set Max Unlock commands are rejected until a hard reset or a power off.

If the password compares matches, then the device set the Set_Max_Unlocked state and all Set Max commands shall be accepted.

11.45.4 Set Max Freeze Lock (Feature = 04h)

Command Block	Out	tput	Re	giste	ers			
Register	7	6	5	4	3	2	1	0
Data	-	-	-	•	1	-	-	1
Feature	0	0	0	0	0	1	0	0
Sector Count	-	-	-	•	•	-	-	•
Sector Number	-	-	•	•	ı	-	•	ı
Cylinder Low	-	-	-		-	-	-	-
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	1	-	1	D	-	-	-	-
Command	1	1	1	1	1	0	0	1

Command Bloc	k In	put	Re	giste	ers			
Register	7	6	5	4	3	2	1	0
Data	•	1	-	-	-	•	•	-
Error		See Below						
Sector Count	•	•	-		-	•	•	-
Sector Number	•	ı	-		•	•	•	•
Cylinder Low	•	1	-	-	-	•	•	-
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	1	-	1	D	•	•	-	-
Status		See Below						

	Error Register													
7	7 6 5 4 3 2 1 0													
CRC	UNC	0	IDN	0	ABT	TON	AMN							
0	0	0	0	0	V	0	0							

Status Register													
7 6 5 4 3 2 1 0													
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR						
0	V	0	-	-	0	-	V						

Table 182 Set Max Freeze Lock (F9h)

The device regards as Set Max Address command, if this command is immediately preceded by a Read Native Max Address command.

The Set Max Freeze Lock command sets the device to Set_Max_Frozen state. After command completion any subsequent Set Max commands are rejected. Commands disabled by Set Max Freeze Lock are:

- 1. Set Max Address
- 2. Set Max Set PASSWORD
- 3. Set Max Lock
- 4. Set Max Unlock

11.46 Set Max Address Ext (37h)

Command Block Output Registers											
Register	7	6	5	4	3	2	1	0			
Data Low	-	ı	ı	ı	1	ı	ı	-			
Data High	-	ı	ı	ı	1	ı	ı	-			
Feature	Current	-	ı	ı	ı	1	ı	ı	-		
realure	Previous	-	•	•	•	-	•	•			
Sector Count	Current	-	1	1	ı	-	ı	ı	В		
Sector Count	Previous	-	-	-	-	-	-	-			
Sector Number	Current	٧	٧	٧	٧	٧	٧	٧	٧		
Sector Number	Previous	٧	٧	٧	٧	٧	٧	٧	٧		
Cylinder Lew	Current	٧	٧	٧	٧	٧	٧	٧	٧		
Cylinder Low	Previous	٧	٧	٧	٧	٧	٧	٧	٧		
Codinada a Ulimb	Current	٧	V	V	V	٧	٧	٧	٧		
Cylinder High	٧	٧	٧	V	٧	٧	٧	٧			
Device/Head	-	1	-	D	-	-	-	-			
Command		0	0	1	1	0	1	1	1		

Command Blo	ck Input F	Regi	ster	s					
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	-
Data High	-	•	-	-	-	-	-	ı	
Error				8	See E	Belov	W		
Costor Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
Sector	HOB=0	٧	٧	٧	٧	٧	٧	٧	V
Number	HOB=1	٧	٧	٧	٧	٧	٧	٧	V
Cylinder Lew	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	HOB=1	٧	٧	٧	٧	٧	٧	٧	V
Cylinder High	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	٧	٧	٧	٧	٧	٧	٧	V	
Device/Head	-	-	-	-	-	-	-		
Status				8	See E	Belov	W		

	Error Register										
7	6	5	4	3	2	1	0				
CRC	UNC	0	IDN	0	ABT	TON	AMN				
0	0	0	0	0	V	0	0				

	Status Register											
7	6	5	4	3	2	1	0					
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	•	•	0	•	V					

Table 183 Set Max Address Ext Command (37h)

This command is immediately preceded by a Read Native Max Address Ext command.

This command overwrites the maximum number of Address of HDD in a range of actual device capacity. Once device receives this command, all accesses beyond that Address are rejected with setting ABORT bit in status register.

When the address requested is greater than 268,435,455, words (103:100) shall be modified to reflect the requested value, but words (61:60) shall not be modified. When the address requested is equal to or less than 268,435,455, words (103:100) shall be modified to reflect the requested value, and words (61:60) shall also be modified.

If this command is not supported, the maximum value to be set exceeds the capacity of the device, a host protected area has been established by a Set Max Address command, the command is not immediately preceded by a Read Native Max Address Ext command, or the device is in the Set Max Locked or Set Max Frozen state, the device shall return command aborted.

The device returns the command aborted for a second non-volatile Set Max Address Ext command until next power on or hardware reset.

Output Parameters To The Device

B Option bit for selection whether nonvolatile or volatile. B=0 is volatile condition. When

B=1, MAX Address which is set by Set Max Address Ext command is preserved by POR. When B=0, MAX Address which is set by Set Max Address Ext command will be lest by POR. B. 4 is not yellid when the device is in Address Offcet made.

be lost by POR. B=1 is not valid when the device is in Address Offset mode.

Sector Number CurrentSet Max LBA (7:0).Sector Number PreviousSet Max LBA (31:24).Cylinder Low CurrentSet Max LBA (15:8).Cylinder Low PreviousSet Max LBA (39:32).Cylinder High CurrentSet Max LBA (23:16).Cylinder High PreviousSet Max LBA (47:40).

Input Parameters From The Device

Sector Number (HOB=0)
Sector Number (HOB=1)
Cylinder Low (HOB=0)
Cylinder Low (HOB=1)
Cylinder High (HOB=0)
Cylinder High (HOB=1)
Set Max LBA (31:24).
Set Max LBA (39:32).
Set Max LBA (23:16).
Set Max LBA (47:40).

11.47 Set Multiple (C6h)

Command Block Output Registers										
Register	7	6	5	4	3	2	1	0		
Data	-	-	-	-	1	-	1	ı		
Feature	-	-	-	-		-		-		
Sector Count	٧	٧	٧	٧	>	٧	>	>		
Sector Number	-	-	-	-		-	1	1		
Cylinder Low	-	-	-	-	-	-	-	•		
Cylinder High	-	-	-	-		-	1	1		
Device/Head	1	-	1	D	-	-	-	-		
Command	1	1	0	0	0	1	1	0		

Command Block	Command Block Input Registers										
Register	7	6	5	4	3	2	1	0			
Data											
Error				See	Bel	ow.					
Sector Count											
Sector Number	-	-	-	-	-	-	-	-			
Cylinder Low	•	•	•	•	•	-	-	-			
Cylinder High	-	-	-	-	-	-	-	-			
Device/Head	-	-	-	-	-	-	-	-			
Status		See Below									

	Error Register										
7	6	5	4	3	2	1	0				
CRC	UNC	0	IDN	0	ABT	TON	AMN				
0	0	0	0	0	V	0	0				

	Status Register											
7 6 5 4 3 2 1 0												
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0 V 0 0 - V												

Table 184 Set Multiple Commands (C6h)

The Set Multiple command enables the device to perform Read and Write Multiple commands and establishes the block size for these commands. The block size is the number of sectors to be transferred for each interrupt.

If an invalid block size is specified, an Abort error will be returned to the host, and Read Multiple and Write Multiple commands will be disabled.

Output Parameters To The Device

Sector Count.

The block size to be used for Read Multiple and Write Multiple commands. Valid block sizes can be selected from 0, 1, 2, 4, 8 or 16. If 0 is specified, then Read Multiple and Write Multiple commands are disabled.

11.48 Sleep (E6h/99h)

Command Block Output Registers										
Register	7	6	5	4	3	2	1	0		
Data	ı	-	•	•	•	1	ı	-		
Feature	-	-	-	-	-	-	-	-		
Sector Count	ı	•	•		•	•	•	-		
Sector Number	1	-	•	-	-	-	-	-		
Cylinder Low	1	-	•	-	•	-	-	-		
Cylinder High	-	-	-	-	-	-	-	-		
Device/Head	1	-	1	D	-	-	-	-		
Command	1	1	1	0	0	1	1	0		

Command Block Input Registers										
Register	7	6	5	4	3	2	1	0		
Data	•	1	-	-	1	•	1	1		
Error	See Below									
Sector Count										
Sector Number		•	-	-	-		-	•		
Cylinder Low	1	ı	-	-	1	1	1	ı		
Cylinder High		•	-	-	-		-	•		
Device/Head										
Status	See Below									

	Error Register										
7	6	5	4	3	2	1	0				
CRC	UNC	0	IDN	0	ABT	TON	AMN				
0	0	0	0	0	V	0	0				

	Status Register											
7	6	5	4	3	2	1	0					
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	V	-	0	-	V					

Table 185 Sleep Command (E6h/99h)

This command causes the device to enter Sleep Mode.

The device is spun down and the interface becomes inactive. If the device is already spun down, the spin down sequence is not executed.

The only way to recover from Sleep Mode is with software reset or hardware reset.

11.49 SMART Function Set (B0h)

Command Block Output Registers								
Register	7	6	5	4	3	2	1	0
Data	-	-	•	-	ı	-	-	-
Feature	٧	٧	٧	٧	٧	٧	٧	٧
Sector Count	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	0	1	0	0	1	1	1	1
Cylinder High	1	1	0	0	0	0	1	0
Device/Head	1	-	1	D	-	-	-	-
Command	1	0	1	1	0	0	0	0

Command Block Input Registers								
Register	7	6	5	4	3	2	1	0
Data	-	ı	-	1	1	•	•	ı
Error			S	ee E	3elo	w		
Sector Count	-	-	-	-	-	-	-	-
Sector Number	-	•	-	-	•	•	-	-
Cylinder Low								
Cylinder High								
Device/Head	-	-	-	-	-	-	-	-
Status			S	ee E	3elo	W		

	Error Register						
7	6	5	4	3	2	1	0
CRC	UNC	0	IDN	0	ABT	TON	AMN
0	V	0	V	0	V	0	0

	Status Register							
7	6	5	4	3	2	1	0	
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR	
0	V	0	V	-	0	-	V	

Table 186 SMART Function Set Command (B0h)

The SMART Function Set command provides access to Attribute Values, Attribute Thresholds and other low level subcommands that can be used for logging and reporting purposes and to accommodate special user needs. The SMART Function Set command has several separate subcommands which are selectable via the device's Features Register when the SMART Function Set command is issued by the host.

11.49.1 SMART Subcommand

In order to select a subcommand the host must write the subcommand code to the device's Features Register before issuing the SMART Function Set command. The subcommands and their respective codes are listed below.

Code	Subcommand
D0h	SMART Read Attribute Values
D1h	SMART Read Attribute Thresholds
D2h	SMART Enable/Disable Attribute Autosave
D3h	SMART Save Attribute Values
D4h	SMART Execute Off-line Immediate
D5h	SMART Read Log Sector
D6h	SMART Write Log Sector
D8h	SMART Enable Operations
D9h	SMART Disable Operations
DAh	SMART Return Status
DBh	SMART Enable/Disable Automatic Off-Line

11.49.1.1 SMART Read Attribute Values (Subcommand D0h)

This subcommand returns the device's Attribute Values to the host. Upon receipt of the SMART Read Attribute Values subcommand from the host, the device saves any updated Attribute Values to the Attribute Data sectors, and then transfers the 512 bytes of Attribute Value information to the host.

11.49.1.2 SMART Read Attribute Thresholds (Subcommand D1h)

This subcommand returns the device's Attribute Thresholds to the host. Upon receipt of the SMART Read Attribute Thresholds subcommand from the host, the device reads the Attribute Thresholds from the Attribute Threshold sectors, and then transfers the 512 bytes of Attribute Thresholds information to the host.

11.49.1.3 SMART Enable/Disable Attribute Autosave (Subcommand D2h)

This subcommand Enables and Disables the Attribute Autosave feature of the device. The SMART Enable/Disable Attribute Autosave subcommand either allows the device to automatically save its updated Attribute Values to the Attribute Data Sector periodically; or this subcommand causes the Autosave feature to be disabled. The state of the Attribute Autosave feature (either enabled or disabled) will be preserved by the device across power cycle.

A value of 00h written by the host into the device's Sector Count Register before issuing the SMART Enable/Disable Attribute Autosave subcommand will cause this feature to be disabled. Disabling this feature does not preclude the device from saving Attribute Values to the Attribute Data sectors during some other normal operation such as during a power-up or power-down.

A value of F1h written by the host into the device's Sector Count Register before issuing the SMART Enable/Disable Attribute Autosave subcommand will cause this feature to be enabled. Any other non-zero value written by the host into this register before issuing the SMART Enable/Disable Attribute Autosave subcommand will not change the current Autosave status but the device will respond with the error code specified in 0.

The SMART Disable Operations subcommand disables the Autosave feature along with the device's SMART operations.

Upon the receipt of the subcommand from the host, the device asserts BSY, Enables or Disables the Autosave feature, clears BSY and asserts INTRQ.

11.49.1.4 SMART Save Attribute Values (Subcommand D3h)

This subcommand causes the device to immediately save any updated Attribute Values to the device's Attribute Data sector regardless of the state of the Attribute Autosave feature. Upon receipt of the SMART Save Attribute Values subcommand from the host, the device writes any updated Attribute Values to the Attribute Data sector.

11.49.1.5 SMART Execute Off-line Immediate (Subcommand D4h)

This subcommand causes the device to immediately initiate the set of activities that collect Attribute data in an off-line mode (off-line routine) or execute a self-test routine in either captive or off-line mode.

The Sector Number register shall be set to specify the operation to be executed.

Sector Number	Operation to be executed
0	Execute SMART off-line data collection routine immediately
1	Execute SMART Short self-test routine immediately in off-line mode
2	Execute SMART Extended self-test routine immediately in off-line mode
4	Execute SMART Selective self-test routine immediately in off-line mode
127	Abort off-line mode self-test routine
129	Execute SMART Short self-test routine immediately in captive mode
130	Execute SMART Extended self-test routine immediately in captive mode
132	Execute SMART Selective self-test routine immediately in captive mode

Off-line mode: The device executes command completion before executing the specified routine. During execution of the routine the device will not set BSY nor clear DRDY. If the device is in the process of performing its routine and is interrupted by a new command from the host, the device will abort or suspend its routine and service the host within two seconds after receipt of the new command. After servicing the interrupting command, the device will resume its routine automatically or not start its routine depending on the interrupting command.

Captive mode: When executing self-test in captive mode, the device sets BSY to one and executes the specified self-test routine after receipt of the command. At the end of the routine, the device sets the execution result in the Self-test execution status byte (0) and ATA registers as below and executes command completion.

Status Set ERR to one when self-test has failed
Error Set ABRT to one when self-test has failed
Cyl Low Set to F4h when self-test has failed
Cyl High Set to 2Ch when self-test has failed

11.49.1.6 SMART Read Log Sector (Subcommand D5h)

This command returns the specified log sector contents to the host.

The 512 bytes data are returned at a command and the Sector Count value shall be set to one. The Sector Number shall be set to specify the log sector address.

Log sector address	Content	Туре
00h	Log directory	Read Only
01h	Summary SMART Error Log	Read Only
03h	Extended Comprehensive SMART Error Log	See Note
06h	SMART Self-test Log	Read Only
07h	Extended Self-test Log	See Note
09h	Selective self-test Log	Read/Write
80h-9Fh	Host vendor specific	Read/Write

Note: Log addresses 03h and 07h are used by the Read Log Ext and Write Log Ext commands. If these log addresses are used with the SMART Read Log Sector command, the device shall return command aborted.

Table 187 Log sector addresses

11.49.1.7 SMART Write Log Sector (Subcommand D6h)

This command writes 512 bytes data to the specified log sector.

The 512 bytes data are transferred at a command and the Sector Count value shall be set to one. The Sector Number shall be set to specify the log sector address (0). If Read Only log sector is specified, the device returns ABRT error

11.49.1.8 SMART Enable Operations (Subcommand D8h)

This subcommand enables access to all SMART capabilities within the device. Prior to receipt of a SMART Enable Operations subcommand, Attribute Values are neither monitored nor saved by the device. The state of SMART (either enabled or disabled) will be preserved by the device across power cycles. Once enabled, the receipt of subsequent SMART Enable Operations subcommands will not affect any of the Attribute Values.

Upon receipt of the SMART Enable Operations subcommand from the host, the device enables SMART capabilities and functions, and then saves any updated Attribute Values to the Attribute Data sector.

11.49.1.9 SMART Disable Operations (Subcommand D9h)

This subcommand disables all SMART capabilities within the device including the device's attribute autosave feature. After receipt of this subcommand the device disables all SMART operations. Non self-preserved Attribute Values will no longer be monitored. The state of SMART (either enabled or disabled) is preserved by the device across power cycles.

Upon receipt of the SMART Disable Operations subcommand from the host, the device disables SMART capabilities and functions, and then saves any updated Attribute Values to the Attribute Data sector.

After receipt of the device of the SMART Disable Operations subcommand from the host, all other SMART subcommands – with the exception of SMART Enable Operations – are disabled, and invalid and will be aborted by the device (including the SMART Disable Operations subcommand), returning the error code as specified in 0 on the page 253.

Any Attribute Values accumulated and saved to volatile memory prior to receipt of the SMART Disable Operations command will be preserved in the device's Attribute Data Sectors. If the device is re-enabled, these Attribute Values will be updated, as needed, upon receipt of a SMART Read Attribute Values or SMART Save Attribute Values command.

11.49.1.10 SMART Return Status (Subcommand DAh)

This command is used to communicate the reliability status of the device to the host's request. Upon receipt of the SMART Return Status subcommand the device saves any updated Pre-failure type Attribute Values to the reserved sector and compares the updated Attribute Values to the Attribute Thresholds.

If the device does not detect a Threshold Exceeded Condition, the device loads 4Fh into the Cylinder Low register, C2h into the Cylinder High register.

If the device detects a Threshold Exceeded Condition, the device loads F4h into the Cylinder Low register, 2Ch into the Cylinder High register.

11.49.1.11 SMART Enable/Disable Automatic Off-Line (Subcommand DBh)

This subcommand enables and disables the optional feature that causes the device to perform the set of off-line data collection activities that automatically collect attribute data in an off-line mode and then save this data to the device's non-volatile memory. This subcommand may either cause the device to automatically initiate or resume performance of its off-line data collection activities or cause the automatic off-line data collection feature to be disabled.

A value of zero written by the host into the device's Sector Count Register before issuing this subcommand shall cause the feature to be disabled. Disabling this feature does not preclude the device from saving attribute values to non-volatile memory during some other normal operation such as during a power-on or power-off sequence or during an error recovery sequence.

A value of F8h written by the host into the device's Sector Count Register before issuing this subcommand shall cause this feature to be enabled. Any other non-zero value written by the host into this register before issuing this subcommand is vender specific and will not change the current Automatic Off-Line Data Collection, but the device may respond with the error code specified in 0 on the page.253

11.49.2 Device Attributes Data Structure

The following defines the 512 bytes that make up the Attribute Value information. This data structure is accessed by the host in its entirety using the SMART Read Attribute Values subcommand. All multi-byte fields shown in these data structures are in byte ordering, namely that the least significant byte occupies the lowest numbered byte address location in the field.

Description	Bytes	Offset	Value
Data Structure Revision Number	2	00h	0010h
1st Device Attribute	12	02h	
30 th Device Attribute	12	15Eh	
Off-line data collection status	1	16Ah	
Self-test execution status	1	16Bh	
Total time in seconds to complete off-line data collection activity	2	16Ch	
Vender specific	1	16Eh	
Off-line data collection capability	1	16Fh	1Bh
SMART capability	2	170h	0003h
SMART device error logging capability	1	172h	01h
Self-test failure check point	1	173h	
Short self-test completion time in minutes	1	174h	
Extended self-test completion time in minutes. If 0FFh, use bytes 177h and 178h for completion time.	1	175h	
Reserved	1	176h	
Extended self-test completion time in minutes. (word)	2	177h	
Reserved	9	179h	
Vendor specific	125	182h	
Data structure checksum	1	1FFh	
	512		

Table 188 Device Attribute Data Structure

11.49.2.1 Data Structure Revision Number

The Data Structure Revision Number identifies which version of this data structure is implemented by the device. This revision number identifies both the Attribute Value and Attribute Threshold Data structures.

11.49.2.2 Individual Attribute Data Structure

The following defines the 12 bytes that make up the information for each Attribute entry in the Device Attribute Data Structure.

Description	Bytes	Offset
Attribute ID Number (01h to FFh)	1	00h
Status Flags	2	01h
Attribute Value (valid values from 01h to FDh)	1	03h
Vender specific	8	04h
Total Bytes	12	

Table 189 Individual Attribute Data Structure

Attribute ID Numbers: Any non-zero value in the Attribute ID Number indicates an active attribute. The device supports following Attribute ID Numbers.

ID **Attribute Name** 0 Indicates that this entry in the data structure is not used 1 Raw Read Error Rate 2 Throughput Performance Spin Up Time 3 4 Start/Stop Count 5 Reallocated Sector Count 7 Seek Error Rate 8 Seek Time Performance Power-On Hours Count 9 10 Spin Retry Count **Device Power Cycle Count** 12 192 Power off Retract count

- 193 Load Cycle count194 Temperature196 Reallocation Event Count
- 197 Current Pending Sector Count
- 198 Off-Line Scan Uncorrectable Sector Count
- 199 Ultra DMA CRC Error Count

Status Flag Definitions

- Bit Definition
- **0** Pre-failure/advisory bit
 - **0** An Attribute Value less than or equal to its corresponding Attribute Threshold indicates an advisory condition where the usage or age of the device has exceeded its intended design life period.
 - An Attribute Value less than or equal to its corresponding attribute threshold indicates a pre-Failure condition where imminent loss of data is being predicted.
- 1 On-Line Collective bit
 - **0** The Attribute Value is updated only during Off-Line testing
 - 1 The Attribute Value is updated during On-Line testing or during both On-Line and Off-Line testing.
- 2-5 Vendor specific
- **6-15** Reserved (0)

Normalized Values: The device will perform conversion of the raw Attribute Values to transform them into normalized values, which the host can then compare with the Threshold values. A Threshold is the excursion limit for a normalized Attribute Value.

11.49.2.3 Off-Line Data Collection Status

The value of this byte defines the current status of the off-line activities of the device. Bit 7 indicates Automatic Off-Line Data Collection Status.

Bit 7 Automatic Off-Line Data Collection Status

- Automatic Off-Line Data Collection is disabled.
- 1 Automatic Off-Line Data Collection is enabled.

Bits 0 thru 6 represent a hexadecimal status value reported by the device.

Value Definition

- Off-line data collection never started
- 2 All segments completed without errors.
- 4 Off-line data collection suspended by interrupting command
- 5 Off-line data collecting aborted by interrupting command
- 6 Off-line data collection aborted with fatal error

11.49.2.4 Self-test execution status

Bit Definition

0-3 Percent Self-test remaining

An approximation of the percent of the self-test routine remaining until completion in ten percent increments. Valid values are 0 through 9.

- 4-7 Current Self-test execution status
 - **0** The self-test routine completed without error or has never been run
 - 1 The self-test routine aborted by the host
 - 2 The self-test routine interrupted by the host with a hard or soft reset
 - 3 The device was unable to complete the self-test routine due to a fatal error or unknown test error
 - 4 The self-test routine completed with unknown element failure
 - 5 The self-test routine completed with electrical element failure
 - 6 The self-test routine completed with servo element failure
 - 7 The self-test routine completed with read element failure
 - 15 The self-test routine in progress

11.49.2.5 Total Time in Seconds to Complete Off-line Data Collection Activity

This field tells the host how many seconds the device requires completing the off-line data collection activity.

11.49.2.6 Off-Line Data Collection Capability

Bit Definition

- **0** Execute Off-line Immediate implemented bit
 - 0 SMART Execute Off-line Immediate subcommand is not implemented
 - 1 SMART Execute Off-line Immediate subcommand is implemented
- 1 Enable/disable Automatic Off-line implemented bit
 - SMART Enable/disable Automatic Off-line subcommand is not implemented
 - 1 SMART Enable/disable Automatic Off-line subcommand is implemented
- 2 abort/restart off-line by host bit
 - The device will suspend off-line data collection activity after an interrupting command and resume it after some vendor specific event
 - 1 The device will abort off-line data collection activity upon receipt of a new command
- 3 Off-line Read Scanning implemented bit
 - The device does not support Off-line Read Scanning
 - 1 The device supports Off-line Read Scanning
- 4 Self-test implemented bit
 - Self-test routine is not implemented
 - 1 Self-test routine is implemented
- **5-7** Reserved (0)
- 6 Selective self-test implemented bit
 - Selective self-test routine is not implemented
 - 1 Selective self-test routine is implemented

11.49.2.7 SMART Capability

This word of bit flags describes the SMART capabilities of the device. The device will return 03h indicating that the device will save its Attribute Values prior to going into a power saving mode and supports the SMART ENABLE/DISABLE ATTRIBUTE AUTOSAVE command.

Bit Definition

O Pre-power mode attribute saving capability

If bit = 1, the device will save its Attribute Values prior to going into a power saving mode (Standby or Sleep mode).

1 Attribute autosave capability

If bit = 1, the device supports the SMART ENABLE/DISABLE ATTRIBUTE AUTOSAVE command.

2-15 Reserved (0)

11.49.2.8 Error Logging Capability

Bit Definition

- **7-1** Reserved (0)
- Error Logging support bit
 If bit = 1, the device supports the Error Logging

11.49.2.9 Self-test failure check point

This byte indicates the section of self-test where the device detected a failure.

11.49.2.10 Self-test completion time

These bytes are the minimum time in minutes to complete self-test.

11.49.2.11 Data Structure Checksum

The Data Structure Checksum is the 2's compliment of the result of a simple 8-bit addition of the first 511 bytes in the data structure.

11.49.3 Device Attribute Thresholds Data Structure

The following defines the 512 bytes that make up the Attribute Threshold information. This data structure is accessed by the host in its entirety using the SMART Read Attribute Thresholds. All multi-byte fields shown in these data structures follow the ATA/ATAPI-7 specification for byte ordering, namely that the least significant byte occupies the lowest numbered byte address location in the field.

The sequence of active Attribute Thresholds will appear in the same order as their corresponding Attribute Values.

Description	Bytes	Offset	Value
Data Structure Revision Number	2	00h	0010h
1st Attribute Threshold	12	02h	
30th Attribute Threshold	12	15Eh	
Reserved	18	16Ah	00h
Vendor specific	131	17Ch	00h
Data structure checksum	1	1FFh	
	512		

Table 190 Device Attribute Thresholds Data Structure

11.49.3.1 Data Structure Revision Number

This value is the same as the value used in the Device Attributes Values Data Structure.

11.49.3.2 Individual Thresholds Data Structure

The following defines the 12 bytes that make up the information for each Threshold entry in the Device Attribute Thresholds Data Structure. Attribute entries in the Individual Threshold Data Structure are in the same order and correspond to the entries in the Individual Attribute Data Structure.

Description	Bytes	Offset
Attribute ID Number (01h to FFh)	1	00h
Attribute Threshold	1	01h
Reserved (00h)	10	02h
Total Bytes	12	

Table 191 Individual Threshold Data Structure

11.49.3.3 Attribute ID Numbers

Attribute ID Numbers supported by the device are the same as Attribute Values Data Structures.

11.49.3.4 Attribute Threshold

These values are preset at the factory and are not meant to be changeable.

11.49.3.5 Data Structure Checksum

The Data Structure Checksum is the 2's compliment of the result of a simple 8-bit addition of the first 511 bytes in the data structure.

11.49.4 SMART Log Directory

Table 192 defines the 512 bytes that make up the SMART Log Directory. The SMART Log Directory is SMART Log Address zero and is defined as one sector long.

Description	Bytes	Offset
SMART Logging Version	2	00h
Number of sectors in the log at log address 1	1	02h
Reserved	1	03h
Number of sectors in the log at log address 2	1	04h
Reserved	1	05h
Number of sectors in the log at log address 255	1	1Feh
Reserved	1	1FFh
	512	

Table 192 SMART Log Directory

The value of the SMART Logging Version word shall be 01h. The logs at log addresses 80-9Fh shall each be defined as 16 sectors long.

11.49.5 SMART summary error log sector

The following defines the 512 bytes that make up the SMART summary error log sector. All multi-byte fields shown in this data structure follow the ATA/ATAPI-7 specifications for byte ordering.

Description	Bytes	Offset
SMART error log version	1	00h
Error log index	1	01h
1st error log data structure	90	02h
2 nd error log data structure	90	5Ch
3 rd error log data structure	90	B6h
4 th error log data structure	90	110h
5 th error log data structure	90	16Ah
Device error count	2	1C4h
Reserved	57	1C6h
Data structure checksum	1	1FFh
	512	

Table 193 SMART summary error log sector

11.49.5.1 SMART error log version

This value is set to 01h.

11.49.5.2 Error log index

This points the most recent error log data structure. Only values 1 through 5 are valid.

11.49.5.3 Device error count

This field contains the total number of errors. The value will not roll over.

11.49.5.4 Error log data structure

Data format of each error log structure is shown below.

Description	Bytes	Offset
1st error log data structure	12	00h
2 nd error log data structure	12	0Ch
3 rd error log data structure	12	18h
4th error log data structure	12	24h
5 th error log data structure	12	30h
Error data structure	30	3Ch
	90	

Table 194 Error log data structure

Command data structure: Data format of each command data structure is shown below.

Description	Bytes	Offset
Device Control register	1	00h
Features register	1	01h
Sector count register	1	02h
Sector number register	1	03h
Cylinder Low register	1	04h
Cylinder High register	1	05h
Device/Head register	1	06h
Command register	1	07h
Timestamp (milliseconds from Power On)	4	08h
	12	

Table 195 Command data structure

Error data structure: Data format of error data structure is shown below.

Description	Bytes	Offset
Reserved	1	00h
Error register	1	01h
Sector count register	1	02h
Sector number register	1	03h
Cylinder Low register	1	04h
Cylinder High register	1	05h
Device/Head register	1	06h
Status register	1	07h
Extended error data (vendor specific)	19	08h
State	1	1Bh
Life timestamp (hours)	2	1Ch
	30	

Table 196 Error data structure

State field contains a value indicating the device state when command was issued to the device.

Value	State
x0h	Unknown
x1h	Sleep
x2h	Standby (If the EPC feature set is enabled, Standby is standby_y or standby_z)
x3h	Active/Idle
	(If the EPC feature set is enabled, Active/Idle is idle_a or idle_b or idle_c)
x4h	SMART Off-line or Self-test
x5h-xAh	Reserved
xBh-xFh	Vendor specific

Note: The value of x is vendor specific.

11.49.6 Self-test log data structure

The following defines the 512 bytes that make up the Self-test log sector. All multi-byte fields shown in these data structures follow the ATA/ATAPI-7 specifications for byte ordering.

Description	Bytes	Offset
Data structure revision	2	00h
Self-test number	1	n*18h+02h
Self-test execution status	1	n*18h+03h
Life time power on hours	2	n*18h+04h
Self-test failure check point	1	n*18h+06h
LBA of first failure	4	n*18h+07h
Vendor specific	15	n*18h+0Bh
Vendor specific	2	1Fah
Self-test index	1	1FCh
Reserved	2	1FDh
Data structure checksum	1	1FFh
	512	•

Note: n is 0 through 20

Table 197 Self-test log data structure

The data structure contains the descriptor of Self-test that the device has performed. Each descriptor is 24 bytes long and the self-test data structure is capable to contain up to 21 descriptors.

After 21 descriptors have been recorded, the oldest descriptor will be overwritten with new descriptor.

Self-test index points the most recent descriptor. When there is no descriptor the value is 0. When there is descriptor(s) the value is 1 through 21.

11.49.7 Selective self-test log data structure

The Selective self-test log is a log that may be both written and read by the host. This log allows the host to select the parameters for the self-test and to monitor the progress of the self-test. The following table defines the contents of the Selective self-test log which is 512 bytes long. All multi-byte fields shown in these data structures follow the

ATA/ATAPI-7 specifications for byte ordering.

Description	Bytes	Offset	Read/Write
Data structure revision	2	00h	R/W
Starting LBA for test span 1	8	02h	R/W
Ending LBA for test span 1	8	0Ah	R/W
Starting LBA for test span 2	8	12h	R/W
Ending LBA for test span 2	8	1Ah	R/W
Starting LBA for test span 3	8	22h	R/W
Ending LBA for test span 3	8	2Ah	R/W
Starting LBA for test span 4	8	32h	R/W
Ending LBA for test span 4	8	3Ah	R/W
Starting LBA for test span 5	8	42h	R/W
Ending LBA for test span 5	8	4Ah	R/W
Reserved	256	52h	Reserved
Vendor specific	154	152h	Vendor specific
Current LBA under test	8	1Ech	Read
Current span under test	2	1F4h	Read
Feature flags	2	1F6h	R/W
Vendor specific	4	1F8h	Vendor specific
Selective self-test pending time	2	1FCh	R/W
Reserved	1	1Feh	Reserved
Data structure checksum	1	1FFh	R/W
	512		

Table 198 Selective self-test log data structure

11.49.7.1 Feature flags

The Feature flags define the features of Selective self-test to be executed.

Bit	Description
0	Vendor specific
1	When set to one, perform off-line scan after selective test.
2	Vendor specific
3	When set to one, off-line scan after selective test is pending.
4	When set to one, off-line scan after selective test is active.
5-15	Reserved.

Table 199 Selective self-test feature flags

11.49.8 Error Reporting

The following table shows the values returned in the Status and Error Registers when specific error conditions are encountered by a device.

Error Condition	Status Register	Error Register
A SMART FUNCTION SET command was received by the device without the required key being loaded into the Cylinder High and Cylinder Low registers.	51h	04h
A SMART FUNCTION SET command was received by the device with a subcommand value in the Features Register that is either invalid or not supported by this device.	51h	04h
A SMART FUNCTION SET command subcommand other than SMART ENABLE OPERATIONS was received by the device while the device was in a "SMART disabled" state.	51h	04h
The device is unable to read its Attribute Values or Attribute Thresholds data structure.	51h	10h or 40h
The device is unable to write to its Attribute Values data structure.	51h	10h

Table 200 SMART Error Codes

11.50 Standby (E2h/96h)

Command Block	k Oı	ıtpu	t Re	gist	ters			
Register	7	6	5	4	ფ	2	1	0
Data	-	-	-	1	•	1	-	
Feature	-	-	-	-	•		-	
Sector Count	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	-	-	-	-			-	
Cylinder Low	-	-	-	-	-	-	-	-
Cylinder High	-	-	-	-			-	
Device/Head	1	-	1	D	-	-	-	
Command	1	1	1	0	0	0	1	0

Command Block	(Inp	out	Reg	iste	rs			
Register	7	6	5	4	ფ	2	1	0
Data	1	1	-	ı	1	•	•	-
Error	See Below							
Sector Count	-	-	-	-	-	-	-	-
Sector Number		•	-	-		•	-	-
Cylinder Low	-	-	-	-	-	•	•	-
Cylinder High		•	-	-		•	-	-
Device/Head	-	-	-	-	-	-	-	-
Status			S	ee E	Belo	W		

	Error Register											
7	6 5 4 3 2 1 (
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	0	0	V	0	0					

	Status Register											
7 6 5 4 3 2 1 (
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	V	-	0	1	V					

Table 201 Standby Command (E2h/96h)

The Standby command causes the device to enter the Standby Mode immediately, and set auto power down timeout parameter (standby timer).

When the Standby mode is entered, the drive is spun down but the interface remains active. If the drive is already spun down, the spin down sequence is not executed.

During the Standby mode the device will respond to commands, but there is a delay while waiting for the spindle to reach operating speed.

The automatic power down sequence is enabled and the timer starts counting down when the drive returns to Idle mode.

If the EPC feature set is enabled, device enters into the Standby_Z power condition.

Output Parameters To The Device

Sector Count Timeout Parameter. If zero, the timeout interval (Standby Timer) is NOT disabled. If non-zero, then the automatic power down sequence is enabled, and the timeout interval is shown blow:

Value	Description	
0	Timer disabled	
1-240	Value * 5	seconds
241-251	(Value-240) * 30 m	ninutes
252	21 minutes	
253	8 hours	
254	Aborted	
255	21 minutes 15 sec	onds

When the automatic power down sequence is enabled, the drive will enter Standby mode automatically if the timeout interval expires with no drive access from the host. The timeout interval will be reinitialized if there is a drive access before the timeout interval expires.

11.51 Standby Immediate (E0h/94h)

Command Bloc	k O	utp	ut F	Regi	ster	s		
Register	7	6	5	4	3	2	1	0
Data	-	-	-	-	ı	-	1	-
Feature	-	-	-	-	-	-	-	-
Sector Count	-	-	-	-	ı	-	•	-
Sector Number	-	-	-	-	1	-	•	-
Cylinder Low	•	•	•	•	ı	•	ı	-
Cylinder High	-	-	-	-	1	-	•	-
Device/Head	1	-	1	D	-	-	-	-
Command	1	1	1	0	0	0	0	0

Command Block	Command Block Input Registers										
Register	7	6	5	4	3	2	1	0			
Data	-	-	-	ı	-	1	•	-			
Error	See Below										
Sector Count	-	-	-	-	-	-	-	-			
Sector Number	-	-	-	1	-	-					
Cylinder Low	-	-	-	1	-	•	•	-			
Cylinder High	-	-	-	1	-	-					
Device/Head	-	-	-	-	-	-	-	-			
Status			S	ee E	3elo	W					

	Error Register										
7	6	0									
CRC	UNC	0	IDN	0	ABT	TON	AMN				
0	0 0 0 0 V 0 0										

	Status Register											
7	6	5	4	3	2	1	0					
BS'	Y RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	V	-	0	ı	V					

Table 202 Standby Immediate Command (E0h/94h)

The Standby Immediate command causes the device to enter Standby mode immediately.

The device is spun down but the interface remains active. If the device is already spun down, the spin down sequence is not executed.

During the Standby mode, the device will respond to commands, but there is a delay while waiting for the spindle to reach operating speed.

The Standby Immediate command will not affect the auto power down timeout parameter.

If the EPC feature set is enabled, device enters into the Standby_Z power condition.

11.52 Write Buffer (E8h)

Command Block	Ou	tpu	t Re	gist	ters			
Register	7	6	5	4	3	2	1	0
Data	-	-	-		•	-	-	1
Feature	-	-	-	-	-	-	-	-
Sector Count	-	-	•	-	•	-	-	-
Sector Number	-	-	-		•	-	-	1
Cylinder Low	-	-	•	-	-	-	-	-
Cylinder High	-	-	-		•	-	-	1
Device/Head	1	-	1	D	-	-	-	-
Command	1	1	1	0	1	0	0	0

Command Block I	Command Block Input Registers										
Register	7	6	5	4	3	2	1	0			
Data	•	-	-	-	1	-	-	-			
Error	See Below										
Sector Count	•	-	-	-	-	-	-	-			
Sector Number	•	-	-	-	1	-	-	-			
Cylinder Low	-	-	-	-	-	-	-	-			
Cylinder High	-	-	-	-	-	-	-	-			
Device/Head	-	-	-	-	-	-	-	-			
Status				See	Ве	low.					

Error Register											
7	6	5	4	3	2	1	0				
CRC	UNC	0	IDN	0	ABT	TON	AMN				
0	0	0	0	0	V	0	0				

		St	tatus F	Regist	er		
7	6	5	4	3	2	1	0
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR
0	V	0	-	-	0	-	V

Table 203 Write Buffer Command (E8h)

The Write Buffer command transfers a sector of data from the host to the sector buffer of the device. The sectors of data are transferred through the Data Register 16 bits at a time.

The Read Buffer and Write Buffer commands are synchronized such that sequential Write Buffer and Read Buffer commands access the same 512 byte within the buffer.

11.53 Write Buffer DMA (EBh)

Command Bloc	k O	utp	ut R	egis	ster	s		
Register	7	6	5	4	თ	2	1	0
Data	-	-	-	-	1	-	-	ı
Feature	-	-	-	-	•	-	-	•
Sector Count	-	-	-	-	•	-	-	•
Sector Number	-	-	-	-	•	-	-	•
Cylinder Low	-	-	-	-	1	-	-	ı
Cylinder High	-	-	-	-	•	-	-	•
Device/Head	1	-	1	D	-	-	-	-
Command	1	1	1	0	1	0	1	1

Command Block	Inp	ut R	egi	ster	'S			
Register	7	6	5	4	თ	2	1	0
Data	-	ı	•	-	1	1	1	ı
Error			8	See	Bel	ow		
Sector Count	-	-	-	-	-	-	-	-
Sector Number	-	1		-	•	-	-	-
Cylinder Low	-	1	•	-	-	•	•	-
Cylinder High	-	-	-	-	-	-	-	-
Device/Head	-	-	-	-	-	-	-	-
Status			8	See	Belo	ow		

	Error Register												
7	6	5	4	3	2	1	0						
CRC	UNC	0	IDN	0	ABT	TON	AMN						
0	0	0	0	0	V	0	0						

		St	tatus F	Regist	er		
7	6	5	4	3	2	1	0
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR
0	V	0	-	-	0	-	V

Table 204 Write Buffer DMA Command (EBh)

The Write Buffer DMA command transfers a sector of data from the host to the sector buffer of the device. The sectors of data are transferred through the Data Register 16 bits at a time.

The Read Buffer and Write Buffer commands are synchronized such that sequential Write Buffer and Read Buffer commands access the same 512 byte within the buffer.

11.54 Write DMA (CAh/CBh)

Command Block	Outp	out l	Reg	iste	rs			
Register	7	6	5	4	3	2	1	0
Data	-	-	-	-	-	-	•	-
Feature	-	-	-	-	-	-	-	-
Sector Count	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head	1	Ĺ	1	D	Н	Н	Н	Н
Command	1	1	0	0	1	0	1	R

Command Block I	npu	t Re	gis	ters				
Register	7	6	5	4	3	2	1	0
Data	1	ı	-	-	1	-	•	1
ErrorSee Below								
Sector Count	>	>	٧	٧	>	٧	٧	>
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	>	>	٧	٧	>	٧	٧	>
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head	-	-	-	-	Н	Н	Н	Н
Status	See Below							

	Error Register										
7	6	5	4	3	2	1	0				
CRC	UNC	0	IDN	0	ABT	TON	AMN				
V	0	0	V	0	V	0	0				

		St	atus F	Regist	ter		
7	6	5	4	3	2	1	0
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR
0	V	0	V	-	0		V

Table 205 Write DMA Command (CAh/CBh)

The Write DMA command transfers one or more sectors of data from the host to the device, then the data is written to the disk media.

The sectors of data are transferred through the Data Register 16 bits at a time.

The host initializes a slave-DMA channel prior to issuing the command. Data transfers are qualified by DMARQ and are performed by the slave-DMA channel. The device issues only one interrupt per command to indicate that data transfer has terminated and status is available.

If an uncorrectable error occurs, the write will be terminated at the failing sector.

Output Parameters To The Device

Sector Count The number of continuous sectors to be transferred. If zero is specified, then 256 sectors

will be transferred.

Sector Number The sector number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 8 – 15 (Low), 16 – 23 (High). (L=1)

H The head number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 24 - 27. (L=1)

R The retry bit, but this bit is ignored.

Input Parameters From The Device

Sector Count The number of requested sectors not transferred. This will be zero, unless an

unrecoverable error occurs.

Sector Number The sector number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 8 – 15 (Low), 16 – 23 (High). (L=1)

H The head number of the last transferred sector. (L=0) In LBA mode, this register contains

current LBA bits 24 – 27. (L=1)

11.55 Write DMA FUA Ext (3Dh)

Command Bloo	k Output F	Regi	sters	5					
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	-
Data High		-	-	-	-	-	-	-	-
Feature	Current	-	-	-	-	-	-	-	-
reature	Previous	-	-	-	-	-	-	-	-
Sector Count	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Count	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Previous	٧	٧	٧	٧	V	٧	٧	٧
Cydin don Law	Current	٧	٧	٧	V	V	٧	V	V
Cylinder Low	Previous	٧	٧	٧	V	V	٧	V	V
Cylinder High	Current	٧	٧	٧	V	V	٧	V	٧
Cylinder High	Previous	٧	٧	٧	V	V	٧	V	V
Device/Head		-	1	-	D	-	-	-	-
Command		0	0	1	1	1	1	0	1

Command Bloo	k Input R	egis	ters	;					
Register		7	6	5	4	3	2	1	0
Data Low		•	•	•	•	ı	ı	-	ı
Data High		-	-	-	-	ı	ı	-	ı
Error				8	See E	Belov	<i>N</i>		
Sector Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
Sector Number	HOB=0	٧	٧	٧	٧	V	٧	٧	V
Sector Number	HOB=1	٧	٧	٧	٧	٧	٧	٧	V
Cylinder Low	HOB=0	٧	٧	٧	٧	V	٧	٧	V
Cylinder Low	HOB=1	٧	٧	٧	٧	٧	٧	٧	V
Cylinder High	HOB=0	٧	٧	٧	٧	>	>	٧	>
Cylinder High	HOB=1	٧	٧	٧	٧	>	>	٧	>
Device/Head			-	-	-	-	-	-	-
Status				8	See E	Belov	N		

	Error Register										
7	6	5	4	3	2	1	0				
CRC	UNC	0	IDN	0	ABT	TON	AMN				
V	0	0	V	0	V	0	0				

	Status Register										
7	6	5	4	3	2	1	0				
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR				
0	V	0	V	-	0	-	V				

Table 206 Write DMA FUA Ext Command (3Dh)

The Write DMA FUA Ext command transfers one or more sectors of data from the host to the device, and then the data is written to the disk media. This command provides the same function as the Write DMA Ext command except that the transferred data shall be written to the media before the ending status for this command is reported also when write caching is enabled.

The sectors of data are transferred through the Data Register 16 bits at a time.

The host initializes a slave-DMA channel prior to issuing the command. Data transfers are qualified by DMARQ and are performed by the slave-DMA channel. The device issues only one interrupt per command to indicate that data transfer has terminated and status is available.

If an unrecoverable error occurs, the write will be terminated at the failing sector.

Output Parameters To The Device

Sector Count Current The number of continuous sectors to be transferred low order, bits (7:0).

Sector Count Previous

The number of continuous sectors to be transferred high order bits (15:8). If zero is

specified in the Sector Count register, then 65,536 sectors will be transferred.

Sector Number Current

Sector Number Previous

Cylinder Low Current

Cylinder Low Previous

Cylinder High Current

LBA (7:0).

LBA (31:24).

LBA (15:8).

LBA (39:32).

LBA (23:16).

LBA (47:40).

Input Parameters From The Device

Sector Number (HOB=0)	LBA (7:0) of the address of the first unrecoverable error.
Sector Number (HOB=1)	LBA (31:24) of the address of the first unrecoverable error.
Cylinder Low (HOB=0)	LBA (15:8) of the address of the first unrecoverable error.
Cylinder Low (HOB=1)	LBA (39:32) of the address of the first unrecoverable error.
Cylinder High (HOB=0)	LBA (23:16) of the address of the first unrecoverable error.
Cylinder High (HOB=1)	LBA (47:40) of the address of the first unrecoverable error.

11.56 Write DMA Ext (35h)

Command Bloc	Command Block Output Registers								
Register	Register			5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	-
Data High		-	-	-	-	-	-	-	-
Feature	Current	-	-	-	-	-	-	-	-
reature	Previous	-	-	-	-	-	-	-	-
Sector Count	Current	٧	٧	٧	٧	٧	٧	V	V
Sector Count	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Previous	٧	٧	٧	٧	٧	٧	V	٧
Culindan Laur	Current	٧	٧	٧	٧	V	٧	V	V
Cylinder Low	Previous	٧	٧	٧	٧	٧	٧	٧	V
Cylinder High	Current	٧	٧	٧	٧	V	٧	V	V
Cylinder High	Previous	٧	٧	٧	٧	V	٧	V	٧
Device/Head		-	1	-	D	-	-	-	-
Command		0	0	1	1	0	1	0	1

Command Bloc	Command Block Input Registers									
Register		7	6	5	4	3	2	1	0	
Data Low	Data Low			-	-	ı	ı	-	-	
Data High		-	-	-	-	ı	ı	1	-	
Error		See Below								
Contar Count	HOB=0	-	-	-	-	-	-	-	-	
Sector Count	HOB=1	-	-	-	-	-	-	-	-	
Sector Number	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧	
Sector Number	HOB=1	٧	٧	٧	٧	٧	٧	٧	٧	
Cylinder Lew	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧	
Cylinder Low	HOB=1	٧	٧	٧	٧	٧	٧	٧	٧	
Cylinder High	HOB=0	٧	٧	٧	٧	V	V	٧	٧	
Cylinder High	HOB=1	٧	٧	٧	٧	>	>	٧	٧	
Device/Head		-	-	-	-	-	-	-	-	
Status		See Below								

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
V	0	0	V	0	V	0	0					

Status Register											
7	6	5	4	3	2	1	0				
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR				
0	V	0	V	-	0	-	V				

Table 207 Write DMA Ext Command (35h)

The Write DMA Ext command transfers one or more sectors of data from the host to the device, and then the data is written to the disk media.

The sectors of data are transferred through the Data Register 16 bits at a time.

The host initializes a slave-DMA channel prior to issuing the command. Data transfers are qualified by DMARQ and are performed by the slave-DMA channel. The device issues only one interrupt per command to indicate that data transfer has terminated and status is available.

If an uncorrectable error occurs, the write will be terminated at the failing sector

Output Parameters To The Device

Sector Count Current The number of continuous sectors to be transferred low order, bits (7:0).

The number of continuous sectors to be transferred high order bits (15:8). If zero is **Sector Count Previous**

specified in the Sector Count register, then 65,536 sectors will be transferred.

Sector Number Current LBA (7:0). **Sector Number Previous** LBA (31:24). **Cylinder Low Current** LBA (15:8). **Cylinder Low Previous** LBA (39:32). **Cylinder High Current** LBA (23:16). **Cylinder High Previous** LBA (47:40).

Input Parameters From The Device

Sector Number (HOB=0)	LBA (7:0) of the address of the first unrecoverable error.
Sector Number (HOB=1)	LBA (31:24) of the address of the first unrecoverable error.
Cylinder Low (HOB=0)	LBA (15:8) of the address of the first unrecoverable error.
Cylinder Low (HOB=1)	LBA (39:32) of the address of the first unrecoverable error.
Cylinder High (HOB=0)	LBA (23:16) of the address of the first unrecoverable error.
Cylinder High (HOB=1)	LBA (47:40) of the address of the first unrecoverable error.

11.57 Write FPDMA Queued (61h)

Command Block Output Registers									
Register	Register			5	4	3	2	1	0
Data Low		•	•	-	-	ı	•	ı	-
Data High		-	-	-	-	ı	-	ı	-
Feature	Current	٧	٧	٧	٧	>	٧	>	٧
realure	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Sector Count	Current	٧	٧	٧	٧	٧	-	-	
Sector Count	Previous	-	-	-	-	-	-	-	-
Sector Number	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Culindon Law	Current	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	Previous	٧	٧	٧	٧	V	٧	٧	٧
Cylinder High	Current	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	Previous	٧	٧	٧	٧	V	٧	V	V
Device/Head		V	1	-	0	-	-	-	-
Command		0	1	1	0	0	0	0	1

Command Bloo	k Input R	egis	ters	;						
Register		7	6	5	4	3	2	1	0	
Data Low	Data Low			-	-	-	-	-	-	
Data High		-	-	-	-	-	-	-	-	
Error		See Below								
Contar Count	HOB=0	-	-	-	-	-	-	-	-	
Sector Count	HOB=1	-	-	-	-	-	-	-	-	
Cootor Number	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧	
Sector Number	HOB=1	٧	٧	٧	٧	٧	٧	٧	V	
Codinada a Lacco	HOB=0	٧	٧	٧	٧	V	٧	٧	V	
Cylinder Low	HOB=1	٧	٧	٧	٧	V	٧	٧	V	
Cylinder High	HOB=0	٧	٧	٧	٧	V	٧	٧	V	
Cylinder High	HOB=1	٧	V	٧	V	٧	٧	V	٧	
Device/Head		-	-	-	-	-	-	-	•	
Status	•			8	See E	Belov	W			

	Error Register										
7	6	5	4	3	2	1	0				
CRC	UNC	0	IDN	0	ABT	TON	AMN				
V	0	0	V	0	V	0	0				

Status Register										
7	6	5	4	3	2	1	0			
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR			
0	V	0	V	1	0	1	V			

Table 208 Write FPDMA Queued Command (61h)

The Write FPDMA Queued command transfers one or more sectors of data from the host to the device, and then the data is written to the disk media.

If an unrecoverable error occurs, the write will be terminated at the failing sector

Output Parameters To The Device

Feature CurrentThe number of sectors to be transferred low order, bits (7:0). **Feature Previous**The number of sectors to be transferred high order, bits (15:8).

Sector Count Current

TAG (bits 7-3) The TAG value shall be assigned to be different from all other queued commands.

The value shall not exceed the maximum queue depth specified by the Word 75 of the

Identify Device information.

Sector Count Previous PRIO (bits 7-6)

The Priority (PRIO) value shall be assigned by the host based on the priority of the command issued. The device makes a best effort to complete High priority requests in a more timely fashion than Normal and isochronous priority requests. The device

tries to complete isochronous requests prior to its associated deadline. The Priority values are defined as follows:

00b Normal priority

01b Isochronous – deadline dependent priority

10b High priority

Sector Number Current

Sector Number Previous

Cylinder Low Current

Cylinder Low Previous

Cylinder High Current

LBA (7:0)

LBA (31:24)

LBA (15:8)

LBA (39:32)

LBA (23:16)

Cylinder High Previous

LBA (47:40)

ICC

The Isochronous Command Completion (ICC) field is valid when PRIO is set to a value of 01b. It is assigned by the host based on the intended deadline associated with the command issued. When a deadline has expired, the device continues to complete the command as soon as possible. The host can modify this behavior if the device supports the NCQ QUEUE MANAGEMENT command (see 11.15) and supports the Deadline Handling subcommand (see 11.15.2). This subcommand allows the host to set whether the device aborts commands that have exceeded the time set in ICC.

There are several parameters encoded in the ICC field: Fine or Coarse timing, Interval and the Max Time. The Interval indicates the time units of the Time Limit parameter.

If ICC Bit 7 cleared to zero, then the time interval is fine-grained.

Interval = 10msec

Time Limit = (ICC[6:0] + 1) * 10msec

If ICC Bit 7 is set to one (coarse encoding), then the time interval is coarse grained.

Interval = 0.5 sec

Time Limit = (ICC[6:0] + 1) * 0.5 sec

Device/Head

FUA (bit 7) When the FUA bit is set to 1, the completion status is indicated after the transferred

data are written to the media also when Write Cache is enabled.

When the FUA bit is set to 0, the completion status may be indicated before the transferred data are written to the media successfully when Write Cache is enabled.

Input Parameters From The Device

Sector Number (HOB=0)

Sector Number (HOB=1)

Cylinder Low (HOB=0)

Cylinder Low (HOB=1)

Cylinder Low (HOB=1)

Cylinder High (HOB=0)

Cylinder High (HOB=1)

LBA (7:0) of the address of the first unrecoverable error.

LBA (31:24)of the address of the first unrecoverable error.

LBA (39:32)of the address of the first unrecoverable error.

LBA (23:16)of the address of the first unrecoverable error.

LBA (47:40)of the address of the first unrecoverable error.

11.58 Write Log Ext (3Fh)

Command Bloo	ck Output Re	gist	ers						
Register		7	6	5	4	3	2	1	0
Data Low			-	-	-	-	-	-	-
Data High	Data High			-	-	-	-	-	-
Contura	Current	-	-	-	-	-	-	-	-
Feature	Previous	-	-	-	-	-	-	-	-
Cootor Count	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Count	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Cooter Number	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Previous	-	-	-	-	-	-	-	-
Ordinalan Lavr	Current	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	Current	-	-	-	-	-	-	-	-
Cylinder High Previous		-	-	-	-	-	-	-	-
Device/Head	Device/Head			1	D	-	-	-	-
Command			0	1	1	1	1	1	1

Command Bloc	k Innut Re	enis	ters						
	Kiliputik	_			_	_	_	_	_
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	-
Data High	-	-	-	-	-	-	-	-	
Error		See Below							
Sector Count	HOB=0		•		•	-	•	-	ı
Sector Count	HOB=1	•	-	•	•	-	•	-	•
Sector Number	HOB=0	-	-	-	-	-	-	-	•
Sector Number	HOB=1	-	-	-	-	-	-	-	-
Cylinder Low	HOB=0	-	-	-	-	-	-	-	-
Cylinder Low	HOB=1	-	-	-	-	-	-	-	-
Cylinder High	HOB=0	-	-	-	-	-	-	-	-
Cylinder High	HOB=1	-	-	-	-	-	-	-	-
Device/Head	Device/Head			-	-	-	-	-	-
Status	Status			S	ee E	Belo	w		

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	V	0	V	0	V	0	0					

	Status Register											
7	6	5	4	3	2	1	0					
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	V	-	0	-	V					

Table 209 Write Log Ext Command (3Fh)

This command writes a specified number of 512 byte data sectors to the specific log. The device shall interrupt for each DRQ block transferred.

Output Parameters To The Device

Sector Count Current The number of sectors to be written to the specified log low order, bits (7:0).

Sector Count Previous The number of sectors to be written to the specified log high orders, bits (15:8). If the

number of sectors is greater than the number indicated in the Log directory, which is available in Log number zero, the device shall return command aborted. The log transferred to the device shall be stored by the device starting at the first sector in the

specified log.

Sector Number Current The log to be written as described in 0 Log address definition. If the host attempts to

write to a read only log address, the device shall return command aborted.

Cylinder Low Current The first sector of the log to be written low order, bits (7:0).

Cylinder Low Previous The first sector of the log to be written high order, bits (15:8).

If the feature set associated with the log specified in the Sector Number register is not supported or enabled, or if the values in the Sector Count, Sector Number or Cylinder Low registers are invalid, the device shall return command aborted. If the host attempts to write to a read only log address, the device shall return command aborted.

11.59 Write Log DMA Ext (57h)

Command Blo	ck Output	Re	gist	ers	;				
Register		7	6	5	4	3	2	1	0
Data Low			-	-	-	-	-	-	-
Data High			-	-	-	-	-	-	-
Feature	Current		-	-	-	-	-	-	-
i eature	Previous	•	•	-	-	-	-	-	-
Sector Count	Current	٧	V	٧	٧	٧	٧	٧	٧
Sector Count	Previous	٧	٧	٧	٧	٧	٧	٧	٧
LBA Low	Current	٧	٧	٧	٧	٧	٧	٧	٧
LDA LOW	Previous	-	-	-	-	-	-	-	
LBA Mid	Current	٧	٧	٧	٧	٧	٧	٧	٧
LDA IVIIU	Previous	٧	٧	٧	٧	٧	٧	٧	٧
LBA High	Current	-	•	-	-	-	-	-	1
Previous		-	-	-	-	-	-	-	-
Device			•	-	-	-	-	-	-
Command	0	1	0	1	0	1	1	1	

Comr	nand Blo	ck	Inp	ut R	legi	ste	rs		
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	-
Data High		-	-	-	-	-	-	1	-
Error			See Below						
Contar Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
LBA Low	HOB=0	-	-	-	-	-	-	-	-
LDA LOW	HOB=1	-	-	1	-	ı	-	•	-
LBA Mid	HOB=0	-	-	-	-	ı	-	•	
LDA IVIIU	HOB=1	-	-	-	-	-	-	-	-
LBA High	HOB=0	-	-	-	-	ı	-	•	
HOB=1		-	-	-	-	•	-	•	-
Device		_	_	_	_	_	_	-	-
Status		•	S	ee I	3eld	ow		ď	

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	T0N	AMN					
V	V	0	V	0	V	0	0					

			Status	Regist	er						
7 6 5 4 3 2 1 0											
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR				
0	V	0	V	-	0	0	V				

Table 210 Write Log DMA Ext Command (57h)

The content of this command is the same as Write Log Ext. See 11.58

11.60 Write Multiple (C5h)

Command Block	k Oı	ıtpu	t Re	gist	ers			
Register	7	6	5	4	3	2	1	0
Data	-	-	-	•	1	•	1	•
Feature	-	-	-	-	-	-	-	-
Sector Count	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head	1	Ĺ	1	D	Τ	Τ	Τ	Τ
Command	1	1	0	0	0	1	0	1

Command	Blo	ck l	npu	t Re	gist	ers		
Register	7	6	5	4	თ	2	1	0
Data	-	•	•	-	1	•	1	•
Error	See Below							
Sector Count	٧	V	V	٧	V	V	V	V
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	٧	٧	٧	٧	>	٧	٧	٧
Cylinder High	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head	-	-	-	-	Н	Н	Н	Н
Status	See Below							

	Error Register											
7	7 6 5 4 3 2 1 0											
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	V	0	V	0	0					

		St	atus F	Regist	er		
7	6	5	4	3	2	1	0
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR
0	V	0	V	-	0	ı	V

Table 211 Write Multiple Command (C5h)

The Write Multiple command transfers one or more sectors from the host to the device, and then the data is written to the disk media.

Command execution is identical to the Write Sector(s) command except that an interrupt is generated for each block (as defined by the Set Multiple command) instead of for each sector. The sectors are transferred through the Data Register 16 bits at a time.

Output Parameters To The Device

Sector Count The number of continuous sectors to be transferred. If zero is specified, then 256 sectors

will be transferred.

Sector Number The sector number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 8 - 15 (Low), 16 - 23 (High). (L=1)

H The head number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 24 - 27. (L=1)

Input Parameters From The Device

Sector Count The number of requested sectors not transferred. This will be zero, unless an

unrecoverable error occurs.

Sector Number The sector number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 8 - 15 (Low), 16 - 23 (High). (L=1)

H The head number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 24 - 27. (L=1)

11.61 Write Multiple Ext (39h)

Command Block	Output Reg	jiste	rs						
Register		7	6	5	4	3	2	1	0
Data Low		•	•	•	•	•	•	•	-
Data High		-	-	-	-	-	-	-	-
Contura	Current	-	-	-	-	-	-	-	-
Feature	Previous	-	-	-	-	-	-	-	-
Sector Count	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Count	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Coding do a Lavo	Current	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Culin do a Llimb	Current	٧	٧	٧	٧	٧	٧	٧	V
Cylinder High	Previous	٧	٧	٧	٧	٧	٧	٧	V
Device/Head		-	1	-	D	-	-	-	-
Command		0	0	1	1	1	0	0	1

Command Bloc	k Input R	egis	ters	;					
Register 7 6 5 4 3 2 1 0								0	
Data Low		-	-	-	-	-	-	-	1
Data High		-	-	-	-	-	-	-	-
Error				8	See E	Belov	W		
Contar Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count HOB=1		-	-	-	-	-	-	-	-
Sector Number	HOB=0					V	٧	٧	٧
Sector Number	HOB=1	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	HOB=0	V V V V V V V V							V
Cylinder Low	HOB=1	V V V V V V V V							V
Cylinder High	HOB=0	V V V V V V V V							V
Cylinder High	HOB=1	=1 V V V V V V V V						٧	
Device/Head		-	-	-	-	-	-	-	-
Status				8	See E	Belov	w		

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	V	0	V	0	0					

		5	Status F	Registe	r		
7	6	5	4	3	2	1	0
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR
0	V	0	V	-	0	•	V

Table 212 Write Multiple Ext Command (39h)

The Write Multiple Ext command transfers one or more sectors from the host to the device, and then the data is written to the disk media.

Command execution is identical to the Write Sector(s) Ext command except that an interrupt is generated for each block (as defined by the Set Multiple command) instead of for each sector. The sectors are transferred through the Data Register 16 bits at a time.

Output Parameters To The Device

Sector Count Current The number of continuous sectors to be transferred low order, bits (7:0)

Sector Count Previous The number of continuous sectors to be transferred high order, bits (15:8). If zero

is specified in the Sector Count register, then 65,536 sectors shall be transferred.

Sector Number CurrentLBA (7:0).Sector Number PreviousLBA (31:24).Cylinder Low CurrentLBA (15:8).Cylinder Low PreviousLBA (39:32).Cylinder High CurrentLBA (23:16).Cylinder High PreviousLBA (47:40).

Input Parameters From The Device

Sector Number (HOB=0)

LBA (7:0) of the address of the first unrecoverable error.

LBA (31:24) of the address of the first unrecoverable error.

Cylinder Low (HOB=0)

LBA (39:32) of the address of the first unrecoverable error.

LBA (39:32) of the address of the first unrecoverable error.

Cylinder High (HOB=0) LBA (23:16) of the address of the first unrecoverable error.

Cylinder High (HOB=1) LBA (47:40) of the address of the first unrecoverable error.

11.62 Write Multiple FUA Ext (CEh)

Command Block	Output Re	giste	ers						
Register		7	6	5	4	3	2	1	0
Data Low	-	-	-	-	-	-	-	1	
Data High		-	-	-	-	-			1
Contura	Current	-	-	-	-	-	-	-	
Feature	Previous	-	-	-	-	-	-	-	
Soctor Count	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Count	Previous	٧	٧	٧	٧	٧	٧	٧	V
Sector Number	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Culindan Laur	Current	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	Previous	٧	٧	٧	٧	٧	٧	٧	V
Culinder High	Current	٧	٧	٧	٧	٧	٧	٧	V
Cylinder High	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head		-	1	-	D	-	-	-	-
Command		1	1	0	0	1	1	1	0

Cor	nmand Bl	ock	Inp	ut R	egis	ters			
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	-	-	-	-
Data High									•
Error				8	See E	Belov	w		
Sector Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
Sector Number	HOB=0	٧	٧	٧	٧	٧	٧	٧	V
Sector Number	HOB=1	V V V V V V V V							V
Coding day 1 avv	HOB=0	٧	٧	٧	٧	٧	٧	٧	V
Cylinder Low	HOB=1	V V V V V V V V							٧
Codinada e I limb	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	HOB=1	1 V V V V V V V V							
Device/Head		-	-	-	-	-	-	-	-
Status				8	See E	Belov	w		

			Error R	Register			
7	6	5	4	3	2	1	0
CRC	UNC	0	IDN	0	ABT	TON	AMN
0	0	0	V	0	V	0	0

		5	Status F	Registe	r		
7	6	5	4	3	2	1	0
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR
0	V	0	V	-	0	-	V

Table 213 Write Multiple FUA Ext Command (CEh)

The Write Multiple Ext command transfers one or more sectors from the host to the device, and then the data is written to the disk media. This command provides the same function as the Write Multiple Ext command except that the transferred data shall be written to the media before the ending status for this command is reported also when write caching is enabled.

Command execution is identical to the Write Sector(s) Ext command except that an interrupt is generated for each block (as defined by the Set Multiple command) instead of for each sector. The sectors are transferred through the Data Register 16 bits at a time.

Output Parameters To The Device

Sector Count Current The number of continuous sectors to be transferred low order, bits (7:0)

Sector Count Previous The number of continuous sectors to be transferred high order, bits (15:8). If zero

is specified in the Sector Count register, then 65,536 sectors shall be transferred.

Sector Number Current
Sector Number Previous
LBA (7:0).

LBA (31:24).

Cylinder Low Current
LBA (15:8).

Cylinder Low Previous
LBA (39:32).

Cylinder High Current
LBA (23:16).

Cylinder High Previous
LBA (47:40).

Input Parameters From The Device

Sector Number (HOB=0)

LBA (7:0) of the address of the first unrecoverable error.

Sector Number (HOB=1)

LBA (31:24) of the address of the first unrecoverable error.

Cylinder Low (HOB=0)

LBA (15:8) of the address of the first unrecoverable error.

Cylinder Low (HOB=1)	LBA (39:32) of the address of the first unrecoverable error.
Cylinder High (HOB=0)	LBA (23:16) of the address of the first unrecoverable error.
Cylinder High (HOB=1)	LBA (47:40) of the address of the first unrecoverable error.

11.63 Write Sector(s) (30h/31h)

Command Bloc	k O	utpu	ut R	egis	ters	;		
Register	7	6	5	4	3	2	1	0
Data	-	-	-	•	ı	1	1	ı
Feature	-	-	-	•	ı	1	1	ı
Sector Count	V	٧	V	V	>	>	>	>
Sector Number	V	٧	٧	٧	V	V	V	V
Cylinder Low	٧	٧	٧	٧	>	٧	٧	>
Cylinder High	V	٧	٧	V	V	V	V	٧
Device/Head	1	L	1	D	Н	Н	Н	Н
Command	0	0	1	1	0	0	0	R

		mm gist	and ers		Blo	ck	In	out	
Register	7	6	5	4	3	2	1	0	
Data	-	-	-	-	-	-	-	-	
Error		See Below							
Sector Count	٧	V V V V V V V V							
Sector Number	٧	٧	٧	٧	٧	٧	٧	٧	
Cylinder Low	٧	٧	٧	٧	٧	٧	٧	٧	
Cylinder High	٧	٧	٧	٧	٧	٧	٧	V	
Device/Head	-	-	-	-	Н	Н	Н	Н	
Status			8	See	Belo	w			

		Error Register											
7	6	5	4	3	2	1	0						
CRC	UNC	0	IDN	0	ABT	TON	AMN						
0	0	0	V	0	V	0	0						

	Status Register											
7 6 5 4 3 2 1 0												
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	V	-	0	ı	V					

Table 214 Write Sector(s) Command (30h/31h)

The Write Sector(s) command transfers one or more sectors from the host to the device, and then the data is written to the disk media.

The sectors are transferred through the Data Register 16 bits at a time.

If an uncorrectable error occurs, the write will be terminated at the failing sector.

Output Parameters To The Device

Sector Count The number of continuous sectors to be transferred. If zero is specified, then 256 sectors

will be transferred.

Sector Number The sector number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 8 - 15 (Low), 16 - 23 (High). (L=1)

H The head number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 24 - 27. (L=1)

R The retry bit, but this bit is ignored.

Input Parameters From The Device

Sector Count The number of requested sectors not transferred. This will be zero, unless an

unrecoverable error occurs.

Sector Number The sector number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 8 - 15 (Low), 16 - 23 (High). (L=1)

H The head number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 24 - 27. (L=1)

11.64 Write Sector(s) Ext (34h)

Con	nmand Blo	ck O	utp	ut R	egis	ters			
Register		7	6	5	4	3	2	1	0
Data Low		•	•	•	•	ı	•	ı	1
Data High		-	-	-	-	ı	-	ı	1
Feature	Current	-	-	-	-	-	-	-	-
reature	Previous	-	-	-	-	-	-	-	-
Contar Count	Current	٧	٧	٧	٧	٧	٧	V	V
Sector Count	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Culin do a Lavo	Current	٧	٧	٧	٧	٧	٧	٧	V
Cylinder Low	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	Current	٧	٧	٧	٧	٧	٧	V	V
Cylinder High	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head		-	1	-	D	-	-	-	-
Command		0	0	1	1	0	1	0	0

Cor	nmand Bl	ock	Inpu	ıt Re	egis	ters			
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	ı	-	-	ı
Data High		-	-	-	-	ı	-	1	ı
Error				5	See E	Belo	w		
Soctor Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
Sector Number	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	HOB=1	٧	٧	٧	٧	٧	٧	٧	V
Cylinder Low	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	HOB=1	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	HOB=1	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head	-	-	-	-	-	-	-	-	
Status	See Below								

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	TON	AMN					
0	0	0	V	0	V	0	0					

	Status Register											
7	6	5	4	3	2	1	0					
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR					
0	V	0	V	-	0	-	V					

Table 215 Write Sector(s) Ext Command (34h)

The Write Sector(s) Ext command transfers one or more sectors from the host to the device, and then the data is written to the disk media.

The sectors are transferred through the Data Register 16 bits at a time.

If an uncorrectable error occurs, the write will be terminated at the failing sector.

Output Parameters To The Device

Sector Count Current The number of continuous sectors to be transferred low order, bits (7:0).

Sector Count Previous The number of continuous sectors to be transferred high order bits (15:8). If zero is

specified, then 65,536 sectors will be transferred.

Sector Number CurrentLBA (7:0).Sector Number PreviousLBA (31:24).Cylinder Low CurrentLBA (15:8).Cylinder Low PreviousLBA (39:32).Cylinder High CurrentLBA (23:16).Cylinder High PreviousLBA (47:40).

Input Parameters From The Device

Sector Number (HOB=0)

Sector Number (HOB=1)

Cylinder Low (HOB=0)

Cylinder Low (HOB=1)

Cylinder High (HOB=0)

Cylinder High (HOB=1)

LBA (7:0) of the address of the first unrecoverable error.

LBA (31:24) of the address of the first unrecoverable error.

LBA (39:32) of the address of the first unrecoverable error.

LBA (23:16) of the address of the first unrecoverable error.

LBA (47:40) of the address of the first unrecoverable error.

11.65 Write Stream DMA Ext (3Ah)

Com	mand Bloc	k Oı	ıtpu	t Re	gist	ers			
Register		7	6	5	4	თ	2	1	0
Data Low	ı	•	•	•	ı	•	•	•	
Data High			-	-	-	•	-	-	-
Contura	Current	٧	٧	٧	٧	-	٧	٧	٧
Feature	Previous	٧	٧	٧	٧	V	٧	٧	٧
Contar Count	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Count	Previous	V	٧	٧	٧	٧	٧	٧	٧
Sector Number	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Previous	٧	٧	٧	٧	V	٧	٧	٧
Culindan Laur	Current	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	Previous	V	٧	٧	٧	٧	٧	٧	٧
Culindar High	Current	V	٧	٧	٧	٧	٧	٧	٧
Cylinder High	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head			1	1	D	-	-	-	-
Command		0	0	1	1	1	0	1	0

Com	nmand Blo	ock	npu	t Re	gist	ers			
Register		7	6	5	4	3	2	1	0
Data Low		•	ı	•	1	1	•	•	ı
Data High		-	ı	-	ı	ı	-	-	ı
Error	See Below								
Sector Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
Sector Number	HOB=0	٧	٧	٧	V	٧	٧	٧	٧
Sector Number	HOB=1	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	HOB=0	٧	٧	٧	V	٧	٧	٧	٧
Cylinder Low	HOB=1	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	HOB=1	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head		-	-	-	-	-	-	-	-
Status				8	See E	3elov	w		

	Error Register										
7	7 6 5 4 3 2 1 0										
CRC	UNC	0	IDN	0	ABT	TON	ССТО				
V	0	0	V	0	V	0	V				

Status Register											
7	6	5	4	3	2	1	0				
BSY	RDY	SE	DWE	DRQ	COR	IDX	ERR				
0	V	V	0	-	0	-	V				

Table 216 Write Stream DMA Ext Command (3Ah)

The Write Stream DMA Ext command allows the host to write data using the DMA data transfer protocol. This command allows for the host to specify to the device that additional actions need to be performed prior to the completion of the command if the required bits are set.

If the Write Continuous bit is set to one, the device shall not stop execution of the command due to errors. If the WC bit is set to one and errors occur in the transfer or writing of the data, the device shall continue to transfer the amount of data requested and then provide ending status with the BSY bit cleared to zero, the SE bit set to one, the ERR bit cleared to zero, and the type of error, ICRC, IDNF, or ABRT, reported in the error log. If the WC bit is set to one and the Command Completion Time Limit expires, the device shall stop execution of the command and provide ending status with BSY bit cleared to zero, the SE bit set to one, the ERR bit cleared to zero, and report the fact that the Command Completion Time Limit expired by setting the CCTO bit in the error log to one, In all cases, the device shall attempt to transfer the amount of data requested within the Command Completion Time Limit event if some data transferred is in error.

Output Parameters To The Device

Feature Current

URG (bit7)

URG specifies an urgent transfer request. The Urgent bit specifies that the command should be completed in the minimum possible time by the device and shall be completed within the specified Command Completion Time Limit.

WC (bit6)

WC specifies Write Continuous mode enabled. If the Write Continuous bit is set to one, the device shall not stop execution of the command due to errors.

If the WC bit is set to one and errors occur in transfer or writing of the data, the device shall continue to transfer the amount of data requested and then provide ending status with BSY bit cleared to zero, the SE bit set to one, the ERR bit cleared to zero, and the type of error, ICRC, IDNF or ABRT reported in the error log.

If the WC bit is set to one and the Command Completion Time Limit expires, the device shall stop execution of the command and provide ending status with the BSY bit cleared to zero, the SE bit set to one, the ERR bit cleared to zero, and report the fact that the Command Completion Time Limit expired by setting the CCTO bit in the error log to

In all cases, the device shall attempt to transfer the amount of data requested within the Command Completion Time Limit even if some data transferred is in error.

F (bit5)

F specifies that all data for the specified stream shall be flushed to the media before command complete is reported when set to one.

HSE (bit4)

HSE (Handle Stream Error) specifies that this command starts at the LBA of the last reported error for this stream, so the device may attempt to continue its corresponding error recovery sequence where it left off earlier.

Stream ID (bit 0..2)

Stream ID specifies the stream being written. The device shall operate according to the Stream ID set by the Write Stream command.

Feature Previous CCTL (7:0)

The time allowed for the current command's completion is calculated as follows:

Command Completion Time Limit = (content of the Feature register Previous) * (Identify Device words (99:98)) useconds

If the value is zero, the device shall use the Default CCTL supplied with a previous Configure Stream command for this Stream ID. If the Default CCTL is zero, or no previous Configure Stream command was defined for this Stream ID, the device will ignore the CCTL. The time is measured from the write of the command register to the final INTRQ for command completion. The device has minimum CCTL value. When the specified value is shorter than the minimum value, CCTL is set to the minimum value. Actual minimum CCTL value is described in the "Deviations from Standard" section.

Sector Count Current

The number of continuous sectors to be transferred low order, bits (7:0)

Sector Count Previous

The number of continuous sectors to be transferred high order, bits (15:8). If zero is specified in the Sector Count register, then 65,536 sectors will be transferred.

Sector Number Current
Sector Number Previous
Cylinder Low Current
Cylinder Low Previous
Cylinder High Current
Cylinder High Previous
LBA (7:0).
LBA (31:24).
LBA (39:32).
LBA (23:16).
LBA (23:16).
LBA (47:40).

Input Parameters From The Device

Sector Number (HOB=0)

LBA (7:0) of the address of the first unrecoverable error.

LBA (31:24) of the address of the first unrecoverable error.

LBA (31:24) of the address of the first unrecoverable error.

LBA (15:8) of the address of the first unrecoverable error.

LBA (39:32) of the address of the first unrecoverable error.

LBA (23:16) of the address of the first unrecoverable error.

LBA (47:40) of the address of the first unrecoverable error.

CCTO (Error, bit 0)

CCTO bit shall be set to one if a Command Completion Time Limit Out error has

occurred.

11.66 Write Stream Ext (3Bh)

Con	nmand Blo	ck C	utp	ut R	egis	ters			
Register		7	6	5	4	3	2	1	0
Data Low		-	-	-	-	1	-	-	1
Data High		-	-	-	-	-	-	-	
Conture	Current	٧	٧	٧	٧	-	٧	٧	٧
Feature	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Sector Count	Current	٧	٧	٧	٧	V	٧	٧	٧
Sector Count	Previous	٧	٧	٧	٧	V	٧	٧	٧
Cooter Number	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Number	Previous	٧	٧	٧	٧	V	٧	٧	٧
Culin do a la cu	Current	٧	٧	٧	٧	V	٧	٧	٧
Cylinder Low	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Culin do a Himb	Current	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	Previous	٧	٧	٧	٧	٧	٧	٧	V
Device/Head		1	1	1	D	-	-	-	-
Command		0	0	1	1	1	0	1	1

Com	mand Blo	ck I	npu	t Re	giste	ers			
Register		7	6	5	4	3	2	1	0
Data Low		•	•	•	-	1	ı	•	ı
Data High		-	-	-	-	ı	ı	-	1
Error			8	See E	Belov	<i>N</i>			
Contar Count	HOB=0	-	-	-	-	-	-	-	-
Sector Count	HOB=1	-	-	-	-	-	-	-	-
Cootor Number	HOB=0	٧	٧	٧	٧	V	٧	٧	٧
Sector Number	HOB=1	٧	٧	٧	٧	V	V	٧	٧
Cylinder Ley	HOB=0	٧	٧	٧	٧	V	٧	٧	٧
Cylinder Low	HOB=1	٧	٧	٧	٧	V	V	٧	٧
Culindor High	HOB=0	٧	٧	٧	٧	V	V	٧	٧
Cylinder High	HOB=1	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head		-	-	-	-	-		-	1
StatusSee Below					·				

	Error Register											
7	6	5	4	3	2	1	0					
CRC	UNC	0	IDN	0	ABT	T0N	ССТО					
V	0	0	V	0	V	0	V					

Status Register											
7	6	5	4	3	2	1	0				
BSY	RDY	SE	DWE	DRQ	COR	IDX	ERR				
0	V	V	0	-	0	-	V				

Table 217 Write Stream Ext Command (3Bh)

This command writes from 1 to 65536 sectors as specified in the Sector Count register. A sector count of 0 requests 65536 sectors.

If the Write Continuous bit is set to one, the device shall not stop execution of the command due to errors. If the WC bit is set to one and errors occur in the transfer or writing of the data, the device shall continue to transfer the amount of data requested and then provide ending status with the BSY bit cleared to zero, the SE bit set to one, the ERR bit cleared to zero, and the type of error, IDNF, or ABRT, reported in the error log. If the WC bit is set to one and the Command Completion Time Limit expires, the device shall stop execution of the command and provide ending status with BSY bit cleared to zero, the SE bit set to one, the ERR bit cleared to zero, and report the fact that the Command Completion Time Limit expired by setting the CCTO bit in the error log to one, In all cases, the device shall attempt to transfer the amount of data requested within the Command Completion Time Limit event if some data transferred is in error.

Output Parameters To The Device

Feature Current

URG (bit7) URG specifies an urgent transfer request. The Urgent bit specifies that the command

should be completed in the minimum possible time by the device and shall be completed

within the specified Command Completion Time Limit.

WC (bit6) WC specifies Write Continuous mode enabled. If the Write Continuous bit is set to one,

the device shall not stop execution of the command due to errors.

If the WC bit is set to one and errors occur in transfer or writing of the data, the device shall continue to transfer the amount of data requested and then provide ending status with BSY bit cleared to zero, the SE bit set to one, the ERR bit cleared to zero, and the

type of error, IDNF or ABRT reported in the error log.

If the WC bit is set to one and the Command Completion Time Limit expires, the device shall stop execution of the command and provide ending status with the BSY bit cleared to zero, the SE bit set to one, the ERR bit cleared to zero, and report the fact that the Command Completion Time Limit expired by setting the CCTO bit in the error log to one. In all cases, the device shall attempt to transfer the amount of data requested within the Command Completion Time Limit even if some data transferred is in error.

F (bit5) F specifies that all data for the specified stream shall be flushed to the media before

command complete is reported when set to one.

HSE (bit4) HSE (Handle Stream Error) specifies that this command starts at the LBA of the last

reported error for this stream, so the device may attempt to continue its corresponding

error recovery sequence where it left off earlier.

Stream ID (bit 0..2) Stream ID specifies the stream being written. The device shall operate according to the

Stream ID set by the Write Stream command.

Feature Previous The time allowed for the current command's completion is calculated as follows:

Command Completion Time Limit = (content of the Feature register Previous) * (Identify

Device words (99:98)) useconds

If the value is zero, the device shall use the Default CCTL supplied with a previous Configure Stream command for this Stream ID. If the Default CCTL is zero, or no previous Configure Stream command was defined for this Stream ID, the device will ignore the CCTL. The time is measured from the write of the command register to the final INTRQ for command completion. The device has minimum CCTL value. When the specified value is shorter than the minimum value, CCTL is set to the minimum value. Actual minimum CCTL value is described in the "Deviations from Standard" section.

Sector Count Current The number of continuous sectors to be transferred low order, bits (7:0)

Sector Count Previous The number of continuous sectors to be transferred high order, bits (15:8). If zero is

specified in the Sector Count register, then 65,536 sectors will be transferred.

Sector Number Current LBA (7:0).

Sector Number Previous LBA (31:24).

Cylinder Low Current LBA (15:8).

Cylinder Low Previous LBA (39:32).

Cylinder High Current LBA (23:16).
Cylinder High Previous LBA (47:40).

Input Parameters From The Device

Sector Number (HOB=0) LBA (7:0) of the address of the first unrecoverable error.

Sector Number (HOB=1) LBA (31:24) of the address of the first unrecoverable error.

Cylinder Low (HOB=0) LBA (15:8) of the address of the first unrecoverable error.

Cylinder Low (HOB=1) LBA (39:32) of the address of the first unrecoverable error.

Cylinder High (HOB=0) LBA (23:16) of the address of the first unrecoverable error.

Cylinder High (HOB=1) LBA (47:40) of the address of the first unrecoverable error.

CCTO (Error, bit 0) CCTO bit shall be set to one if a Command Completion Time Limit Out error has occurred.

11.67 Write Uncorrectable Ext (45h)

Command Block Output Registers									
Register	7	6	5	4	3	2	1	0	
Data Low	-	-	-	-	-	-	-	-	
Data High			-	-	-	-	-	-	-
Feature	Current	٧	٧	٧	٧	٧	٧	٧	V
reature	Previous	-	-	-	-	-	-	-	-
Sactor Count	Current	٧	٧	٧	٧	٧	٧	٧	٧
Sector Count	Previous	٧	٧	٧	٧	٧	٧	٧	V
Sector Number	Current	٧	٧	٧	٧	٧	٧	٧	V
Sector Number	Previous	٧	٧	٧	٧	٧	٧	٧	V
Cylinder Lew	Current	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder Low	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Culinada a Ulimb	Current	٧	٧	٧	٧	٧	٧	٧	٧
Cylinder High	Previous	٧	٧	٧	٧	٧	٧	٧	٧
Device/Head			1	-	D	-	-	-	-
Command			1	0	0	0	1	0	1

Command Block Input Registers										
Register			6	5	4	3	2	1	0	
Data Low			-	-	-	-	-	-	-	
Data High			-	-	-	-	-	-	-	
Error			See Below							
Sector Count	HOB=0	-	-	-	-	-	-	-	-	
Sector Count	HOB=1	-	-	-	-	-	-	-	-	
0 1 1	HOB=0	٧	٧	٧	٧	V	V	٧	٧	
Sector Number	HOB=1	٧	٧	٧	٧	V	V	٧	٧	
Cylinder Lew	HOB=0	٧	٧	٧	٧	٧	٧	٧	٧	
Cylinder Low	HOB=1	٧	٧	٧	٧	V	٧	٧	٧	
Culin do a Llimb	HOB=0	٧	٧	٧	٧	V	٧	V	٧	
Cylinder High	HOB=1	٧	٧	٧	٧	V	٧	٧	٧	
Device/Head			-	-	-	-	-	-	-	
Status			See Below							

Error Register										
7	6	5	4	3	2	1	0			
CRC	UNC	0	IDN	0	ABT	TON	AMN			
0	0	0	V	0	V	0	0			

	Status Register										
7	6	5	4	3	2	1	0				
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR				
0	V	0	V	-	0	1	V				

Table 218 Write Uncorrectable Ext Command (45h)

The Write Uncorrectable Ext command is used to cause the device to report an uncorrectable error when the target sector is subsequently read.

When the Feature field contains a value of 55h the Write Uncorrectable Ext command shall cause the device to indicate a failure when reads to any of the sectors that are contained in physical block of specified sector are performed. These sectors are referred to as 'pseudo uncorrectable' sectors. In this case whenever a pseudo uncorrectable sector is accessed via a read command the drive shall perform normal error recovery to the fullest extent and then set the UNC and ERR bits to indicate the sector is bad.

When the Feature field(7:0) contains a value of AAh the Write uncorrectable ext command shall cause the device to flag the specified sector as 'flagged uncorrectable'. Flagging a logical sector as uncorrectable shall cause the device to indicate a failure when reads to the specified sector are performed. These sectors are referred to as 'flagged uncorrectable' sectors. In this case whenever a 'flagged uncorrectable' sector is accessed via a read command the device shall set the UNC and ERR bits to indicate the sector is bad.

If this command is sent to the device with the content of the Features field(7:0) set to anything other than what is defined above the device shall abort the command.

Commands that return UNC and ERR when a pseudo uncorrectable or flagged uncorrectable sector is read include: READ DMA, READ DMA EXT, READ MULTIPLE, READ MULTIPLE EXT, READ SECTOR(S), READ SECTOR(S) EXT, READ VERIFY SECTOR(S), READ, VERIFY SECTOR(S) EXT, READ STREAM EXT, READ STREAM DMA EXT. if the host writes to a 'pseudo uncorrectable' or 'flagged uncorrectable' sector, the drive shall attempt to write the data to the sector. The write shall clear the uncorrectable status of the sector and make the sector good if possible and the device shall verify that the sector may now be read without error. It is possible that an 'uncorrectable' sector location has actual physical errors. In this case read commands and/or write commands shall return ERR status information that is consistent with the error. The pseudo uncorrectable or flagged uncorrectable status of a sector shall remain through a power cycle. If the drive is unable to process a Write Uncorrectable EXT command for any reason the device shall abort the command.

Output Parameters To The Device

Feature Current Uncorrectable options

55h :Create a pseudo-uncorrectable error with logging

AAh :Created a flagged error without logging

Other value: Reserved

Sector Count Current The number of continuous sectors to be transferred low order, bits (7:0).

Sector Count Previous The number of continuous sectors to be transferred high order bits (15:8). If zero is

specified, then 65,536 sectors will be transferred.

Sector Number CurrentLBA (7:0).Sector Number PreviousLBA (31:24).Cylinder Low CurrentLBA (15:8).Cylinder Low PreviousLBA (39:32).Cylinder High CurrentLBA (23:16).Cylinder High PreviousLBA (47:40).

Input Parameters From The Device

Sector Number (HOB=0)

Sector Number (HOB=1)

Cylinder Low (HOB=1)

Cylinder Low (HOB=1)

Cylinder High (HOB=0)

Cylinder High (HOB=1)

LBA (7:0) of the address of the first unrecoverable error.

LBA (31:24) of the address of the first unrecoverable error.

LBA (39:32) of the address of the first unrecoverable error.

LBA (23:16) of the address of the first unrecoverable error.

LBA (47:40) of the address of the first unrecoverable error.